HIGH-VOLTAGE MIXED-SIGNAL IC

UC8179

All-in-one driver IC w/ Timing Controller for White/Black/Red Dot-Matrix Micro-Cup ESL

ES Specifications IC Version: c_C Datasheet Revision: 0.6 (for_TFT_Module_Use_Only) November 26, 2019



Table of Content

| INTRODUCTION | 3 |
|--|--|
| MAIN APPLICATIONS | 3 |
| FEATURE HIGHLIGHTS | 3 |
| BLOCK DIAGRAM | 4 |
| ORDERING INFORMATION | 5 |
| PIN DESCRIPTION | 6 |
| COMMAND TABLE | 8 |
| COMMAND DESCRIPTION | 12 |
| HOST INTERFACES | 40 |
| Power Management | 43 |
| OTP Address Mapping | 47 |
| TEMPERATURE RANGE | 48 |
| COMMAND DEFAULT SETTING | 50 |
| | |
| LUT FORMAT IN OTP | 51 |
| LUT FORMAT IN OTP DEEP SLEEP MODE | |
| | 52 |
| DEEP SLEEP MODE | 52 53 |
| DEEP SLEEP MODE | 52 53 54 |
| DEEP SLEEP MODEPANEL BREAK CHECK | 52 53 54 |
| DEEP SLEEP MODE PANEL BREAK CHECK CASCADE APPLICATION CIRCUIT BOOSTER APPLICATION CIRCUIT | 52 53 54 55 |
| DEEP SLEEP MODE | 5253545556 |
| DEEP SLEEP MODE | 525354555657 |
| DEEP SLEEP MODE | 52 53 54 55 56 57 58 |
| DEEP SLEEP MODE | |
| DEEP SLEEP MODE | |

All-in-one driver IC w/ Timing Controller

UC8179

All-in-one driver IC with Timing Controller for White/Black/Red Dot-Matrix Micro-Cup ESL

Introduction

The UC8179 is an all-in-one driver with timing controller for ESL. Its output is of 1-bit white/black and 1-bit red resolution per pixel. The timing controller provides control signals for source driver and gate driver.

The DC-DC controller allows it to generate the source output voltage VDH/VDL (±2.4V~±15.0V) and VDHR (2.4V~15.0V). The chip also includes an output buffer for the supply of the COM electrode (AC-VCOM or DC-VCOM). The system is configurable through a 3-wire/4-wire (SPI) serial interface.

MAIN APPLICATIONS

E-tag application

FEATURE HIGHLIGHTS

- System-on-chip (SOC) for ESL
- Timing controller supports several resolutions
 - Up to 800 source x 600 gate resolution + 1 border + 1 VCOM
 - 1 bit for white/black and 1 bit for red per pixel
- Cascade: 2 or more chips cascade mode
- Memory (Max.): 800 x 600 x 2 bits SRAM
- 3-wire/4-wire (SPI) serial interface
 - Clock rate up to 20MHz
- Temperature sensor:
 - On-Chip: $-25\sim50$ °C \pm 2.0°C / 8-bit status

- Off-Chip: -55~125°C ± 2.0°C /11-bit status (I²C/LM75)
- Support LPD, Low Power Detection
 - VDD < 2.5V or 2.4V or 2.3V or 2.2V (by setting)
- OSC / PLL: On-chip RC oscillator
- VCOM:
 - AC-VCOM / DC-VCOM (by LUT)
 - Support VCOM sensing (7-bit digital status)
- Charge Pump: On-chip booster and regulator:
 - VGH: +9V~+12V, +17V~+20V (programmable)
 - VGL: -9V~-12V, -17V~-20V (programmable)
 - VDH: +2.4 ~ +15.0V (programmable, black/white)
 - VDL: -2.4 ~ -15.0V (programmable, black/white)
 - VDHR: +2.4 ~ +15.0V (programmable, red)
- Supply voltage: 2.3~ 3.6V
- OTP: 6K-byte OTP for LUTs and Settings
- Package: COG
- Source/Gate bump information

Bump pitch: 13 μM


- Bump space: $1 \mu M \pm 3 \mu M$

Bump surface: 1200 μM²

Remark: The inspection standard of the product appearance is based on Ultrachip's inspection document.

All-in-one driver IC w/ Timing Controller

BLOCK DIAGRAM

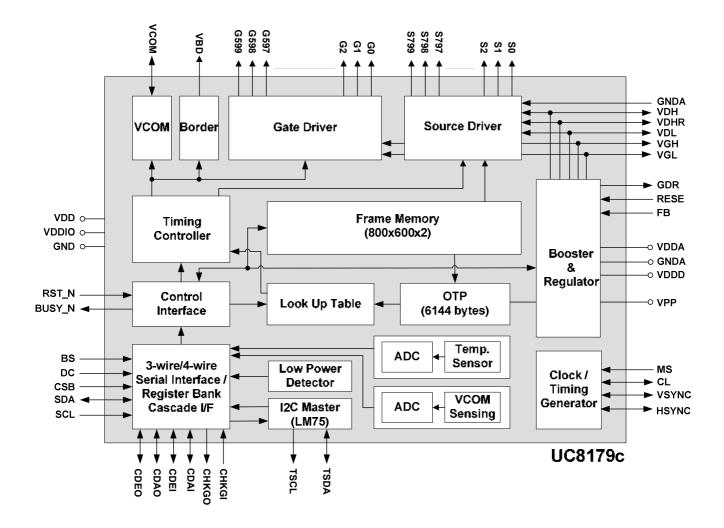

All-in-one driver IC w/ Timing Controller

ORDERING INFORMATION

| Part Number | Description |
|-------------------|--|
| UC8179cGAC-U0X3-3 | IC thickness: 300uM, with 3" double-faced tray |
| UC8179cGAC-U0X3-4 | IC thickness: 300uM, with 4" double-faced tray |

General Notes

APPLICATION INFORMATION

For improved readability, the specification contains many application data points. When application information is given, it is advisory and does not form part of the specification for the device.

BARE DIE DISCLAIMER

All die are tested and are guaranteed to comply with all data sheet limits up to the point of wafer sawing. There is no post waffle saw/pack testing performed on individual die. Although the latest modern processes are utilized for wafer sawing and die pick-&-place into waffle pack carriers, UltraChip has no control of third party procedures in the handling, packing or assembly of the die. Accordingly, it is the responsibility of the customer to test and qualify their application in which the die is to be used. UltraChip assumes no liability for device functionality or performance of the die or systems after handling, packing or assembly of the die.

LIFE SUPPORT APPLICATIONS

These devices are not designed for use in life support appliances, or systems where malfunction of these products can reasonably be expected to result in personal injuries. Customer using or selling these products for use in such applications do so at their own risk.

CONTENT DISCLAIMER

UltraChip believes the information contained in this document to be accurate and reliable. However, it is subject to change without notice. No responsibility is assumed by UltraChip for its use, nor for infringement of patents or other rights of third parties. No part of this publication may be reproduced, or transmitted in any form or by any means without the prior consent of UltraChip Inc. UltraChip's terms and conditions of sale apply at all times.

CONTACT DETAILS

UltraChip Inc. (Headquarter) 4F, No. 618, Recom Road, Neihu District, Taipei 114, Taiwan, R. O. C. Tel: +886 (2) 8797-8947 Fax: +886 (2) 8797-8910 Sales e-mail: sales@ultrachip.com Web site: http://www.ultrachip.com

All-in-one driver IC w/ Timing Controller

PIN DESCRIPTION

Type: I: Input, O: Output, I/O: Input/Output, PWR: Power, C: Capacitor pin

| Pin (Pad) Name | Pin Count | Туре | Description |
|----------------|-----------|----------------|--|
| | | | Power Supply Pins |
| VDD | 10 | PWR | Digital power |
| VDDA | 13 | PWR | Analog power |
| VDDIO | 18 | PWR | IO power |
| VDDDO | 8 | PWR | Digital power output (1.8V) |
| VDDD (VDDDI) | 8 | PWR | Digital power input (1.8V) |
| VPP | 10 | PWR | OTP program power (7.75V) |
| VDM | 8 | PWR | Analog Ground. |
| GND | 19 | PWR | Digital Ground. |
| GNDA | 15 | PWR | Analog Ground |
| | | | LDO Pins |
| VDH | 12 | I/O | Positive source driver Voltage (+2.4V ~ +15V) |
| VDHR | 16 | I/O | Positive source driver voltage for Red (+2.4V ~ +15V) |
| VDL | 12 | I/O | Negative source driver voltage (-2.4V ~ -15V) |
| | | C | CONTROL INTERFACE PINS |
| | | | Bus Selection. Select 3-wire / 4-wire SPI interface |
| BS | 2 | I | L: 4-wire interface. H: 3-wire interface. |
| | | | Global reset pin. Low: active. |
| RST_N | 2 | l (Pull-up) | When RST_N becomes low, driver will reset. All register will reset to default value. Driver all function will disable. |
| | | (i dii dp) | Source/Gate/Border/VCOM will be released to floating. The minimal width of RST_N=low is 50us. |
| | | | Cascade setting pin. |
| MS | 2 | 1 | L: Slave chip. H: Master chip. |
| | | | Clock input/output pin. |
| CL | 2 | I/O | Master: Clock output. Slave: Clock input. |
| CDEI | 2 | I/O | Cascade signal pin. Leave it open if not used. |
| CDEO | 2 | I/O | Cascade signal pin. Leave it open if not used. |
| CDAI | 2 | I/O | Cascade data pin. Leave it open if not used. |
| CDAO | 2 | I/O | Cascade data pin. Leave it open if not used. |
| MM | 2 | I | Cascade setting pin. Leave it open if not used. |
| LSYNC | 2 | I/O | Cascade sync pin. Leave it open if not used. |
| M1M2_SYNC | 2 | I/O | Cascade sync pin. Leave it open if not used. |
| M2M1_SYNC | 2 | I/O | Cascade sync pin. Leave it open if not used. |
| | | | Driver busy flag. |
| BUSY_N | 2 | 0 | L: Driver is Busy. H: Host side can send command/data to driver. |

All-in-one driver IC w/ Timing Controller

| Pin (Pad) Name | Pin Count | Туре | Description |
|------------------|-----------|------------------|--|
| | | MC | U INTERFACE (SPI) PINS |
| CSB | 2 | 1 | Serial communication chip select. |
| SDA | 2 | I/O | Serial communication data input/output |
| SDA1 | 2 | 1 | Serial communication data input for dual mode. |
| SDAT | 2 | ı | Leave open if single SPI mode is used. |
| SCL | 2 | I | Serial communication clock input. |
| | | | Command/Data input. |
| DC | 2 | 1 | L: command H: data |
| | | | Connect to GND if BS=High. |
| | | | I ² C Interface |
| TSCL | 2 | 0 | I ² C clock (External pull-up resistor is necessary.) |
| 1002 | | (open-drain) | Leave them open if not used. |
| TSDA | 2 | I/O | I ² C data (External pull-up resistor is necessary.) |
| TODA | | (open-drain) | Leave them open if not used. |
| | , | | OUTPUT PINS |
| S0~S799 | 800 | 0 | Source driver output signals. |
| (S<0>~S<799>) | 000 | | |
| G0~G599 | 600 | 0 | Gate driver output signals. |
| (G<0>~G<599>) | 000 | | |
| VCOM | 32 | 0 | VCOM output. |
| VBD | | 0 | Border output pins. |
| (VBD<0>, VBD<1>) | 1, 1 | | |
| | T | | BOOSTER PINS |
| GDR | 14 | 0 | N-MOS gate control |
| RESE | 4 | I | Current sense input for control loop. |
| FB | 2 | Р | (Keep Open.) |
| VGH | 14 | I/O | Positive Gate voltage. |
| VGL | 14 | I/O | Negative Gate voltage. |
| | T | C | CHECK PANEL PINS |
| CHKGI | 2 | l (Pull-down) | Check panel break input. Leave open if it is not used. |
| CHKGO | 2 | 0 | Check panel break output. Leave open if it is not used. |
| | | | RESERVED PINS |
| VSYNC | 2 | 0 | Reserved pins. Leave it floating. |
| HSYNC | 2 | 0 | Reserved pins. Leave it floating. |
| TEST1~TEST3 | 2x3 | 1 | Reserved pins. Leave it floating |
| TEST4~TEST7 | 2x4 | 0 | Reserved pins. Leave it floating. |
| TEST8~TEST13 | 2x6 | ļ | Reserved pins. Leave it floating. |
| DUMMY | 108 | - | Reserved pins. Leave it floating. |
| GD<0>~GD<3> | 1x4 | | Reserved pins. Leave it floating. |

All-in-one driver IC w/ Timing Controller

COMMAND TABLE

| # | Command | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | Registers | Default |
|----|------------------------------------|-----|-----|----|----|----|----|----|----|----|----|-------------------------------------|-----------------|
| | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | 00н |
| 1 | Panel Setting (PSR) | 0 | 1 | | | # | # | # | # | # | # | REG, KW/R, UD, SHL, SHD_N, RST_N | 0FH |
| | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | | 01н |
| | | 0 | 1 | | | | # | | # | # | # | BD_EN, VSR_EN, VS_EN, VG_EN | 07н |
| 2 | Power Setting (PWR) | 0 | 1 | | | | # | | # | # | # | VCOM_SLEW, VG_LVL[2:0] | 17H |
| | rower Setting (rwk) | 0 | 1 | | | # | # | # | # | # | # | VDH_LVL[5:0] | ЗАн |
| | | 0 | 1 | | | # | # | # | # | # | # | VDL_LVL[5:0] | ЗАн |
| | | 0 | 1 | | | # | # | # | # | # | # | VDHR_LVL[5:0] | 03н |
| 3 | Power OFF (POF) | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | | 02 н |
| 4 | Power OFF Sequence Setting | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | | 03н |
| | (PFS) | 0 | 1 | | | # | # | | | | | T_VDS_OFF[1:0] | 00н |
| 5 | Power ON (PON) | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | | 04 н |
| 6 | Power ON Measure (PMES) | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | | 05 н |
| | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | | 06н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | BT_PHA[7:0] | 17н |
| 7 | Booster Soft Start (BTST) | 0 | 1 | # | # | # | # | # | # | # | # | BT_PHB[7:0] | 17H |
| | | 0 | 1 | | | # | # | # | # | # | # | BT_PHC1[5:0] | 17 _H |
| | | 0 | 1 | # | - | # | # | # | # | # | # | PHC2_EN, BT_PHC2[5:0] | 17H |
| 8 | Deep sleep (DSLP) | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | | 07н |
| Ů | 2006 (202.) | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | Check code | А5н |
| | Display Start Transmission 1 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | K/W or OLD Pixel Data (800x600): | 10 H |
| 9 | (DTM1, White/Black Data) | 0 | 1 | # | # | # | # | # | # | # | # | KPXL[1:8] | - |
| Ĭ | (x-byte command) | 0 | 1 | : | : | : | : | : | : | : | : | : | : |
| | , | 0 | 1 | # | # | # | # | # | # | # | # | KPXL[n-7:n] | - |
| 10 | Data Stop (DSP) | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | | 11н |
| | | 1 | 1 | # | | | | | | | | | 00н |
| 11 | Display Refresh (DRF) | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | | 12 H |
| | Display Start transmission 2 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 1 | Red or NEW Pixel Data (800x600): | 13н |
| 12 | (DTM2, Red Data) | 0 | 1 | # | # | # | # | # | # | # | # | RPXL[1:8] | - |
| | (x-byte command) | 0 | 1 | : | : | : | : | : | : | : | : | : | : |
| | | 0 | 1 | # | # | # | # | # | # | # | # | RPXL[n-7:n] | - |
| 13 | Dual SPI | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | | 15 H |
| | | 1 | 1 | | | # | # | | | | | MM_EN, DUSPI_EN | 00н |
| 14 | Auto Sequence (AUTO) | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 1 | | 17н |
| | | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | Check code | А5н |
| | | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | | 20н |
| | VCOM LUT (LUTC) | 0 | 1 | # | # | # | # | # | # | # | # | Level select-0~3[1:0] | - |
| | (61-byte command, | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-0[7:0] | - |
| 15 | structure of bytes 2~7 repeated 10 | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-1[7:0] | - |
| | times) | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-2[7:0] | - |
| | | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-3[7:0] | - |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Times to repeat[7:0] | - |

All-in-one driver IC w/ Timing Controller

| # | Command | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | Registers | Default |
|-----|--|-----|-----|----|----|----|----|----|----|----|----|-------------------------|-------------|
| | | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | | 21н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Level select-0~3[1:0] | - |
| | W2W LUT (LUTWW) | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-0[7:0] | - |
| 16 | (43-byte command, | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-1[7:0] | - |
| | structure of bytes 2~7 repeated 7 times) | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-2[7:0] | - |
| | umosy | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-3[7:0] | - |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Times to repeat[7:0] | - |
| | | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | | 22 H |
| | IKOM LUT (LUTIAN (LUTE) | 0 | 1 | # | # | # | # | # | # | # | # | Level select-0~3[1:0] | - |
| | K2W LUT (LUTKW / LUTR) | 0 | 1 | : | | | | : | : | : | : | Number of frames-0[7:0] | - |
| 17 | (61-byte command, | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-1[7:0] | - |
| | structure of bytes 2~7 repeated 10 times) | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-2[7:0] | - |
| | | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-3[7:0] | - |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Times to repeat[7:0] | - |
| | | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | | 23 H |
| | MOLELLIT (LUTANE (LUTAN) | 0 | 1 | # | # | # | # | # | # | # | # | Level select-0~3[1:0] | - |
| | W2K LUT (LUTWK / LUTW) | 0 | 1 | : | | | | : | : | : | : | Number of frames-0[7:0] | - |
| 18 | (61-byte command, | 0 | 1 | : | ** | ** | ** | : | : | : | : | Number of frames-1[7:0] | - |
| | structure of bytes 2~7 repeated 10 times) | 0 | 1 | : | ** | ** | ** | : | : | : | : | Number of frames-2[7:0] | - |
| | | 0 | 1 | : | ** | ** | ** | : | : | : | : | Number of frames-3[7:0] | - |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Times to repeat[7:0] | - |
| | | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | | 24н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Level select-0~3[1:0] | - |
| | K2K LUT (LUTKK / LUTK) | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-0[7:0] | - |
| 19 | (61-byte command, | 0 | 1 | : | :: | :: | : | : | : | : | : | Number of frames-1[7:0] | - |
| | structure of bytes 2~7 repeated 10 times) | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-2[7:0] | - |
| | umosy | 0 | 1 | : | :: | :: | : | : | : | : | : | Number of frames-3[7:0] | - |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Times to repeat[7:0] | - |
| | | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | | 25 H |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Level select-0~3[1:0] | - |
| | Border LUT | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-0[7:0] | - |
| 20 | (43-byte command, structure of bytes 2~7 repeated 7 | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-1[7:0] | - |
| | times) | 0 | 1 | : | : | : | : | : | : | : | : | Number of frames-2[7:0] | - |
| | | 0 | 1 | :: | : | : | | : | : | : | : | Number of frames-3[7:0] | - |
| | | 0 | 1 | # | # | # | # | # | # | # | # | Times to repeat[7:0] | - |
| | | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 0 | | 2A H |
| 21 | LUT option (LUTOPT) | 0 | 1 | # | # | | | | | | | STATE_XON[9:8] | 00н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | STATE_XON[7:0] | 00н |
| | | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | | 2Вн |
| 22 | KW LUT option (KWOPT) | 0 | 1 | | | | | | | # | # | ATRED, NORED | 00н |
| ~ ~ | (KWOFI) | 0 | 1 | # | # | | | | | | | KWE[9:8] | 00н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | KWE[7:0] | 00н |
| 23 | PLL control (PLL) | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | | 30 H |
| 23 | r LL control (i LL) | 0 | 1 | | 1 | | - | # | # | # | # | FRS[3:0] | 06н |
| | Tomporeture Conser Collins | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | | 40 H |
| 24 | Temperature Sensor Calibration (TSC) | 1 | 1 | # | # | # | # | # | # | # | # | D[10:3] / TS[7:0] | 00н |
| | () | 1 | 1 | # | # | # | - | | | | | D[2:0] / - | 00н |
| 25 | Temperature Sensor Selection | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | | 41н |
| 23 | (TSE) | 0 | 1 | # | | | | # | # | # | # | TSE,TO[3:0] | 00н |

All-in-one driver IC w/ Timing Controller

| # | Command | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | Registers | Default |
|----|------------------------------------|-----|-----|-----------|----|----|----|----|----|----|----|--|-------------|
| | | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | | 42 H |
| 00 | T | 0 | 1 | # | # | # | # | # | # | # | # | WATTR[7:0] | 00н |
| 26 | Temperature Sensor Write (TSW) | 0 | 1 | # | # | # | # | # | # | # | # | WMSB[7:0] | 00н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | WLSB[7:0] | 00н |
| | | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | | 43н |
| 27 | Temperature Sensor Read (TSR) | 1 | 1 | # | # | # | # | # | # | # | # | RMSB[7:0] | 00н |
| | , | 1 | 1 | # | # | # | # | # | # | # | # | RLSB[7:0] | 00н |
| | | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | | 44н |
| 28 | Panel Break Check (PBC) | 1 | 1 | | | | | | | | # | PSTA | 00н |
| | | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | | 50 H |
| 29 | VCOM and data interval setting | 0 | 1 | # | | # | # | | | # | # | BDZ, BDV[1:0], DDX[1:0] | 31н |
| | (CDI) | 0 | 1 | | | | | # | # | # | # | CDI[3:0] | 07H |
| | | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 1 | | 51н |
| 30 | Lower Power Detection (LPD) | 1 | 1 | | | | | | | | # | LPD | 01н |
| | - 11/1 1/2 0 ml (F1/0) | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 1 | 0 | | 52 H |
| 31 | End Voltage Setting (EVS) | 0 | 1 | | | | | # | | # | # | VCEND, BDEND[1:0] | 02н |
| | | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 0 | | 60н |
| 32 | TCON setting (TCON) | 0 | 1 | # | # | # | # | # | # | # | # | S2G[3:0], G2S[3:0] | 22н |
| | | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 1 | | 61н |
| | | 0 | 1 | | | | | | | # | # | HRES[9:8] | 03н |
| 33 | Resolution setting (TRES) | 0 | 1 | # | # | # | # | # | 0 | 0 | 0 | HRES[7:3] | 20н |
| | | 0 | 1 | | | | | | | # | # | VDE010 01 | 02н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | VRES[9:0] | 58н |
| | | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 0 | 1 | | 65н |
| | | 0 | 1 | | | | | | | # | # | HST[9:8] | 00н |
| 34 | Gate/Source Start setting (GSST) | 0 | 1 | # | # | # | # | # | 0 | 0 | 0 | HST[7:3] | 00н |
| | | 0 | 1 | | | | | | | # | # | VCTIO-OI | 00н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | VST[9:0] | 00н |
| | | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 0 | | 70 H |
| | | 1 | 1 | # | # | # | # | # | # | # | # | PROD_REV[23:16] | FFH |
| | | 1 | 1 | # | # | # | # | # | # | # | # | PROD_REV[15:8] | FFH |
| 05 | Davisias (DEV) | 1 | 1 | # | # | # | # | # | # | # | # | PROD_REV[7:0] | FFH |
| 35 | Revision (REV) | 1 | 1 | # | # | # | # | # | # | # | # | LUT_REV[23:16] | FFH |
| | | 1 | 1 | # | # | # | # | # | # | # | # | LUT_REV[15:8] | FFH |
| | | 1 | 1 | # | # | # | # | # | # | # | # | LUT_REV[7:0] | FFH |
| | | 1 | 1 | # | # | # | # | # | # | # | # | CHIP_REV[7:0] | 0Сн |
| | | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 1 | | 71н |
| 36 | Get Status (FLG) | 1 | 1 | | # | # | # | # | # | # | # | PTL_FLAG ,I ² C_ERR, I ² C_BUSYN, DATA_FLAG, PON, POF, BUSY_N | 13н |
| 37 | Auto Measurement VCOM (AMV) | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | 80н |
| 31 | Auto ivieasurement v COIVI (AIVIV) | 0 | 1 | | | # | # | # | # | # | # | AMVT[1:0], XON,AMVS, AMV, AMVE | 10н |
| 20 | Pood VCOM Value (VA) | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | | 81н |
| 38 | Read VCOM Value (VV) | 1 | 1 | | # | # | # | # | # | # | # | VV[6:0] | 00н |
| 39 | VCOM DC Sotting (VDCS) | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | | 82 H |
| 39 | VCOM_DC Setting (VDCS) | 0 | 1 | - | # | # | # | # | # | # | # | VDCS[6:0] | 00н |

All-in-one driver IC w/ Timing Controller

| # | Command | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | Registers | Default |
|----|-------------------------------|-----|-----|----|----|----|----|----|----|----|----|------------------------|-------------|
| | | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | | 90 H |
| | | 0 | 1 | - | - | | | | | # | # | HRST[9:8] | 00н |
| | | 0 | 1 | # | # | # | # | # | 0 | 0 | 0 | HRST[7:3] | 00н |
| | | 0 | 1 | | | - | - | | | # | # | HRED[9:8] | 03н |
| 40 | Partial Window (PTL) | 0 | 1 | # | # | # | # | # | 1 | 1 | 1 | HRED[7:3] | 1FH |
| 40 | Faitiai Willdow (FTL) | 0 | 1 | | | - | ŀ | | | # | # | VRST[9:0] | 00н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | VK31[9.0] | 00н |
| | | 0 | 1 | | | - | ŀ | | | # | # | \/DED[8:0] | 02н |
| | | 0 | 1 | # | # | # | # | # | # | # | # | VRED[8:0] | 57н |
| | | 0 | 1 | | - | | | | | | # | PT_SCAN | 01н |
| 41 | Partial In (PTIN) | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | | 91 H |
| 42 | Partial Out (PTOUT) | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | | 92 H |
| 43 | Program Mode (PGM) | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | | А0н |
| 44 | Active Programming (APG) | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | | А1н |
| | | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | | А2н |
| 45 | Read OTP (ROTP) | 1 | 1 | # | # | # | # | # | # | # | # | Data of Address = 000h | N/A |
| 45 | Read OTP (ROTP) | 1 | 1 | : | : | : | : | : | : | : | : | : | N/A |
| | | 1 | 1 | # | # | # | # | # | # | # | # | Data of Address = n | N/A |
| 46 | Casada Satting (CCSET) | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 0 | 0 | | Е0н |
| 40 | Cascade Setting (CCSET) | 0 | 1 | | | | | | | # | # | TSFIX, CCEN | 00н |
| 47 | Davier Cavina (DMC) | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 1 | 1 | | Е3н |
| 47 | Power Saving (PWS) | 0 | 1 | # | # | # | # | # | # | # | # | VCOM_W[3:0], SD_W[3:0] | 00н |
| 40 | LVD Valtage Calast (LVCEL) | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 1 | 0 | 0 | | Е4н |
| 48 | LVD Voltage Select (LVSEL) | 0 | 1 | | | | | | | # | # | LVD_SEL[1:0] | 03н |
| 40 | | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 1 | 0 | 1 | | Е5н |
| 49 | Force Temperature (TSSET) | 0 | 1 | # | # | # | # | # | # | # | # | TS_SET[7:0] | 00н |
| 50 | Temperature Boundary Phase-C2 | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 1 | 1 | 1 | | Е7н |
| 50 | (TSBDRY) | 0 | 1 | # | # | # | # | # | # | # | # | TSBDRY_PHC2[7:0] | 00н |

Note: (1) All other register addresses are invalid or reserved by UltraChip, and should NOT be used.

- (2) Any bits shown here as 0 must be written with a 0. All unused bits should also be set to zero. Device malfunction may occur if this is not done.
- (3) Commands are processed on the 'stop' condition of the interface.
- (4) Registers marked 'W/R' can be read, but the contents are written when the SPI command completes so the contents can be read and altered. The user can subsequently write the register to restore the contents following an SPI read.

All-in-one driver IC w/ Timing Controller

COMMAND DESCRIPTION

W/R: 0: Write Cycle / 1: Read Cycle C/D: 0: Command / 1: Data D7-D0: -: Don't Care

(1) PANEL SETTING (PSR) (REGISTER: R00H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-------------------|-----|-----|----|----|-----|------|----|-----|-------|-------|-----|
| Cotting the popul | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 00H |
| Setting the panel | 0 | 1 | - | - | REG | KW/R | UD | SHL | SHD_N | RST_N | 0Fr |

REG: LUT selection

0: LUT from OTP. (Default)

1: LUT from register.

KW/R: Black / White / Red

0: Pixel with Black/White/Red, KWR mode. (Default)

1: Pixel with Black/White, KW mode.

UD: Gate Scan Direction

0: Scan down. First line to Last line: $Gn-1 \rightarrow Gn-2 \rightarrow Gn-3 \rightarrow ... \rightarrow G0$ 1: Scan up. (Default) First line to Last line: $G0 \rightarrow G1 \rightarrow G2 \rightarrow ... \rightarrow Gn-1$

SHL: Source Shift Direction

0: Shift left. First data to Last data: $Sn-1 \rightarrow Sn-2 \rightarrow Sn-3 \rightarrow ... \rightarrow S0$ 1: Shift right. (Default) First data to Last data: $Sn-1 \rightarrow Sn-2 \rightarrow Sn-3 \rightarrow ... \rightarrow Sn-1$

SHD_N: Booster Switch

0: Booster OFF

1: Booster ON (Default)

When SHD_N becomes LOW, charge pump will be turned OFF, register and SRAM data will keep until VDD OFF. And Source/Gate/Border/VCOM will be released to floating.

RST_N: Soft Reset

0: Reset. Booster OFF, Register data are set to their default values, all drivers will be reset, and all functions will be disabled. Source/Gate/Border/VCOM will be released to floating.

1: No effect (Default).

All-in-one driver IC w/ Timing Controller

(2) POWER SETTING (PWR) (R01H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------------------------|-----|-----|----|----|----|---------------|-------|----------|------------|-------|-----|
| | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 01н |
| | 0 | 1 | - | - | - | BD_EN | - | VSR_EN | VS_EN | VG_EN | 07н |
| Selecting Internal/External Power | 0 | 1 | 1 | - | , | VCOM _SLEW | - | V | /G_LVL[2:0 | 0] | 17н |
| Powei | 0 | 1 | - | - | | | VDH_L | .VL[5:0] | | | ЗАн |
| | 0 | 1 | - | • | | | VDL_L | VL[5:0] | | | ЗАн |
| | 0 | 1 | - | - | | | VDHR_ | LVL[5:0] | | | 03н |

BD_EN: Border LDO enable

0 : Border LDO disable (Default)

Border level selection: 00b: VCOM 10b: VDL 01b: VDH 11b: VDHR

1: Border LDO enable

Border level selection: 00b: VCOM 01b: VBH(VCOM-VDL) 10b:VBL(VCOM-VDH) 11b: VDHR

VSR_EN: Source LV power selection

0 : External source power from VDHR pins

1 : Internal DC/DC function for generating VDHR. (Default)

VS_EN: Source power selection

0 : External source power from VDH/VDL pins
1 : Internal DC/DC function for generating VDH/VDL. (Default)

VG_EN: Gate power selection

0 : External gate power from VGH/VGL pins

1 : Internal DC/DC function for generating VGH/VGL. (Default)

VCOM_SLEW: VCOM slew rate selection for voltage transition. The value is fixed at "1".

VG_LVL[2:0]: VGH / VGL Voltage Level selection.

| VG_LVL[2:0] | VGH/VGL Voltage Level |
|---------------|-----------------------|
| 000 | VGH=9V, VGL= -9V |
| 001 | VGH=10V, VGL= -10V |
| 010 | VGH=11V, VGL= -11V |
| 011 | VGH=12V, VGL= -12V |
| 100 | VGH=17V, VGL= -17V |
| 101 | VGH=18V, VGL= -18V |
| 110 | VGH=19V, VGL= -19V |
| 111 (Default) | VGH=20V, VGL= -20V |

All-in-one driver IC w/ Timing Controller

VDH_LVL[5:0]: Internal VDH power selection for K/W pixel.(Default value: 111010b)

| | | | - , | , | | | |
|---------|---------|---------|---------|---------|---------|---------|---------|
| VDH_LVL | Voltage | VDH_LVL | Voltage | VDH_LVL | Voltage | VDH_LVL | Voltage |
| 000000 | 2.4 V | 010001 | 5.8 V | 100010 | 9.2 V | 110011 | 12.6 V |
| 000001 | 2.6 V | 010010 | 6.0 V | 100011 | 9.4 V | 110100 | 12.8 V |
| 000010 | 2.8 V | 010011 | 6.2 V | 100100 | 9.6 V | 110101 | 13.0 V |
| 000011 | 3.0 V | 010100 | 6.4 V | 100101 | 9.8 V | 110110 | 13.2 V |
| 000100 | 3.2 V | 010101 | 6.6 V | 100110 | 10.0 V | 110111 | 13.4 V |
| 000101 | 3.4 V | 010110 | 6.8 V | 100111 | 10.2 V | 111000 | 13.6 V |
| 000110 | 3.6 V | 010111 | 7.0 V | 101000 | 10.4 V | 111001 | 13.8 V |
| 000111 | 3.8 V | 011000 | 7.2 V | 101001 | 10.6 V | 111010 | 14.0 V |
| 001000 | 4.0 V | 011001 | 7.4 V | 101010 | 10.8 V | 111011 | 14.2 V |
| 001001 | 4.2 V | 011010 | 7.6 V | 101011 | 11.0 V | 111100 | 14.4 V |
| 001010 | 4.4 V | 011011 | 7.8 V | 101100 | 11.2 V | 111101 | 14.6 V |
| 001011 | 4.6 V | 011100 | 8.0 V | 101101 | 11.4 V | 111110 | 14.8 V |
| 001100 | 4.8 V | 011101 | 8.2 V | 101110 | 11.6 V | 111111 | 15.0 V |
| 001101 | 5.0 V | 011110 | 8.4 V | 101111 | 11.8 V | | |
| 001110 | 5.2 V | 011111 | 8.6 V | 110000 | 12.0 V | | |
| 001111 | 5.4 V | 100000 | 8.8 V | 110001 | 12.2 V | | |
| 010000 | 5.6 V | 100001 | 9.0 V | 110010 | 12.4 V | | _ |

VDL_LVL[5:0]: Internal VDL power selection for K/W pixel. (Default value: 111010b)

| VDL LVL | Voltage |
|---------|---------|---------|---------|---------|---------|---------|---------|
| 000000 | -2.4 V | 010001 | -5.8 V | 100010 | -9.2 V | 110011 | -12.6 V |
| 000001 | -2.6 V | 010010 | -6.0 V | 100011 | -9.4 V | 110100 | -12.8 V |
| 000010 | -2.8 V | 010011 | -6.2 V | 100100 | -9.6 V | 110101 | -13.0 V |
| 000011 | -3.0 V | 010100 | -6.4 V | 100101 | -9.8 V | 110110 | -13.2 V |
| 000100 | -3.2 V | 010101 | -6.6 V | 100110 | -10.0 V | 110111 | -13.4 V |
| 000101 | -3.4 V | 010110 | -6.8 V | 100111 | -10.2 V | 111000 | -13.6 V |
| 000110 | -3.6 V | 010111 | -7.0 V | 101000 | -10.4 V | 111001 | -13.8 V |
| 000111 | -3.8 V | 011000 | -7.2 V | 101001 | -10.6 V | 111010 | -14.0 V |
| 001000 | -4.0 V | 011001 | -7.4 V | 101010 | -10.8 V | 111011 | -14.2 V |
| 001001 | -4.2 V | 011010 | -7.6 V | 101011 | -11.0 V | 111100 | -14.4 V |
| 001010 | -4.4 V | 011011 | -7.8 V | 101100 | -11.2 V | 111101 | -14.6 V |
| 001011 | -4.6 V | 011100 | -8.0 V | 101101 | -11.4 V | 111110 | -14.8 V |
| 001100 | -4.8 V | 011101 | -8.2 V | 101110 | -11.6 V | 111111 | -15.0 V |
| 001101 | -5.0 V | 011110 | -8.4 V | 101111 | -11.8 V | | |
| 001110 | -5.2 V | 011111 | -8.6 V | 110000 | -12.0 V | | |
| 001111 | -5.4 V | 100000 | -8.8 V | 110001 | -12.2 V | | |
| 010000 | -5.6 V | 100001 | -9.0 V | 110010 | -12.4 V | | |

VDHR_LVL[5:0]: Internal VDHR power selection for Red pixel. (Default value: 000011b)

| VDHR_LVL | Voltage | VDHR_LVL | Voltage | VDHR_LVL | Voltage | VDHR_LVL | Voltage |
|----------|---------|----------|---------|----------|---------|----------|---------|
| 000000 | 2.4 V | 010001 | 5.8 V | 100010 | 9.2 V | 110011 | 12.6 V |
| 000001 | 2.6 V | 010010 | 6.0 V | 100011 | 9.4 V | 110100 | 12.8 V |
| 000010 | 2.8 V | 010011 | 6.2 V | 100100 | 9.6 V | 110101 | 13.0 V |
| 000011 | 3.0 V | 010100 | 6.4 V | 100101 | 9.8 V | 110110 | 13.2 V |
| 000100 | 3.2 V | 010101 | 6.6 V | 100110 | 10.0 V | 110111 | 13.4 V |
| 000101 | 3.4 V | 010110 | 6.8 V | 100111 | 10.2 V | 111000 | 13.6 V |
| 000110 | 3.6 V | 010111 | 7.0 V | 101000 | 10.4 V | 111001 | 13.8 V |
| 000111 | 3.8 V | 011000 | 7.2 V | 101001 | 10.6 V | 111010 | 14.0 V |
| 001000 | 4.0 V | 011001 | 7.4 V | 101010 | 10.8 V | 111011 | 14.2 V |
| 001001 | 4.2 V | 011010 | 7.6 V | 101011 | 11.0 V | 111100 | 14.4 V |
| 001010 | 4.4 V | 011011 | 7.8 V | 101100 | 11.2 V | 111101 | 14.6 V |
| 001011 | 4.6 V | 011100 | 8.0 V | 101101 | 11.4 V | 111110 | 14.8 V |
| 001100 | 4.8 V | 011101 | 8.2 V | 101110 | 11.6 V | 111111 | 15.0 V |
| 001101 | 5.0 V | 011110 | 8.4 V | 101111 | 11.8 V | | |
| 001110 | 5.2 V | 011111 | 8.6 V | 110000 | 12.0 V | | |
| 001111 | 5.4 V | 100000 | 8.8 V | 110001 | 12.2 V | | |
| 010000 | 5.6 V | 100001 | 9.0 V | 110010 | 12.4 V | | |

All-in-one driver IC w/ Timing Controller

(3) POWER OFF (POF) (R02H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Turning OFF the power | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 02H |

After the Power OFF command, the driver will be powered OFF. Refer to the POWER MANAGEMENT section for the sequence.

This command will turn off booster, controller, source driver, gate driver, VCOM, and temperature sensor, but register data will be kept until VDD turned OFF or Deep Sleep Mode. Source/Gate/Border/VCOM will be released to floating.

(4) POWER OFF SEQUENCE SETTING (PFS) (R03H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|----|----|--------|----------|----|----|----|----|-----|
| Setting Power OFF sequence | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 03H |
| Setting Power OFF sequence | 0 | 1 | _ | - | T_VDS_ | OFF[1:0] | _ | - | _ | - | 00 |

T_VDS_OFF[1:0]: Source to gate power off interval time.

00b: 1 frame (Default)

01b: 2 frames

10b: 3 frames

11b: 4 frame

(5) POWER ON (PON) (REGISTER: R04H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------|-----|-----|----|----|----|----|----|----|----|----|----|
| Turning ON the power | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 04 |

After the Power ON command, the driver will be powered ON. Refer to the POWER MANAGEMENT section for the sequence.

This command will turn on booster, controller, regulators, and temperature sensor will be activated for one-time sensing before enabling booster. When all voltages are ready, the BUSY_N signal will return to high.

(6) POWER ON MEASURE (PMES) (R05H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Internal Bandgap Set | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 05⊦ |

This command enables the internal bandgap, which will be cleared by the next POF.

All-in-one driver IC w/ Timing Controller

(7) BOOSTER SOFT START (BTST) (R06H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|--------|---------|----|-----------|-----|----|------------|-----|-----|
| | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 06н |
| | 0 | 1 | BT_PF | HA[7:6] | В | T_PHA[5: | 3] | В | BT_PHA[2:0 | 0] | 17н |
| Booster Software Start Set | 0 | 1 | BT_PF | HB[7:6] | В | T_PHB[5: | 3] | В | T_PHB[2:0 | 0] | 17н |
| | 0 | 1 | - | - | В | T_PHC1[5: | :3] | В | T_PHC1[2: | :0] | 17н |
| | 0 | 1 | PHC2EN | - | В | T_PHC2[5: | :3] | В | T_PHC2[2: | :0] | 17н |

BT_PHA[7:6]: Soft start period of phase A.

00b: 10mS 01b: 20mS 10b: 30mS 11b: 40mS

BT_PHA[5:3]: Driving strength of phase A

000b: strength 1 001b: strength 2 **010b: strength 3** 011b: strength 4

100b: strength 5 101b: strength 6 110b: strength 7 111b: strength 8 (strongest)

BT_PHA[2:0]: Minimum OFF time setting of GDR in phase A

 000b: 0.27uS
 001b: 0.34uS
 010b: 0.40uS
 011b: 0.54uS

 100b: 0.80uS
 101b: 1.54uS
 110b: 3.34uS
 111b: 6.58uS

BT_PHB[7:6]: Soft start period of phase B.

00b: 10mS 01b: 20mS 10b: 30mS 11b: 40mS

BT_PHB[5:3]: Driving strength of phase B

000b: strength 1 001b: strength 2 **010b: strength 3** 011b: strength 4

100b: strength 5 101b: strength 6 110b: strength 7 111b: strength 8 (strongest)

BT_PHB[2:0]: Minimum OFF time setting of GDR in phase B

 000b: 0.27uS
 001b: 0.34uS
 010b: 0.40uS
 011b: 0.54uS

 100b: 0.80uS
 101b: 1.54uS
 110b: 3.34uS
 111b: 6.58uS

BT_PHC1[5:3]: Driving strength of phase C1

000b: strength 1 001b: strength 2 **010b: strength 3** 011b: strength 4

100b: strength 5 101b: strength 6 110b: strength 7 111b: strength 8 (strongest)

BT_PHC1[2:0]: Minimum OFF time setting of GDR in phase C1

 000b: 0.27uS
 001b: 0.34uS
 010b: 0.40uS
 011b: 0.54uS

 100b: 0.80uS
 101b: 1.54uS
 110b: 3.34uS
 111b: 6.58uS

PHC2EN: Booster phase-C2 enable

0: Booster phase-C2 disable

Phase-C1 setting always is applied for booster phase-C.

1: Booster phase-C2 enable

If temperature > temperature boundary phase-C2(RE7h[7:0]), phase-C1 setting is applied for booster phase-C. If temperature <= temperature boundary phase-C2(RE7h[7:0]), phase-C2 setting is applied for booster phase-C.

BT_PHC2[5:3]: Driving strength of phase C2

000b: strength 1 001b: strength 2 **010b: strength 3** 011b: strength 4

100b: strength 5 101b: strength 6 110b: strength 7 111b: strength 8 (strongest)

BT_PHC2[2:0]: Minimum OFF time setting of GDR in phase C2

 000b: 0.27uS
 001b: 0.34uS
 010b: 0.40uS
 011b: 0.54uS

 100b: 0.80uS
 101b: 1.54uS
 110b: 3.34uS
 111b: 6.58uS

All-in-one driver IC w/ Timing Controller

(8) DEEP SLEEP (DSLP) (R07H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Deep Sleep | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 07н |
| Deep Sleep | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | А5н |

After this command is transmitted, the chip will enter Deep Sleep Mode to save power. Deep Sleep Mode will return to Standby Mode by hardware reset. The only one parameter is a check code, the command will be executed if check code = 0xA5.

(9) DATA START TRANSMISSION 1 (DTM1) (R10H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|------------|------------|------------|------------|------------|------------|------------|----------|-----|
| | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 10H |
| Starting data transmission | 0 | 1 | Pixel1 | Pixel2 | Pixel3 | Pixel4 | Pixel5 | Pixel6 | Pixel7 | Pixel8 |] |
| Starting data transmission | 0 | 1 | : | : | : | : | : | : | : | : | |
| | 0 | 1 | Pixel(n-7) | Pixel(n-6) | Pixel(n-5) | Pixel(n-4) | Pixel(n-3) | Pixel(n-2) | Pixel(n-1) | Pixel(n) | |

This command starts transmitting data and write them into SRAM.

In KW mode, this command writes "OLD" data to SRAM.

In KWR mode, this command writes "K/W" data to SRAM.

In Program mode, this command writes "OTP" data to SRAM for programming.

(10) DATA STOP (DSP) (R11H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|-----------|----|----|----|----|----|----|----|-----|
| Stopping data transmission | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 11H |
| Stopping data transmission | 1 | 1 | data_flag | - | - | - | - | - | - | - | 00н |

Check the completeness of data. If data is complete, start to refresh display.

Data_flag: Data flag of receiving user data.

- 0: Driver didn't receive all the data.
- 1: Driver has already received all the one-frame data (DTM1 and DTM2).

After "Data Start" (R10h) or "Data Stop" (R11h) commands and when data_flag=1, the refreshing of panel starts and BUSY_N signal will become "0".

(11) DISPLAY REFRESH (DRF) (R12H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Refreshing the display | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 12⊦ |

While user sent this command, driver will refresh display (data/VCOM) according to SRAM data and LUT.

After Display Refresh command, BUSY_N signal will become "0" and the refreshing of panel starts.

(12) DATA START TRANSMISSION 2 (DTM2) (R13h)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|------------|------------|------------|------------|------------|------------|------------|----------|-----|
| | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 13н |
| Starting data transmission | 0 | 1 | Pixel1 | Pixel2 | Pixel3 | Pixel4 | Pixel5 | Pixel6 | Pixel7 | Pixel8 | |
| Starting data transmission | 0 | 1 | : | : | : | : | : | : | : | : | |
| | 0 | 1 | Pixel(n-7) | Pixel(n-6) | Pixel(n-5) | Pixel(n-4) | Pixel(n-3) | Pixel(n-2) | Pixel(n-1) | Pixel(n) |] |

This command starts transmitting data and write them into SRAM.

In KW mode, this command writes "NEW" data to SRAM.

In KWR mode, this command writes "RED" data to SRAM.

All-in-one driver IC w/ Timing Controller

(13) DUAL SPI MODE (DUSPI) (R15H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|----|----|-------|----------|----|----|----|----|-----|
| Ctanning data transmission | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 15⊦ |
| Stopping data transmission | 0 | 1 | - | - | MM_EN | DUSPI_EN | - | - | - | - | 00H |

This command sets dual SPI mode.

MM_EN: MM input pin definition enable.

0: MM input pin definition disable1: MM input pin definition enable.

DUSPI_EN: Dual SPI mode enable.

0: Dual SPI mode disable (single SPI mode)

1: Dual SPI mode enable

(14) AUTO SEQUENCE (AUTO) (R17H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|---------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Auto Coguenco | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 1 | 17⊦ |
| Auto Sequence | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | A5 |

The command can enable the internal sequence to execute several commands continuously. The successive execution can minimize idle time to avoid unnecessary power consumption and reduce the complexity of host's control procedure. The sequence contains several operations, including PON, DRF, POF, DSLP.

AUTO $(0x17) + Code(0xA5) = (PON \rightarrow DRF \rightarrow POF)$

AUTO $(0x17) + Code(0xA7) = (PON \rightarrow DRF \rightarrow POF \rightarrow DSLP)$

All-in-one driver IC w/ Timing Controller

(15) VCOM LUT (LUTC) (R20H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | | |
|--|---------------------|-----------------|--------------------|--------------------|---------|----------|---------|----------|---------|---------|-----|--|
| | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 20н | |
| | 0 | 1 | LEVEL S | ELECT-0 | LEVEL S | ELECT-1 | LEVEL S | ELECT-2 | LEVEL S | ELECT-3 | | |
| Build Look-up Table for VCOM | 0 | 0 1 NUMBER OF F | | | | | FRAMES | FRAMES-0 | | | | |
| (61-byte command, structure of bytes 2~7 | 0 | 1 | | NUMBER OF FRAMES-1 | | | | | | | | |
| repeated 10 times) | 0 | 1 | | | NI | JMBER OF | FRAMES | S-2 | | |] | |
| repeated to times, | 0 | 1 | NUMBER OF FRAMES-3 | | | | | |] | | | |
| | 0 1 TIMES TO REPEAT | | | | | | | | | | | |

This command stores VCOM Look-Up Table with 10 groups of data. Each group contains information for one state and is stored with 6 bytes (byte 2~7, 8~13, 14~19, 20~25, ...), while the sixth byte indicates how many times that phase will repeat.

Bytes 2, 8, 14, 20, 26, 32, 38, 44, 50, 56:

D[7:6], D[5:4], D[3:2], D[1:0]: Level Selection

00b: VCOM_DC

01b: VDH+VCOM_DC (VCOMH)
10b: VDL+VCOM_DC (VCOML)

11b: Floating

Bytes 3~6, 9~12, 15~18, 21~24, 27~30, 33~36, 39~42, 45~48, 51~54, 57~60:

Number of Frames

0000 0000b: 0 frame

: :

1111 1111b: 255 frames

Bytes 7, 13, 19, 25, 31, 37, 43, 49, 55, 61:

Times to Repeat

0000 0000b: 0 time

: :

1111 1111b: 255 times

If KW/R=0 (KWR mode), all 10 groups are used.

If KW/R=1 (KW mode), only 7 groups are used.

All-in-one driver IC w/ Timing Controller

(16) W2W LUT (LUTWW) (R21H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------------------|-----|-----|--------------------|---------|---------|----------|----------|---------|---------|---------|-----|
| | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 21н |
| Build | 0 | 1 | LEVEL S | ELECT-0 | LEVEL S | ELECT-1 | LEVEL S | ELECT-2 | LEVEL S | ELECT-3 | |
| White Look-up Table for W2W | 0 | 1 | | | N | JMBER O | F FRAMES | S-0 | | | |
| (43-byte command, | 0 | 1 | | | N | JMBER O | F FRAMES | S-1 | | | |
| structure of bytes 2~7 | 0 | 1 | | | N | JMBER OI | F FRAMES | S-2 | | |] |
| repeated 7 times) | 0 | 1 | NUMBER OF FRAMES-3 | | | | | | | | |
| | 0 | 1 | TIMES TO REPEAT | | | | | | | | |

This command stores White-to-White Look-Up Table with 7 groups of data. Each group contains information for one state and is stored with 6 bytes (byte 2~7, 8~13, 14~19, 20~25, ...), while the sixth byte indicates how many times that phase will repeat.

Bytes 2, 8, 14, 20, 26, 32, 38:

Level Selection.

00b: GND 01b: VDH 10b: VDL 11b: VDHR

Bytes 3~6, 9~12, 15~18, 21~24, 27~30, 33~36, 39~42:

Number of Frames

0000 0000b: 0 frame

: :

1111 1111b: 255 frames

Bytes 7, 13, 19, 25, 31, 37, 43:

Times to Repeat

0000 0000b: 0 time

: :

1111 1111b: 255 times

If KW/R=0 (KWR mode), LUTWW is not used.

If KW/R=1 (KW mode), LUTWW is used.

All-in-one driver IC w/ Timing Controller

(17) K2W LUT (LUTKW / LUTR) (R22H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------------------------|-----|-----|--------------------|--------------------|---------|---------|----------|---------|---------|---------|-----|
| | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 22н |
| Build | 0 | 1 | LEVEL S | ELECT-0 | LEVEL S | ELECT-1 | LEVEL S | ELECT-2 | LEVEL S | ELECT-3 | |
| Look-up Table for K2W or Red | 0 | 1 | | NUMBER OF FRAMES-0 | | | | | | | |
| (61-byte command, | 0 | 1 | | | N | JMBER O | F FRAMES | S-1 | | | |
| structure of bytes 2~7 | 0 | 1 | | | N | JMBER O | F FRAMES | S-2 | | | |
| repeated 10 times) | 0 | 1 | NUMBER OF FRAMES-3 | | | | | | | | |
| | 0 | 1 | TIMES TO REPEAT | | | | | | | | |

This command stores White-to-White Look-Up Table with 10 groups of data. Each group contains information for one state and is stored with 6 bytes (byte 2~7, 8~13, 14~19, 20~25, ...), while the sixth byte indicates how many times that phase will repeat.

Bytes 2, 8, 14, 20, 26, 32, 38, 44, 50, 56:

Level Selection.

00b: GND 01b: VDH 10b: VDL 11b: VDHR

Bytes 3~6, 9~12, 15~18, 21~24, 27~30, 33~36, 39~42, 45~48, 51~54, 57~60:

Number of Frames

0000 0000b: 0 frame

: :

1111 1111b: 255 frames

Bytes 7, 13, 19, 25, 31, 37, 43, 49, 55, 61:

Times to Repeat

0000 0000b: 0 time

: :

1111 1111b: 255 times

If KW/R=0 (KWR mode), all 10 groups are used.

If KW/R=1 (KW mode), only 7 groups are used.

(18) W2K LUT (LUTWK/LUTW) (R23H)

This command builds Look-up Table for White-to-Black. Please refer to K2W LUT (LUTKW/LUTR) for similar definition details. Regardless of KW/R=0 or KW/R=1, LUTWK/LUTW is used.

(19) K2K LUT (LUTKK/LUTK) (R24H)

This command builds Look-up Table for Black-to-Black. Please refer to K2W LUT (LUTKW/LUTR) for similar definition details. Regardless of KW/R=0 or KW/R=1, LUTKK/LUTK is used.

All-in-one driver IC w/ Timing Controller

(20) BORDER LUT (LUTBD) (R25H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|--|-----|-----|--------------------|-----------------|---------|----------|---------|---------|---------|---------|-----|
| | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | 25н |
| | 0 | 1 | LEVEL S | ELECT-0 | LEVEL S | ELECT-1 | LEVEL S | ELECT-2 | LEVEL S | ELECT-3 | |
| Build | 0 | 1 | NUMBER OF FRAMES-0 | | | | | | | | |
| Look-up Table for Border (43-byte command, | 0 | 1 | | | N | JMBER OI | FFRAMES | S-1 | | | |
| Bytes 2~7 repeated 7 times) | 0 | 1 | | | N | JMBER OI | FFRAMES | 6-2 | | | |
| Bytoo 2 7 Topcatod 7 timos) | 0 | 1 | NUMBER OF FRAMES-3 | | | | | | | | |
| | 0 | 1 | | TIMES TO REPEAT | | | | | | | |

This command stores White-to-White Look-Up Table with 7 groups of data. Each group contains information for one state and is stored with 6 bytes (byte 2~7, 8~13, 14~19, 20~25, ...), while the sixth byte indicates how many times that phase will repeat.

Bytes 2, 8, 14, 20, 26, 32, 38:

Level selection.

BD_EN=0: 00b: VCOM 01b: VDH 10b: VDL 11b: VDHR BD_EN=1: 00b: VCOM 01b: VBH(VCOM-VDL) 10b: VBL(VCOM-VDH) 11b: VDHR

Bytes 3~6, 9~12, 15~18, 21~24, 27~30, 33~36, 39~42:

Number of Frames

0000 0000b: 0 frame

: :

1111 1111b: 255 frames

Bytes 7, 13, 19, 25, 31, 37, 43:

Times to Repeat

0000 0000b: 0 time

: :

1111 1111b: 255 times

Only 7 LUTBD groups are used in KW mode or KWR mode.

(21) LUT OPTION (LUTOPT) (R2AH)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------|-----|-----|--------|----------|----|--------|----------|----|----|----|-----|
| | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 0 | 2Ан |
| LUT Option | 0 | 1 | STATE_ | XON[9:8] | - | - | - | - | - | - | 00н |
| | 0 | 1 | | | | STATE_ | XON[7:0] | | | | 00н |

This command sets XON control enable.

STATE_XON[9:0]:

All Gate ON (Each bit controls one state, STATE_XON [0] for state-1, STATE_XON [1] for state-2)

00 0000 0000b: no All-Gate-ON

00 0000 0001b: State-1 All-Gate-ON

00 0000 0011b: State-1 and State2 All-Gate-ON

: :

All-in-one driver IC w/ Timing Controller

(22) KW LUT OPTION (KWOPT) (R2BH)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|---------------|-----|-----|-----|-------|----|-----|-------|----|-------|-------|-----|
| | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 2Вн |
| KW LUT Option | 0 | 1 | - | - | - | - | - | - | ATRED | NORED | 00н |
| KW LOT Option | 0 | 1 | KWE | [9:8] | - | - | - | - | - | - | 00н |
| | 0 | 1 | | | | KWE | [7:0] | | | | 00н |

This command sets KW LUT mechanism option in KWR mode's LUT and only valid in K/W/R mode.

{ATRED, NORED}: KW LUT or KWR LUT selection control

| ATRED | NORED | Description |
|-------|-------|-------------------------|
| 0 | 0 | KWR LUT always |
| 0 | 1 | KW LUT only |
| 1 | 0 | Auto detect by red data |
| 1 | 1 | KW LUT only |

KWE[9:0]:

KW LUT enable control bits. Each bit controls one state, KWE[0] for state-1, KWE[1] for state-2,

At least 1 Enable Control bit should be set when KW LUT only is selected in KWR mode.

00 0000 0001b: KW LUT enable in State-1

00 0000 0011b: KW LUT enable in State-1 and State2

00 0000 1011b: KW LUT enable in State-1, State2 and State-4

All-in-one driver IC w/ Timing Controller

(23) PLL CONTROL (PLL) (R30H)


| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------|-----|-----|----|----|----|----|----|-----|-------|----|-----|
| Controlling PLL | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 30н |
| Controlling PLL | 0 | 1 | - | - | - | - | | FRS | [3:0] | | 06н |

The command controls the PLL clock frequency. The PLL structure must support the following frame rates:

FMR[3:0]: Frame rate setting

| FRS | Frame rate |
|------|------------|
| 0000 | 5Hz |
| 0001 | 10Hz |
| 0010 | 15Hz |
| 0011 | 20Hz |
| 0100 | 30Hz |
| 0101 | 40Hz |
| 0110 | 50Hz |
| 0111 | 60Hz |

| FRS | Frame rate |
|------|------------|
| 1000 | 70Hz |
| 1001 | 80Hz |
| 1010 | 90Hz |
| 1011 | 100Hz |
| 1100 | 110Hz |
| 1101 | 130Hz |
| 1110 | 150Hz |
| 1111 | 200Hz |

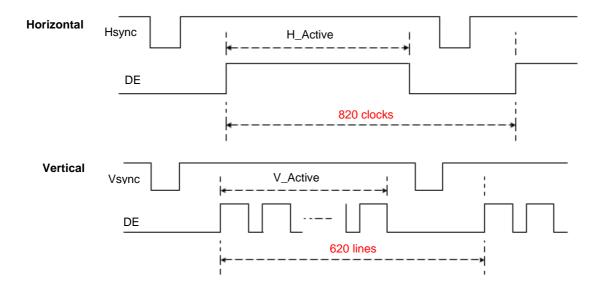

All-in-one driver IC w/ Timing Controller

(24) TEMPERATURE SENSOR CALIBRATION (TSC) (R40H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|---------------------|-----|-----|---------|--------|--------|--------|----------|----------|----------|----------|-----|
| | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 40н |
| Sensing Temperature | 1 | 1 | D10/TS7 | D9/TS6 | D8/TS5 | D7/TS4 | D6 / TS3 | D5 / TS2 | D4 / TS1 | D3 / TS0 | 00н |
| | 1 | 1 | D2 | D1 | D0 | - | - | - | - | - | 00н |

This command enables internal or external temperature sensor, and reads the result.

TS[7:0]: When TSE (R41h) is set to 0, this command reads internal temperature sensor value.

D[10:0]: When TSE (R41h) is set to 1, this command reads external LM75 temperature sensor value.

| J. WHEH IOL | (114111) 13 361 10 |
|-----------------|--------------------|
| TS[7:0]/D[10:3] | Temp. (°C) |
| 1110_0111 | -25 |
| 1110_1000 | -24 |
| 1110_1001 | -23 |
| 1110_1010 | -22 |
| 1110_1011 | -21 |
| 1110_1100 | -20 |
| 1110_1101 | -19 |
| 1110_1110 | -18 |
| 1110_1111 | -17 |
| 1111_0000 | -16 |
| 1111_0001 | -15 |
| 1111_0010 | -14 |
| 1111_0011 | -13 |
| 1111_0100 | -12 |
| 1111_0101 | -11 |
| 1111_0110 | -10 |
| 1111_0111 | -9 |
| 1111_1000 | -8 |
| 1111_1001 | -7 |
| 1111_1010 | -6 |
| 1111_1011 | -5 |
| 1111_1100 | -4 |
| 1111_1101 | -3 |
| 1111_1110 | -2 |
| 1111 1111 | -1 |

| 0000_0000 0 0000_0001 1 0000_0010 2 0000_0110 3 0000_0100 4 0000_0101 5 0000_0111 7 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1101 13 0000_1101 13 0000_1101 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0101 21 0001_0101 21 0001_0110 22 0001_0111 23 | | - 45-1 |
|---|-----------------|------------|
| 0000_0001 1 0000_0010 2 0000_0011 3 0000_0100 4 0000_0101 5 0000_0110 6 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1101 14 0000_1110 14 0001_0001 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0101 21 0001_0101 21 0001_0110 22 0001_0111 23 | TS[7:0]/D[10:3] | Temp. (°C) |
| 0000_0001 1 0000_0010 2 0000_0011 3 0000_0100 4 0000_0101 5 0000_0110 6 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1101 14 0000_1110 14 0001_0001 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0101 21 0001_0101 21 0001_0110 22 0001_0111 23 | | 0 |
| 0000_0100 4 0000_0101 5 0000_0110 6 0000_0111 7 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1101 14 0000_1110 14 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_0001 | 1 |
| 0000_0100 4 0000_0101 5 0000_0110 6 0000_0111 7 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1101 14 0000_1110 14 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_0010 | 2 |
| 0000_0101 5 0000_0110 6 0000_0111 7 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1101 14 0000_1110 14 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0101 21 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_0011 | 3 |
| 0000_0111 7 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1101 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | | |
| 0000_0111 7 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1101 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | | 5 |
| 0000_1000 8 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1110 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_0110 | 6 |
| 0000_1001 9 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1110 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_0111 | |
| 0000_1010 10 0000_1011 11 0000_1100 12 0000_1101 13 0000_1110 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | | |
| 0000_1011 11 0000_1100 12 0000_1101 13 0000_1110 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_1001 | 9 |
| 0000_1100 12 0000_1101 13 0000_1110 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | | |
| 0000_1101 13 0000_1110 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_1011 | |
| 0000_1110 14 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | | |
| 0000_1111 15 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_1101 | 13 |
| 0001_0000 16 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_1110 | |
| 0001_0001 17 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0000_1111 | 15 |
| 0001_0010 18 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0001_0000 | |
| 0001_0011 19 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0001_0001 | 17 |
| 0001_0100 20 0001_0101 21 0001_0110 22 0001_0111 23 | 0001_0010 | 18 |
| 0001_0101 21 0001_0110 22 0001_0111 23 | 0001_0011 | 19 |
| 0001_0101 21 0001_0110 22 0001_0111 23 | 0001_0100 | 20 |
| 0001_0111 23 | | 21 |
| | 0001_0110 | 22 |
| | 0001_0111 | 23 |
| | 0001_1000 | 24 |

| TS[7:0]/D[10:3] | Temp. (°C) |
|-----------------|------------|
| 0001_1001 | 25 |
| 0001_1010 | 26 |
| 0001_1011 | 27 |
| 0001_1100 | 28 |
| 0001_1101 | 29 |
| 0001_1110 | 30 |
| 0001_1111 | 31 |
| 0010_0000 | 32 |
| 0010_0001 | 33 |
| 0010_0010 | 34 |
| 0010_0011 | 35 |
| 0010_0100 | 36 |
| 0010_0101 | 37 |
| 0010_0110 | 38 |
| 0010_0111 | 39 |
| 0010_1000 | 40 |
| 0010_1001 | 41 |
| 0010_1010 | 42 |
| 0010_1011 | 43 |
| 0010_1100 | 44 |
| 0010_1101 | 45 |
| 0010_1110 | 46 |
| 0010_1111 | 47 |
| 0011_0000 | 48 |
| 0011_0001 | 49 |

(25) TEMPERATURE SENSOR ENABLE (TSE) (R41H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|---------------------------|-----|-----|-----|----|----|----|----|-----|-------|----|-----|
| Enable Temperature Sensor | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 41⊦ |
| /Offset | 0 | 1 | TSE | - | - | - | | TO[| [3:0] | | 00H |

This command selects Internal or External temperature sensor.

TSE: Internal temperature sensor switch

0: Enable (default)

1: Disable; using external sensor.

TO[3:0]: Temperature offset.

| TO[3:0] | Calibration |
|---------|--------------|
| 0000 b | +0 (Default) |
| 0001 | +1 |
| 0010 | +2 |
| 0011 | +3 |
| 0100 | +4 |
| 0101 | +5 |
| 0110 | +6 |
| 0111 | +7 |

| TO[3:0] | Calibration |
|---------|-------------|
| 1000 | -8 |
| 1001 | -7 |
| 1010 | -6 |
| 1011 | -5 |
| 1100 | -4 |
| 1101 | -3 |
| 1110 | -2 |
| 1111 | -1 |

All-in-one driver IC w/ Timing Controller

(26) TEMPERATURE SENSOR WRITE (TSW) (R42H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|------------|----|----|------|--------|----|----|----|-----|
| | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 42н |
| Write External Temperature | 0 | 1 | WATTR[7:0] | | | | | | | | 00н |
| Sensor | 0 | 1 | WMSB[7:0] | | | | | | | | 00н |
| | 0 | 1 | | | | WLSI | B[7:0] | | | | 00н |

This command writes the temperature sensed by the temperature sensor.

WATTR[7:6]: I²C Write Byte Number

00b : 1 byte (head byte only)

01b: 2 bytes (head byte + pointer)

10b : 3 bytes (head byte + pointer + 1st parameter)

11b: 4 bytes (head byte + pointer + 1st parameter + 2nd parameter)

WATTR[5:3]: User-defined address bits (A2, A1, A0)

WATTR[2:0]: Pointer setting

WMSB[7:0]: MSByte of write-data to external temperature sensor **WLSB[7:0]:** LSByte of write-data to external temperature sensor

(27) TEMPERATURE SENSOR READ (TSR) (R43H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------------------------|-----|-----|-----------|----|----|-----|--------|----|----|----|-----|
| Daniel Francisco de la composição | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 43н |
| Read External Temperature Sensor | 1 | 1 | RMSB[7:0] | | | | | | | | 00н |
| Sensor | 1 | 1 | | | | RLS | 3[7:0] | | | | 00н |

This command reads the temperature sensed by the temperature sensor.

RMSB[7:0]: MSByte read data from external temperature sensor

RLSB[7:0]: LSByte read data from external temperature sensor

(28) PANEL GLASS CHECK (PBC)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-------------------|-----|-----|----|----|----|----|----|----|----|------|-----|
| Chaek Danel Class | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | 44н |
| Check Panel Glass | 1 | 1 | - | - | - | - | - | - | - | PSTA | 00H |

This command is used to enable panel check, and to disable after reading result.

PSTA: 0: Panel check fail (panel broken) 1: Panel check pass

All-in-one driver IC w/ Timing Controller

(29) VCOM AND DATA INTERVAL SETTING (CDI) (R50H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------------------------------|-----|-----|-----|----|-----|----------------|-------|-----|-------|--------|-----|
| Oat later all haters are | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 50h |
| Set Interval between VCOM and Data | 0 | 1 | BDZ | - | BDV | ′[1:0 <u>]</u> | N2OCP | - | DDX | ([1:0] | 31h |
| V COIVI AIIU Data | 0 | 1 | - | - | - | - | | CDI | [3:0] | | 07H |

This command indicates the interval of VCOM and data output. When setting the vertical back porch, the total blanking will be kept (20 Hsync).

BDZ: Border Hi-Z control

0: Border output Hi-Z disabled (default)

1: Border output Hi-Z enabled

BDV[1:0]: Border LUT selection

KWR mode (KW/R=0)

| DDX[0] | BDV[1:0] | LUT | | | |
|-----------|----------|-------|--|--|--|
| | 00 | LUTBD | | | |
| 0 | 01 | LUTR | | | |
| U | 10 | LUTW | | | |
| | 11 | LUTK | | | |
| | 00 | LUTK | | | |
| 1 | 01 | LUTW | | | |
| (Default) | 10 | LUTR | | | |
| | 11 | LUTBD | | | |

KW mode (KW/R=1)

| DDX[0] | BDV[1:0] | LUT |
|----------------|----------|---------------------------|
| | 00 | LUTBD |
| 0 | 01 | LUTKW $(1 \rightarrow 0)$ |
| U | 10 | LUTWK $(0 \rightarrow 1)$ |
| | 11 | LUTKK $(0 \rightarrow 0)$ |
| | 00 | LUTKK (0 → 0) |
| 1 (Default) | 01 | LUTWK (1 → 0) |
| | 10 | LUTKW (0 → 1) |
| | 11 | LUTBD |

N20CP: Copy frame data from NEW data to OLD data enable control after display refresh with NEW/OLD in KW mode.

0: Copy NEW data to OLD data disabled (default)

1: Copy NEW data to OLD data enabled

All-in-one driver IC w/ Timing Controller

DDX[1:0]: Data polarity.

Under KWR mode (KW/R=0):

DDX[1] is for RED data. DDX[0] is for K/W data,

| | · | |
|-----------------|-----------------|------|
| DDX[1:0] | Data {Red, K/W} | LUT |
| | 00 | LUTW |
| 00 | 01 | LUTK |
| 01 (Default) | 10 | LUTR |
| | 11 | LUTR |
| | 00 | LUTK |
| | 01 | LUTW |
| | 10 | LUTR |
| | 11 | LUTR |

| DDX[1:0] | Data {Red, K/W} | LUT |
|----------|-----------------|------|
| 10 | 00 | LUTR |
| | 01 | LUTR |
| | 10 | LUTW |
| | 11 | LUTK |
| 11 | 00 | LUTR |
| | 01 | LUTR |
| | 10 | LUTK |
| | 11 | LUTW |

Under KW mode (KW/R=1):

DDX[1]=0 is for KW mode with NEW/OLD, DDX[1]=1 is for KW mode without NEW/OLD.


| DDX[1:0] | Data {NEW, OLD} | LUT |
|-----------|-----------------|---------------------------|
| | 00 | LUTWW $(0 \rightarrow 0)$ |
| 00 | 01 | LUTKW $(1 \rightarrow 0)$ |
| 00 | 10 | LUTWK (0 → 1) |
| | 11 | LUTKK (1 → 1) |
| | 00 | LUTKK $(0 \rightarrow 0)$ |
| 01 | 01 | LUTWK $(1 \rightarrow 0)$ |
| (Default) | 10 | LUTKW (0 → 1) |
| | 11 | LUTWW $(1 \rightarrow 1)$ |

| DDX[1:0] | Data (NEW) | LUT |
|----------|------------|---------------|
| 10 | 0 | LUTKW (1 → 0) |
| | 1 | LUTWK (0 → 1) |
| 11 | 0 | LUTWK (1 → 0) |
| | 1 | LUTKW (0 → 1) |

CDI[3:0]: VCOM and data interval

| CDI[3:0] | VCOM and Data Interval |
|----------|------------------------|
| 0000 b | 17 hsync |
| 0001 | 16 |
| 0010 | 15 |
| 0011 | 14 |
| 0100 | 13 |
| 0101 | 12 |
| 0110 | 11 |
| 0111 | 10 (Default) |

| CDI[3:0] | VCOM and Data Interval |
|----------|------------------------|
| 1000 | 9 |
| 1001 | 8 |
| 1010 | 7 |
| 1011 | 6 |
| 1100 | 5 |
| 1101 | 4 |
| 1110 | 3 |
| 1111 | 2 |

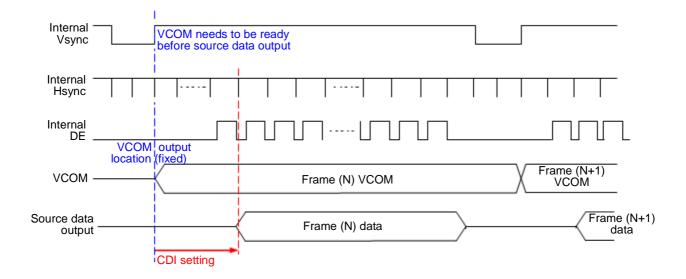

All-in-one driver IC w/ Timing Controller

(30) Low Power Detection (LPD) (R51H)


| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------------|-----|-----|----|----|----|----|----|----|----|-----|-----|
| Datast Low Dower | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 1 | 51h |
| Detect Low Power | 1 | 1 | - | - | - | - | - | - | - | LPD | 01h |

This command indicates the input power condition. Host can read this flag to learn the battery condition.

LPD: Internal Low Power Detection Flag

0: Low power input (VDD < 2.5V, 2.4V, 2.3V, or 2.2V, selected by $LVD_SEL[1:0]$ in command LVSEL)

1: Normal status (default)

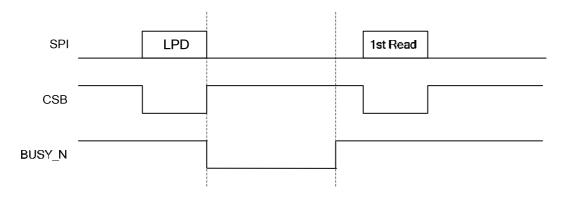

(31) END VOLTAGE SETTING (EVS) (R52H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------|-----|-----|----|----|----|----|-------|----|------|---------|----|
| Fred Voltage Cotting | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 1 | 0 | 52 |
| End Voltage Setting | 0 | 1 | - | - | - | - | VCEND | - | BDEN | ID[1:0] | 02 |

This command selects source end voltage and border end voltage after LUTs are finished.

VCEND: VCOM end voltage selection

0b: VCOM_DC 1b: floating

BDEND[1:0]: Border end voltage selection

00b: 0V 01b: 0V **10b: VCOM_DC** 11b: floating

All-in-one driver IC w/ Timing Controller

(32) TCON SETTING (TCON) (R60H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------------------|-----|-----|----|-----|-------|----|----|-----|-------|----|-----|
| Set Gate/Source Non-overlap | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 0 | 60h |
| Period | 0 | 1 | | S2G | [3:0] | | | G2S | [3:0] | | 22h |


This command defines non-overlap period of Gate and Source.

S2G[3:0] or G2S[3:0]: Source to Gate / Gate to Source Non-overlap period

| S2G[3:0] or G2S[3:0] | Period |
|----------------------|--------------|
| 0000 b | 4 |
| 0001 | 8 |
| 0010 | 12 (Default) |
| 0011 | 16 |
| 0100 | 20 |
| 0101 | 24 |
| 0110 | 28 |
| 0111 | 32 |

| S2G[3:0] or G2S[3:0] | Period |
|----------------------|--------|
| 1000 b | 36 |
| 1001 | 40 |
| 1010 | 44 |
| 1011 | 48 |
| 1100 | 52 |
| 1101 | 56 |
| 1110 | 60 |
| 1111 | 64 |

Period Unit = 667 nS.

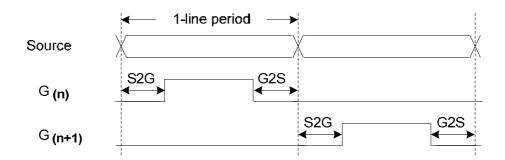

All-in-one driver IC w/ Timing Controller

(33) RESOLUTION SETTING (TRES) (R61H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------------------|-----|-----|----|----|-----------|-----|--------|----|-----|--------|-----|
| | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 1 | 61h |
| | 0 | 1 | - | - | - | - | - | - | HRE | S[9:8] | 03h |
| Set Display Resolution | 0 | 1 | | | HRES[7:3] | | | 0 | 0 | 0 | 20h |
| | 0 | 1 | - | - | - | - | - | - | VRE | S[9:8] | 02h |
| | 0 | 1 | | | | VRE | S[7:0] | | | | 58h |

This command defines resolution setting.

HRES[9:3]: Horizontal Display Resolution (Value range: 01h ~ 64h)VRES[9:0]: Vertical Display Resolution (Value range: 001h ~ 258h)

Active channel calculation, assuming HST[9:0]=0, VST[9:0]=0:

Gate: First active gate = G0;

Last active gate = VRES[9:0] - 1

Source: First active source = S0;

Last active source = HRES[9:3]*8 - 1

Example: 128 (source) x 272 (gate), assuming HST[9:0]=0, VST[9:0]=0

Gate: First active gate = G0,

Last active gate = G271; (VRES[9:0] = 272, 272 - 1 = 271)

Source: First active source = S0,

Last active source = S127; (HRES[9:3]=16, 16*8 - 1 = 127)

(34) GATE/SOURCE START SETTING (GSST) (R65H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------------|-----|-----|----|----|----------|-----|-------|----|-----|-------|-----|
| | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 0 | 1 | 65h |
| | 0 | 1 | - | - | - | - | - | - | HST | [9:8] | 00h |
| Set Gate/Source Start | 0 | 1 | | | HST[7:3] | | | 0 | 0 | 0 | 00h |
| | 0 | 1 | - | - | - | - | - | - | VST | [9:8] | 00h |
| | 0 | 1 | | | | VST | [7:0] | | | | 00h |

This command defines resolution start gate/source position.

HST[9:3]: Horizontal Display Start Position (Source). (Value range: 00h ~ 63h)

VST[9:0]: Vertical Display Start Position (Gate). (Value range: 000h ~ 257h)

Example : For 128(Source) x 240(Gate)

HST[9:3] = 4 (HST[9:0] = 4*8 = 32),

VST[9:0] = 32

Gate: First active gate = G32 (VST[9:0] = 32),

Last active gate = G271 (VRES[9:0] = 240, VST[9:0] = 32, 240-1+32=271)

Source: First active source = S32 (HST[9:0]= 32),

Last active source = S239 (HRES[9:0] = 128, HST[9:0] = 32, 128-1+32=239)

All-in-one driver IC w/ Timing Controller

(35) REVISION (REV) (R70H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|--------------------|-----|-----|----|----|----|--------|-----------|----|----|----|-----|
| | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 0 | 70h |
| | 1 | 1 | | | | PROD_R | EV[23:16] | | | | FFh |
| | 1 | 1 | | | | PROD_F | REV[15:8] | | | | FFh |
| LLIT/Chin Davisian | 1 | 1 | | | | PROD_I | REV[7:0] | | | | FFh |
| LUT/Chip Revision | 1 | 1 | | | | LUT_RE | :V[23:16] | | | | FFh |
| | 1 | 1 | | | | LUT_RI | EV[15:8] | | | | FFh |
| | 1 | 1 | | | | LUT_R | EV[7:0] | | | | FFh |
| | 1 | 1 | | | | CHIP_F | REV[7:0] | | | | 0Ch |

The command reads the product revision, LUT revision and chip revision.

PROD_REV[23:0]: Product Revision. PROD_REV[23:0] is read from OTP address 0x0BDD ~ 0X0BDF or 0x17DD ~ 0x17DF.

LUT_REV[23:0]: LUT Revision. LUT_REV[23:0] is read from OTP address 0x0BE0 ~ 0X0BE2 or 0x17E0.~ 0x17E2.

CHIP_REV[7:0]: Chip Revision, fixed at 00001100b.

(36) GET STATUS (FLG) (R71H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------|-----|-----|----|--------------|----------------------|----------------------------|---------------|-----|-----|--------|-----|
| | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 1 | 71h |
| Read Flags | 1 | 1 | - | PTL_ Flag | I ² C_ERR | I ² C_ BUSYN | Data_ Flag | PON | POF | BUSY_N | 13h |

This command reads the IC status.

PTL_Flag: Partial display status (high: partial mode)

I²C_ERR: I²C master error status

I²C_BUSYN: I²C master busy status (low active)

Data_Flag: Driver has already received all the one frame data

PON: Power ON status
POF: Power OFF status

BUSY_N: Driver busy status (low active)

All-in-one driver IC w/ Timing Controller

(37) AUTO MEASURE VCOM (AMV) (R80H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|----|----|-----|--------|-----|------|-----|------|-----|
| Automatically measure VCOM | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 80h |
| Automatically measure vCOM | 0 | 1 | - | - | AMV | T[1:0] | XON | AMVS | AMV | AMVE | 10h |

This command triggers auto VCOM sensing mechanism.

AMVT[1:0]: Auto Measure VCOM Time

00b: 3s **01b: 5s (default)**

10b: 8s 11b: 10s

XON: All Gate ON of AMV

0: Gate normally scan during Auto Measure VCOM period. (default)

1: All Gate ON during Auto Measure VCOM period.

AMVS: Source output of AMV

0: Source output 0V during Auto Measure VCOM period. (default)

1: Source output VDHR during Auto Measure VCOM period.

AMV: Analog signal

0: Get VCOM value with the VV command (R81h) (default)

1: Get VCOM value in analog signal. (External analog to digital converter)

AMVE: Auto Measure VCOM Enable (/Disable)

0: No effect (default)

1: Trigger auto VCOM sensing.

All-in-one driver IC w/ Timing Controller

(38) VCOM VALUE (VV) (R81H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|----------------------------|-----|-----|----|----|----|----|---------|----|----|----|-----|
| Automatically measure VCOM | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 81h |
| Automatically measure VCOM | 1 | 1 | - | | | | VV[6:0] | | | | 00h |

This command gets the VCOM value.

VV[6:0]: VCOM Value Output

| VV [6:0] | VCOM Voltage (V) | VV [6:0] | VCOM Voltage (V) | VV [6:0] | VCOM Voltage (V) |
|-----------|------------------|-----------|------------------|-----------|------------------|
| 000 0000b | -0.10 | 001 1011b | -1.45 | 011 0110b | -2.80 |
| 000 0001b | -0.15 | 001 1100b | -1.50 | 011 0111b | -2.85 |
| 000 0010b | -0.20 | 001 1101b | -1.55 | 011 1000b | -2.90 |
| 000 0011b | -0.25 | 001 1110b | -1.60 | 011 1001b | -2.95 |
| 000 0100b | -0.30 | 001 1111b | -1.65 | 011 1010b | -3.00 |
| 000 0101b | -0.35 | 010 0000b | -1.70 | 011 1011b | -3.05 |
| 000 0110b | -0.40 | 010 0001b | -1.75 | 011 1100b | -3.10 |
| 000 0111b | -0.45 | 010 0010b | -1.80 | 011 1101b | -3.15 |
| 000 1000b | -0.50 | 010 0011b | -1.85 | 011 1110b | -3.20 |
| 000 1001b | -0.55 | 010 0100b | -1.90 | 011 1111b | -3.25 |
| 000 1010b | -0.60 | 010 0101b | -1.95 | 100 0000b | -3.30 |
| 000 1011b | -0.65 | 010 0110b | -2.00 | 100 0001b | -3.35 |
| 000 1100b | -0.70 | 010 0111b | -2.05 | 100 0010b | -3.40 |
| 000 1101b | -0.75 | 010 1000b | -2.10 | 100 0011b | -3.45 |
| 000 1110b | -0.80 | 010 1001b | -2.15 | 100 0100b | -3.50 |
| 000 1111b | -0.85 | 010 1010b | -2.20 | 100 0101b | -3.55 |
| 001 0000b | -0.90 | 010 1011b | -2.25 | 100 0110b | -3.60 |
| 001 0001b | -0.95 | 010 1100b | -2.30 | 100 0111b | -3.65 |
| 001 0010b | -1.00 | 010 1101b | -2.35 | 100 1000b | -3.70 |
| 001 0011b | -1.05 | 010 1110b | -2.40 | 100 1001b | -3.75 |
| 001 0100b | -1.10 | 010 1111b | -2.45 | 100 1010b | -3.80 |
| 001 0101b | -1.15 | 011 0000b | -2.50 | 100 1011b | -3.85 |
| 001 0110b | -1.20 | 011 0001b | -2.55 | 100 1100b | -3.90 |
| 001 0111b | -1.25 | 011 0010b | -2.60 | 100 1101b | -3.95 |
| 001 1000b | -1.30 | 011 0011b | -2.65 | 100 1110b | -4.00 |
| 001 1001b | -1.35 | 011 0100b | -2.70 | 100 1111b | -4.05 |
| 001 1010b | -1.40 | 011 0101b | -2.75 | | |

All-in-one driver IC w/ Timing Controller

(39) VCOM_DC SETTING (VDCS) (R82H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-------------|-----|-----|----|----|----|----|-----------|----|----|----|-----|
| Set VCOM DC | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 82h |
| Set VCOM_DC | 0 | 1 | - | | | | VDCS[6:0] | | | | 00h |

This command sets VCOM_DC value

VDCS[6:0]: VCOM_DC Setting

| VOOIVI_DO O | Juli 19 | | | | |
|-------------|------------------|------------|------------------|------------|------------------|
| VDCS [6:0] | VCOM Voltage (V) | VDCS [6:0] | VCOM Voltage (V) | VDCS [6:0] | VCOM Voltage (V) |
| 000 0000b | -0.10 | 001 1011b | -1.45 | 011 0110b | -2.80 |
| 000 0001b | -0.15 | 001 1100b | -1.50 | 011 0111b | -2.85 |
| 000 0010b | -0.20 | 001 1101b | -1.55 | 011 1000b | -2.90 |
| 000 0011b | -0.25 | 001 1110b | -1.60 | 011 1001b | -2.95 |
| 000 0100b | -0.30 | 001 1111b | -1.65 | 011 1010b | -3.00 |
| 000 0101b | -0.35 | 010 0000b | -1.70 | 011 1011b | -3.05 |
| 000 0110b | -0.40 | 010 0001b | -1.75 | 011 1100b | -3.10 |
| 000 0111b | -0.45 | 010 0010b | -1.80 | 011 1101b | -3.15 |
| 000 1000b | -0.50 | 010 0011b | -1.85 | 011 1110b | -3.20 |
| 000 1001b | -0.55 | 010 0100b | -1.90 | 011 1111b | -3.25 |
| 000 1010b | -0.60 | 010 0101b | -1.95 | 100 0000b | -3.30 |
| 000 1011b | -0.65 | 010 0110b | -2.00 | 100 0001b | -3.35 |
| 000 1100b | -0.70 | 010 0111b | -2.05 | 100 0010b | -3.40 |
| 000 1101b | -0.75 | 010 1000b | -2.10 | 100 0011b | -3.45 |
| 000 1110b | -0.80 | 010 1001b | -2.15 | 100 0100b | -3.50 |
| 000 1111b | -0.85 | 010 1010b | -2.20 | 100 0101b | -3.55 |
| 001 0000b | -0.90 | 010 1011b | -2.25 | 100 0110b | -3.60 |
| 001 0001b | -0.95 | 010 1100b | -2.30 | 100 0111b | -3.65 |
| 001 0010b | -1.00 | 010 1101b | -2.35 | 100 1000b | -3.70 |
| 001 0011b | -1.05 | 010 1110b | -2.40 | 100 1001b | -3.75 |
| 001 0100b | -1.10 | 010 1111b | -2.45 | 100 1010b | -3.80 |
| 001 0101b | -1.15 | 011 0000b | -2.50 | 100 1011b | -3.85 |
| 001 0110b | -1.20 | 011 0001b | -2.55 | 100 1100b | -3.90 |
| 001 0111b | -1.25 | 011 0010b | -2.60 | 100 1101b | -3.95 |
| 001 1000b | -1.30 | 011 0011b | -2.65 | 100 1110b | -4.00 |
| 001 1001b | -1.35 | 011 0100b | -2.70 | 100 1111b | -4.05 |
| 001 1010b | -1.40 | 011 0101b | -2.75 | | |

All-in-one driver IC w/ Timing Controller

(40) PARTIAL WINDOW (PTL) (R90H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|---------------------|-----|-----|----|----|-----------|------|--------|----|-----|---------|-----|
| | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 90h |
| | 0 | 1 | - | - | - | - | - | - | HRS | T[9:8] | 00h |
| | 0 | 1 | | | HRST[7:3] | | | 0 | 0 | 0 | 00h |
| | 0 | 1 | - | - | - | - | - | - | HRE | D[9:8] | 03h |
| Set Partial Window | 0 | 1 | | | HRED[7:3] | | | 1 | 1 | 1 | 1Fh |
| Set Partial Willdow | 0 | 1 | • | - | - | - | - | - | VRS | T[9:8] | 00h |
| | 0 | 1 | | | | VRS | T[7:0] | | | | 00h |
| | 0 | 1 | - | - | - | - | - | - | VRE | D[9:8] | 02h |
| | 0 | 1 | | | | VREI | D[7:0] | | | | 57h |
| | 0 | 1 | - | - | - | - | - | - | - | PT_SCAN | 01h |

This command sets partial window.

HRST[9:3]: Horizontal start channel bank. (Value range: 00h~63h)

HRED[9:3]: Horizontal end channel bank. (Value range: 00h~63h). HRED must be greater than HRST.

VRST[9:0]: Vertical start line. (Value range: 000h~257h)

VRED[9:0]: Vertical end line. (Value range: 000h~257h). VRED must be greater than VRST.

PT_SCAN: 0: Gates scan only inside of the partial window.

1: Gates scan both inside and outside of the partial window. (default)

(41) PARTIAL IN (PTIN) (R91H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Partial In | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 91h |

This command makes the display enter partial mode.

(42) PARTIAL OUT (PTOUT) (R92H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Partial Out | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 92h |

This command makes the display exit partial mode and enter normal mode.

(43) PROGRAM MODE (PGM) (RA0H)

| | Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|---|--------------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Г | Enter Program Mode | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | A0h |

After this command is issued, the chip would enter the program mode.

After the programming procedure completed, a hardware reset is necessary for leaving program mode.

(44) ACTIVE PROGRAM (APG) (RA1H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|--------------------|-----|-----|----|----|----|----|----|----|----|----|-----|
| Active Program OTP | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | A1h |

After this command is transmitted, the programming state machine would be activated.

The BUSY_N flag would fall to 0 until the programming is completed.


All-in-one driver IC w/ Timing Controller

(45) READ OTP DATA (ROTP) (RA2H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-------------------------|-----|-----|----|--------------------------------------|--------|-------------|---------------|--------|----|----|-----|
| | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | A2h |
| | 1 | 1 | | The data of address 0x000 in the OTP | | | | | | | |
| Read OTP data for check | 1 | 1 | | The data of address 0x001 in the OTP | | | | | | | |
| Read OTP data for check | 1 | 1 | | | | | | | | | |
| | 1 | 1 | | The data of address (n-1) in the OTP | | | | | | | |
| | 1 | 1 | | | The da | ta of addre | ess (n) in tl | ne OTP | | | |

The command is used for reading the content of OTP for checking the data of programming.

The value of (n) is depending on the amount of programmed data, the max address = 0x17FF.

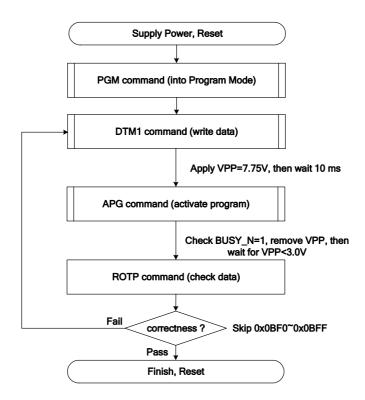

The sequence of programming OTP.

All-in-one driver IC w/ Timing Controller

(46) CASCADE SETTING (CCSET) (RE0H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|--------------------|-----|-----|----|----|----|----|----|----|-------|------|-----|
| Set Cascade Option | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 0 | 0 | E0h |
| Set Cascade Option | 0 | 1 | - | - | - | - | - | - | TSFIX | CCEN | 00h |

This command is used for cascade.

TSFIX: Let the value of slave's temperature is same as the master's.

0: Temperature value is defined by internal temperature sensor / external LM75. (default)

1: Temperature value is defined by TS_SET[7:0] registers.

CCEN: Output clock enable/disable.

0: Output 0V at CL pin. (default)


1: Output clock at CL pin to slave chip.

(47) POWER SAVING (PWS) (RE3H)


| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-------------------------|-----|-----|----|------|---------|----|----|------|--------|----|-----|
| Power Saving for VCOM & | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 1 | 1 | E3h |
| Source | 0 | 1 | | VCOM | _W[3:0] | | | SD_V | V[3:0] | | 00h |

This command is set for saving power during refreshing period. If the output voltage of VCOM / Source is from negative to positive or from positive to negative, the power saving mechanism will be activated. The active period width is defined by the following two parameters.

VCOM_W[3:0]: VCOM power saving width (Unit: line period)

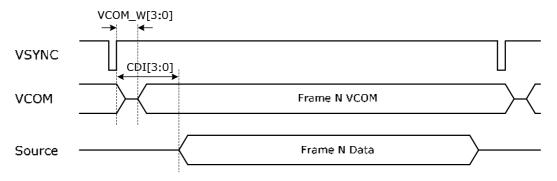

SD_W[3:0]: Source power saving width (Unit: 660nS)

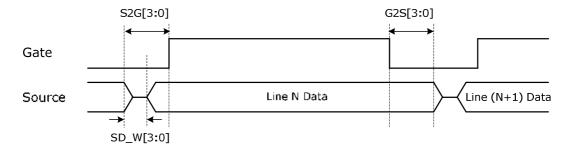

All-in-one driver IC w/ Timing Controller

(48) LVD VOLTAGE SELECT (LVSEL) (RE4H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|--------------------|-----|-----|----|----|----|----|----|----|-------|---------|-----|
| Select LVD Voltage | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 1 | 0 | 0 | E4h |
| Select LVD Voltage | 0 | 1 | - | - | - | - | - | - | LVD_S | EL[1:0] | 03h |

LVD_SEL[1:0]: Low Power Voltage selection

| LVD_SEL[1:0] | LVD value |
|--------------|-------------------|
| 00 | < 2.2 V |
| 01 | < 2.3 V |
| 10 | < 2.4 V |
| 11 | < 2.5 V (default) |

(49) FORCE TEMPERATURE (TSSET) (RE5H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------------------|-----|-----|----|----|----|-------|---------|----|----|----|-----|
| Force Temperature Value for | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 1 | 0 | 1 | E5h |
| Cascade | 0 | 1 | | | | TS_SE | ET[7:0] | | | | 00h |

This command is used for cascade to fix the temperature value of master and slave chip.

(50) TEMPERATURE BOUNDARY PHASE-C2 (TSBDRY) (RE7H)

| Action | W/R | C/D | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|-----------------------------|-----|-----|----|----|----|---------|-----------|----|----|----|-----|
| Temperature Boundary Phase- | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 1 | 1 | 1 | E7h |
| C2 | 0 | 1 | | | | TSBDRY_ | PHC2[7:0] | | | | 00h |

This command is used to set the temperature boundary to judge whether booster phase-C2 is applied or not.

All-in-one driver IC w/ Timing Controller

HOST INTERFACES

UC8179 provides 3-wire/4-wire serial interface for command and display data transferred from the MCU. The serial interface supports 8-bit mode. Data can be input/output by clocks while the chip is active (CSB =LOW). While input, data are written in order from MSB at the clock rising edge. When too many parameters are input, the chip accepts only defined parameters, and ignores undefined ones.

| BS | Interface | CSB | DC | SCL | SDA |
|------|------------|-----------|------------|-----------|-----------|
| High | 3-wire SPI | Available | Fix to GND | Available | Available |
| Low | 4-wire SPI | Available | Available | Available | Available |

3 wire SPI format

Data / Command is recognized with the first bit transferred. Data are transferred in the unit of 9 bits. To prevent malfunction due to noise, it is recommended to set the CSB signal to HIGH every 9 bits. (The serial counter is reset at the rising edge of the CSB signal.)

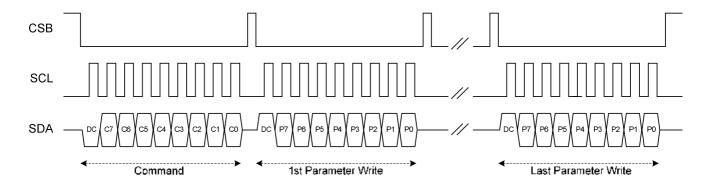


Figure: 3-wire SPI write operation

The MSB bit of data will be output at SDA pin after the 1st SCL falling edge, if the 1st input data at SDA is high.

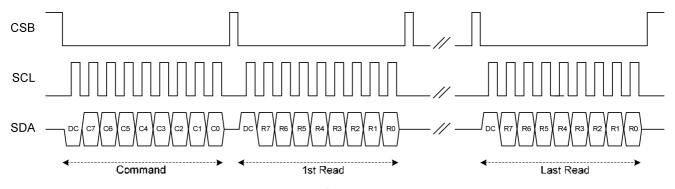


Figure: 3-wire SPI read operation

All-in-one driver IC w/ Timing Controller

4 wire SPI format

Data / Command is recognized with DC pin. Data are transferred in the unit of 8 bits. To prevent malfunction due to noise, it is recommended to set the CSB signal to HIGH every 8 bits. (The serial counter is reset at the rising edge of the CSB signal.)

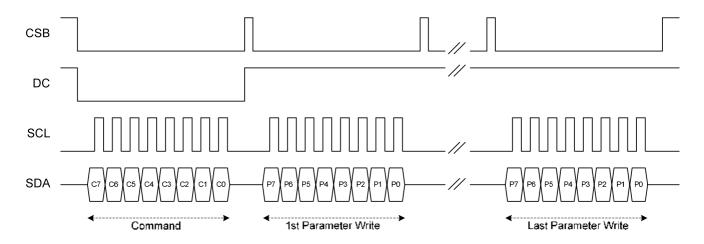


Figure: 4-wire SPI write operation

The MSB bit of data will be output at SDA pin after the CSB falling edge, if DC pin is High.

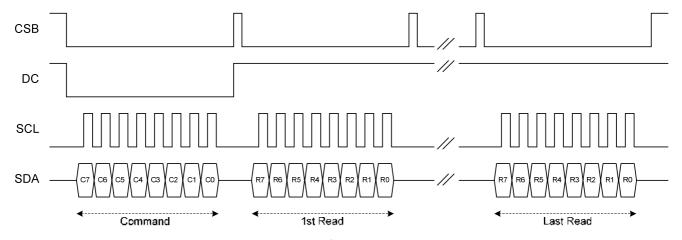


Figure: 4-wire SPI read operation

All-in-one driver IC w/ Timing Controller

3 wire dual SPI format

Data / Command is recognized with the first bit transferred at SDA. Data are transferred in the unit of 5 SPI clocks. To prevent malfunction due to noise, it is recommended to set the CSB signal to HIGH every 5 SPI clocks. (The serial counter is reset at the rising edge of the CSB signal.) In 3-wire dual SPI mode, SDA and SDA1 are only input mode for data write transmission.

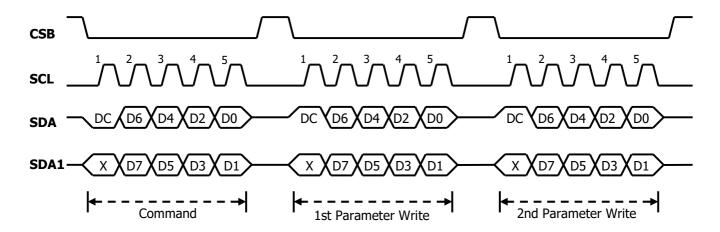


Figure: 3-wire dual SPI write operation

4 wire dual SPI format

Data / Command is recognized with DC pin. Data are transferred in the unit of 4 SPI clocks. To prevent malfunction due to noise, it is recommended to set the CSB signal to HIGH every 4 SPI clocks. (The serial counter is reset at the rising edge of the CSB signal.) In 4-wire dual SPI mode, SDA and SDA1 are only input mode for data write transmission.

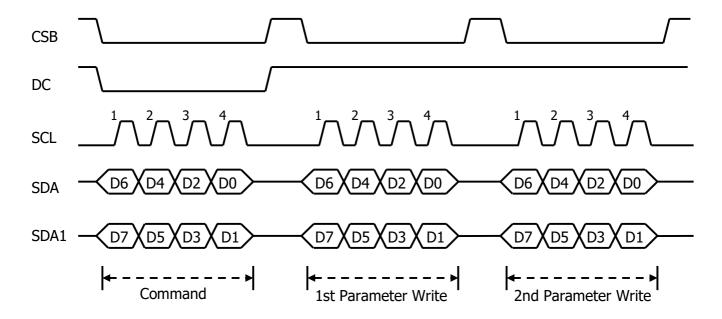



Figure: 4-wire dual SPI write operation

All-in-one driver IC w/ Timing Controller

POWER MANAGEMENT

Power ON/OFF Sequence

- 1. Temperature sensor will be activated automatically for one-time sensing before enabling booster.
- 2. After refreshing display, VCOM will be set to floating automatically.
- 3. After RST_N rising, the waiting time for internal initial processing, greater than 1mS, is necessary. Any commands transmitted to chip during this time will be ignored.

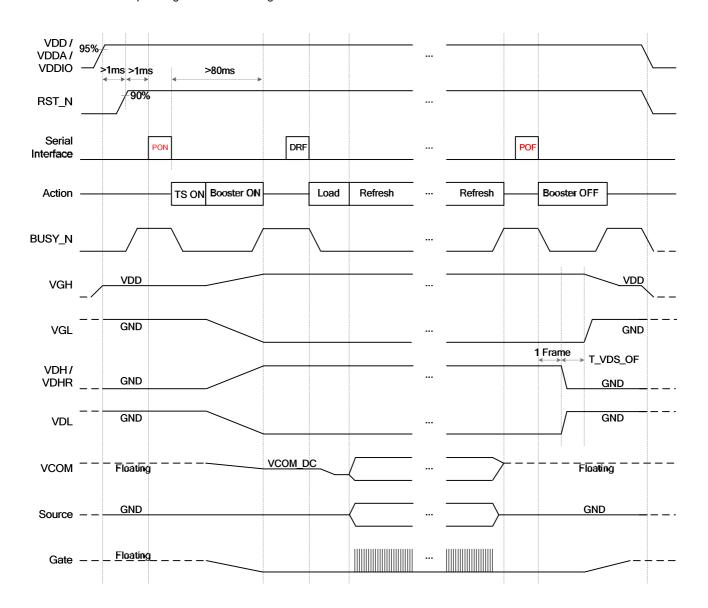


All-in-one driver IC w/ Timing Controller

Data Transmission Waveform


Example 1: After 3 cases, the VCOM driver will send 2 frame VCOM_DC and then floating; and source drivers output 0V.

- 1. All 7 LUT states (KW mode) or 10 LUT states (KWR mode) complete and VCEND=0.
- 2. Meet the state whose Times to Repeat =0 and VCEND=0
- 3. Meet the state whose all Number of Frames =0 and VCEND=0

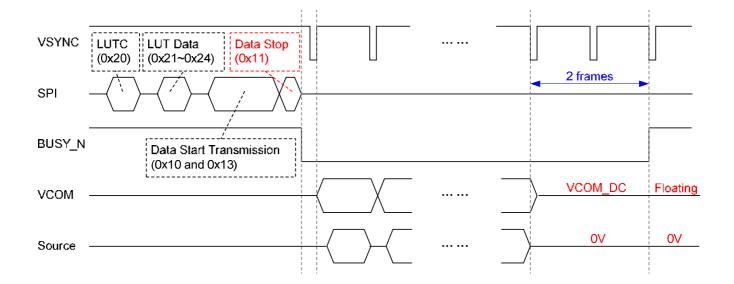

Example2: After 4 cases, the VCOM driver will send 2 frame VCOM_DC and then floating; and source drivers output 0V.

- 1. While level selection in LUT (LUTC only) is "1111_1111b", all frame number are not '0' and repeat times are not '0', the driver will float VCOM.
- 2. All 7 LUT states (KW mode) or 10 LUT states (KWR mode) complete and VCEND=1.
- 3. Meet the state whose Times to Repeat =0 and VCEND=1.
- 4. Meet the state whose all Number of Frames =0 and VCEND=1.

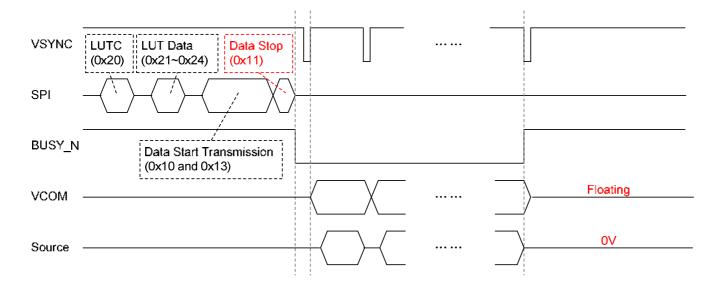


All-in-one driver IC w/ Timing Controller

Display Refresh Waveform


Example 1: After 3 cases, the VCOM driver will send 2 frame VCOM_DC and then floating; and source drivers output 0V.

- 1. All 7 LUT states (KW mode) or 10 LUT states (KWR mode) complete and VCEND=0.
- 2. Meet the state whose Times to Repeat =0 and VCEND=0
- 3. Meet the state whose all Number of Frames =0 and VCEND=0

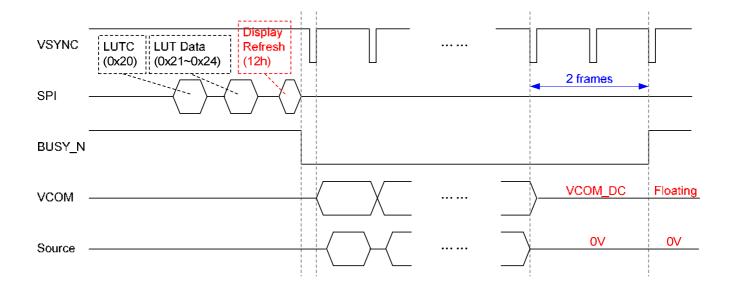

Example2: After 4 cases, the VCOM driver will send 2 frame VCOM_DC and then floating; and source drivers output 0V.

- While level selection in LUT (LUTC only) is "1111_111b", all frame number are not '0' and repeat times are not '0', the driver will float VCOM.
- 2. All 7 LUT states (KW mode) or 10 LUT states (KWR mode) complete and VCEND=1.
- 3. Meet the state whose Times to Repeat =0 and VCEND=1.
- 4. Meet the state whose all Number of Frames =0 and VCEND=1.

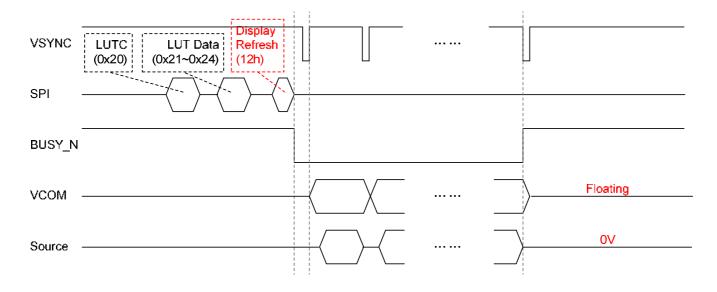

All-in-one driver IC w/ Timing Controller

BUSY N Signal

Commands, except reading command, are restricted by refreshing display (DRF / DSP) as listed in the following table.

BUSY_N is used to represent the status of internal action. Commands activating internal operation or calculation will cause BUSY_N falling to LOW. After actions completed, BUSY_N will return to HIGH.

| Command | Refresh Restriction | BUSY_N flag |
|------------|---------------------|-------------|
| PSR | X | No action |
| PWR | X | No action |
| POF | X | Flag |
| PFS | X | No action |
| PON | X | Flag |
| PMES | X | Flag |
| BTST | X | No action |
| DSLP | X | Flag |
| AUTO | X | Flag |
| DTM1 | X | No action |
| DSP | X | Flag |
| DRF | X | Flag |
| DTM2 | X | No action |
| DUSPI_EN | X | No action |
| LUTC | X | No action |
| LUTWW | X | No action |
| LUTWB/LUTW | X | No action |
| LUTBW/LUTR | X | No action |
| LUTBB/LUTB | X | No action |
| LUTOPT | X | No action |
| KWOPT | X | No action |
| PLL | X | No action |
| TSC | X | Flag |
| TSE | X | No action |
| TSW | X | No action |
| TSR | X | No action |
| PBC | X | No action |
| CDI | X | No action |
| LPD | X | Flag |
| EVS | X | No action |
| TCON | X | No action |
| TRES | X | No action |
| GSST | X | No action |
| REV | V | No action |
| FLG | | No action |
| AMV | X | Flag |
| VV | V | No action |
| VDCS | X | No action |
| PTL | X | No action |
| PTIN | X | No action |
| PTOUT | X | No action |
| PGM | X | No action |
| APG | X | Flag |
| ROTP | X | No action |
| CCSET | X | No action |
| PWS | X | No action |
| LVSEL | X | No action |
| TSSET | X | No action |
| TSBDRY | X | No action |
| TODDICT | Λ | NO action |

V: Accepted, X: Ignored

All-in-one driver IC w/ Timing Controller

OTP ADDRESS MAPPING

The size of the internal One Time Programmable (OTP) memory is 6K bytes, and the address is from 0x000 to 0x17FF. The unprogrammed bit is logic 1. Only the bit at logic 1 can be programmed to logic 0, but the bit at logic 0 can't be changed to logic 1.

There is one area (0x0BF0~0x0BFF) reserved for UltraChip only. Write all 0xFF of data to skip the area. The recommended voltage of VPP during programming is 7.75V. In conditions other than programming, let VPP float or be connected to GND. The maximum current of VPP during programming is 5mA.

There are 2 banks in the internal OTP, and each bank has 3K bytes storage memory. The formats of each bank are the same, and the selection of bank is controlled by Check Code (0x0000 and 0x0C00). The 2 banks are used for two times programming.

Table 1: OTP Address Map

| | Bank0 | | Bank1 |
|---------------|-----------------------------------|---------------|-----------------------------------|
| Address | Content | Address | Content |
| 0x0000 | Check Code (0xA5) | 0x0C00 | Check Code (0xA5) |
| 0x0001 | Temperature Boundary 0 (TB0) | 0x0C01 | Temperature Boundary 0 (TB0) |
| 0x0002 | Temperature Boundary 1 (TB1) | 0x0C02 | Temperature Boundary 1 (TB1) |
| 0x0003 | Temperature Boundary 2 (TB2) | 0x0C03 | Temperature Boundary 2 (TB2) |
| 0x0004 | Temperature Boundary 3 (TB3) | 0x0C04 | Temperature Boundary 3 (TB3) |
| 0x0005 | Temperature Boundary 4 (TB4) | 0x0C05 | Temperature Boundary 4 (TB4) |
| 0x0006 | Temperature Boundary 5 (TB5) | 0x0C06 | Temperature Boundary 5 (TB5) |
| 0x0007 | Temperature Boundary 6 (TB6) | 0x0C07 | Temperature Boundary 6 (TB6) |
| 8000x0 | Temperature Boundary 7 (TB7) | 0x0C08 | Temperature Boundary 7 (TB7) |
| 0x0009 | Temperature Boundary 8 (TB8) | 0x0C09 | Temperature Boundary 8 (TB8) |
| 0x000A | Temperature Boundary 9 (TB9) | 0x0C0A | Temperature Boundary 9 (TB9) |
| 0x000B | Temperature Boundary 10 (TB10) | 0x0C0B | Temperature Boundary 10 (TB10) |
| 0x000C~0x001E | Command Defatult Setting (Note 1) | 0x0C0C~0x0C1E | Command Defatult Setting (Note 1) |
| 0x001F~0x0048 | Border LUT | 0x0C1F~0x0C48 | Border LUT |
| 0x0049~0x013F | TR0 (Note 2) | 0x0C49~0x0D3F | TR0 (Note 2) |
| 0x0140~0x0236 | TR1 (Note 2) | 0x0D40~0x0E36 | TR1 (Note 2) |
| 0x0237~0x032D | TR2 (Note 2) | 0x0E37~0x0F2D | TR2 (Note 2) |
| 0x032E~0x0424 | TR3 (Note 2) | 0x0F2E~0x1024 | TR3 (Note 2) |
| 0x0425~0x051B | TR4 (Note 2) | 0x1025~0x111B | TR4 (Note 2) |
| 0x051C~0x0612 | TR5 (Note 2) | 0x111C~0x1212 | TR5 (Note 2) |
| 0x0613~0x0709 | TR6 (Note 2) | 0x1213~0x1309 | TR6 (Note 2) |
| 0x070A~0x0800 | TR7 (Note 2) | 0x130A~0x1400 | TR7 (Note 2) |
| 0x0801~0x08F7 | TR8 (Note 2) | 0x1401~0x14F7 | TR8 (Note 2) |
| 0x08F8~0x09EE | TR9 (Note 2) | 0x14F8~0x15EE | TR9 (Note 2) |
| 0x09EF~0x0AE5 | TR10 (Note 2) | 0x15EF~0x16E5 | TR10 (Note 2) |
| 0x0AE6~0x0BDC | TR11 (Note 2) | 0x16E6~0x17DC | TR11 (Note 2) |
| 0x0BDD~0x0BDF | Production Version[23:0] | 0x17DD~0x17DF | Production Version[23:0] |
| 0x0BE0~0x0BE2 | LUT Version[23:0] | 0x17E0~0x17E2 | LUT Version[23:0] |
| 0x0BE3~0x0BEF | Blank (Note 3) | 0x17E3~0x17FF | Blank (Note 3) |
| 0x0BF0~0x0BFF | Reserved (Note 3) | | |

Note:

- (1) See section "COMMAND DEFAULT SETTING" for more detail.
- (2) See section "LUT FORMAT IN OTP" for more detail.
- (3) "Blank" is available for user and "Reserved" is for Ultrachip definition.

All-in-one driver IC w/ Timing Controller

TEMPERATURE RANGE

The temperature selection mechanism consists of a less-than-or-equal-to operator and 11 temperature boundary settings (TBx) to determine 12 temperature ranges. The sequence of mechanism is from TB0 to TB10, as shown below. If less than 12 tempeature ranges are used, the last TBx must be set to 0x7F to end the mechanism.

| Procedure Order | Comparison Condition | Action & Segment Selection |
|--------------------------|-------------------------|--|
| 1-0. Read 0x0000 | Content = 0xA5 ? | Yes: Jump to Procedure 2 (Bank0), No: Jump to Procedure 1-1 |
| 1-1. Read 0x0C00 | Content = 0xA5 ? | Yes: Jump to Procedure 2 (Bank1), No: Stop Refresh |
| 2. Read 0x0001 / 0x0C01 | Real Temperature ≤ TB0 | Use TR0's table & setting, exit |
| 3. Read 0x0002 / 0x0C02 | Real Temperature ≤ TB1 | Use TR1's table & setting, exit |
| 4. Read 0x0003 / 0x0C03 | Real Temperature ≤ TB2 | Use TR2's table & setting, exit |
| 5. Read 0x0004 / 0x0C04 | Real Temperature ≤ TB3 | Use TR3's table & setting, exit |
| 6. Read 0x0005 / 0x0C05 | Real Temperature ≤ TB4 | Use TR4's table & setting, exit |
| 7. Read 0x0006 / 0x0C06 | Real Temperature ≤ TB5 | Use TR5's table & setting, exit |
| 8. Read 0x0007 / 0x0C07 | Real Temperature ≤ TB6 | Use TR6's table & setting, exit |
| 9. Read 0x0008 / 0x0C08 | Real Temperature ≤ TB7 | Use TR7's table & setting, exit |
| 10. Read 0x0009 / 0x0C09 | Real Temperature ≤ TB8 | Use TR8's table & setting, exit |
| 11. Read 0x000A / 0x0C0A | Real Temperature ≤ TB9 | Use TR9's table & setting, exit |
| 12. Read 0x000B / 0x0C0B | Real Temperature ≤ TB10 | Use TR10's table & setting, exit |
| 13. Other | Real Temperature > TB10 | Use TR11's table & setting, finish |

Note: TRx's content is defined in "LUT FORMAT IN OTP" section.

Example:

If temperature = -20 °C, TR0 is selected.

If temperature = -10 °C, TR1 is selected.


If temperature = 0 °C, TR2 is selected.

If temperature = 20 °C, TR4 is selected.

If temperature = $40 \, ^{\circ}$ C, TR5 is selected.

If temperature > $40 \, ^{\circ}\text{C}$, TR5 is selected.

| OTP Address | Content | |
|-------------|---------|----------|
| 002h | 0xF1 | (-15 °C) |
| 003h | 0xFB | (-5 °C) |
| 004h | 0x00 | (0 °C) |
| 005h | 0x0A | (10 °C) |
| 006h | 0x1E | (30 °C) |
| 007h | 0x7F | - |

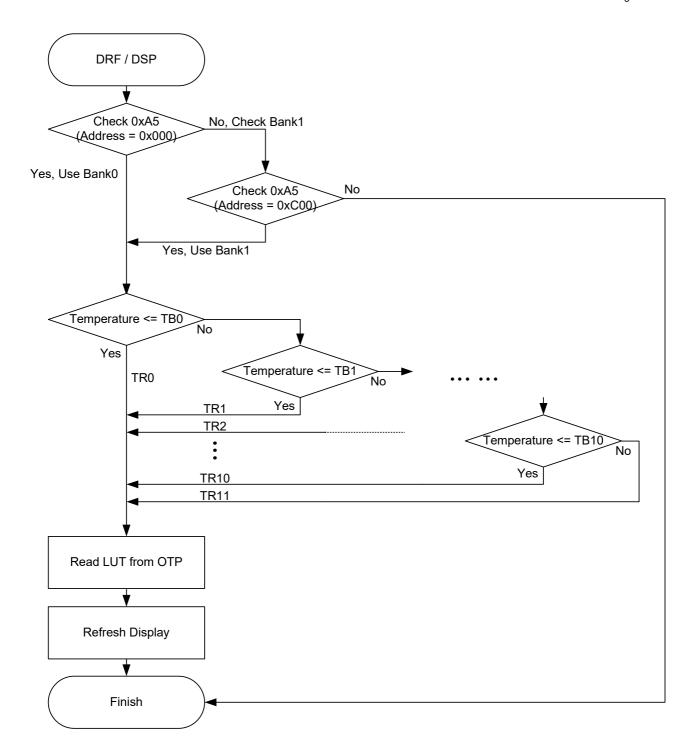

Temperature Selection Mechanism

All-in-one driver IC w/ Timing Controller

COMMAND DEFAULT SETTING

This function can modify the default value of command registers by the OTP content between address 0x000C~0x001E (or 0x0C0C~0x0C1E). The data of address 0x000C (or 0x0C0C) is the enable key of the function. Changing default value function is used to reduce the initial code length executed by the microcontroller.

| Address (Hex) | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | Command | Registers | Original |
|---------------|----|----|----|----|----|----|----|----|------------|--------------------------------|----------|
| 0x000C | # | # | # | # | # | # | # | # | Check Code | 0xA5 (Enable Key) | |
| 0x000D | | | # | # | # | # | | | PSR | REG, KW/R, UD, SHL | 0x0F |
| 0x000E | # | # | # | # | # | # | # | # | | BT_PHA[7:0] | 0x17 |
| 0x000F | # | # | # | # | # | # | # | # | BTST | BT_PHB[7:0] | 0x17 |
| 0x0010 | | | # | # | # | # | # | # | ВІЗІ | BT_PHC1[5:0] | 0x17 |
| 0x0011 | # | - | # | # | # | # | # | # | | PHC2EN, BT_PHC2[5:0] | 0x17 |
| 0x0012 | | | | | | | # | # | KWOPT | ATRED, NORED | 0x00 |
| 0x0013 | # | | # | # | # | | # | # | CDI | BDZ, BDV[1:0], N2OCP, DDX[1:0] | 0x31 |
| 0x0014 | | | | | # | # | # | # | CDI | CDI[3:0] | 0x07 |
| 0x0015 | # | # | # | # | # | # | # | # | TCON | S2G[3:0], G2S[3:0] | 0x22 |
| 0x0016 | | # | # | # | # | # | # | # | | HRES[9:3] | 0x64 |
| 0x0017 | | | | | | | # | # | TRES | V/DES[0:0] | 0x02 |
| 0x0018 | # | # | # | # | # | # | # | # | | VRES[9:0] | 0x58 |
| 0x0019 | | # | # | # | # | # | # | # | | HST[9:3] | 0x00 |
| 0x001A | | | | | | | # | # | GSST | \/CT[0.0] | 0x00 |
| 0x001B | # | # | # | # | # | # | # | # | | VST[9:0] | 0x00 |
| 0x001C | # | # | # | # | # | # | # | # | PWS | VCOM_W[3:0], SD_W[3:0] | 0x00 |
| 0x001D | | - | | | | | # | # | LVSEL | LVD_SEL[1:0] | 0x03 |
| 0x001E | # | # | # | # | # | # | # | # | TSBDRY | TSBDRY_PHC2[7:0] | 0x00 |

All-in-one driver IC w/ Timing Controller

LUT FORMAT IN OTP

There are 12 TRs (temperature range) in a bank. Each TR has independent frame rate, voltage, XON settings, KW option enable setting and LUTs. The fomat of LUT is different in different mode. In KWR mode, there are only 4 LUTs including LUTC, LUTR, LUTW and LUTB in TRs. LUTC, LUTR, LUTW and LUTB have 10 states. In KW mode, there are 5 LUTs including LUT, LUTWW, LUTBW, LUTWB and LUTBB in TRs. All LUTs have 7 states. Besides, there is 1 common border LUT, regardless of temperature range, in KWR mode or KW mode.

Common Border LUT Table

| Common Border | KWR Mode or | KW Mode |
|---------------|-----------------------------------|---------|
| | Address (Bank0 / Bank1) | Content |
| | 0x001F ~ 0x0048 / 0x0C1F ~ 0x0C48 | LUTBD |


Separate VCOM LUT and Source LUT (Example: Bank0 / TR0)

| | | | - | | | | | |
|-----|---------|---|---------|---------------------------------------|--|--|--------|------------|
| | | KWR Mode (KW/R=0) | | KW Mode (KW/R=1) | | | | |
| | Address | Content | Address | Content | | | | |
| | 0x0049 | Frame Rate[3:0], VCEND, VG Voltage[2:0] | 0x0049 | Frame Rate[3:0],VCEND,VG Voltage[2:0] | | | | |
| | 0x004A | BDEND[1:0], VDH Voltage[5:0] | 0x004A | BDEND[1:0], VDH Voltage[5:0] | | | | |
| | 0x004B | XON[9:8], VDL Voltage [5:0] | 0x004B | XON[9:8], VDL Voltage [5:0] | | | | |
| | 0x004C | KWE[9:8], VDHR Voltage [5:0] | 0x004C | KWE[9:8], VDHR Voltage [5:0] | | | | |
| | 0x004D | XON [7:0] | 0x004D | XON [7:0] | | | | |
| | 0x004E | 0b, VCOM_DC[6:0] | 0x004E | 0b, VCOM_DC[6:0] | | | | |
| | 0x004F | KWE[7:0] | 0x004F | LUTC | | | | |
| | 0x0050 | LUTC | | (7 states) | | | | |
| | | (10 states) | 0x0078 | (. 513155) | | | | |
| TDO | 0x008B | (** *********************************** | 0x0079 | LUTWW | | | | |
| TR0 | | | | 0.000 | | | 0x00A2 | (7 states) |
| | 0x008C | LUTR | 0x00A3 | LUTKW | | | | |
| | 0x00C7 | (10 states) | | (7 states) | | | | |
| | 0,0007 | | 0x00CC | (1 states) | | | | |
| | | | 0x00CD | LUTWK | | | | |
| | 0x00C8 | LUTW | 0x00F6 | (7 states) | | | | |
| | 0x0103 | (10 states) | 0x00F7 | | | | | |
| | 0.0100 | | | LUTKK | | | | |
| | 0x0104 | LUTK | 0x0120 | (7 states) | | | | |
| | | (10 states) | 0x0121 | | | | | |
| | 0x013F | (10 010100) | | Reserved | | | | |
| | | | 0x013F | | | | | |

All-in-one driver IC w/ Timing Controller

DEEP SLEEP MODE

After deep sleep command (R07H) is transmitted, UC8179 enter "Deep Sleep Mode", and leaves by RST_N falling. In "Deep Sleep Mode", the control signals are recommended tied to 0v to avoid IO leakage current. And the die must be keep away from light which causes photoelectric effect to make internal nodes unstable.

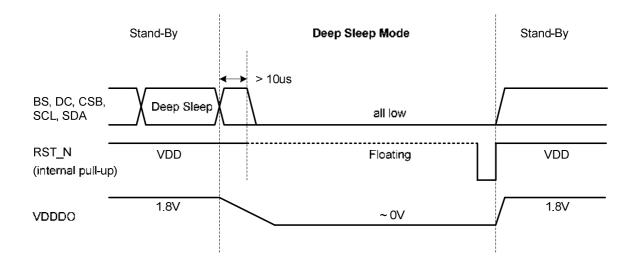

All-in-one driver IC w/ Timing Controller

PANEL BREAK CHECK

The panel break check (PBC) function is accomplished by testing the connection of the ITO along panel edge. If the panel is broken, the loop ITO may be cut off. The connection check is judged by signal transmission from CHKGO to CHKGI.

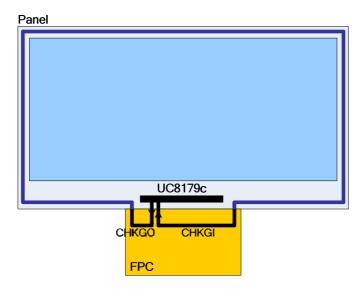


Figure: Panel break check layout example


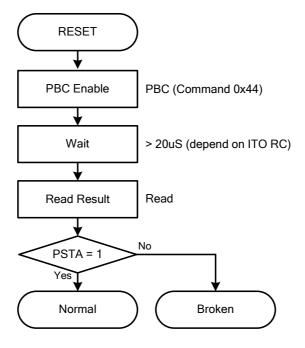


Figure: Panel Break Check (PBC) Sequence

All-in-one driver IC w/ Timing Controller


CASCADE APPLICATION CIRCUIT

All commands sent to **Master** must be also sent to **Slave** except for data writing (DTM1 and DTM2). The display data must be separated to two parts, one is for **Master** and another is for **Slave**. They are transmitted to **Master** and **Slave** individually by using CSB1 and CSB2.

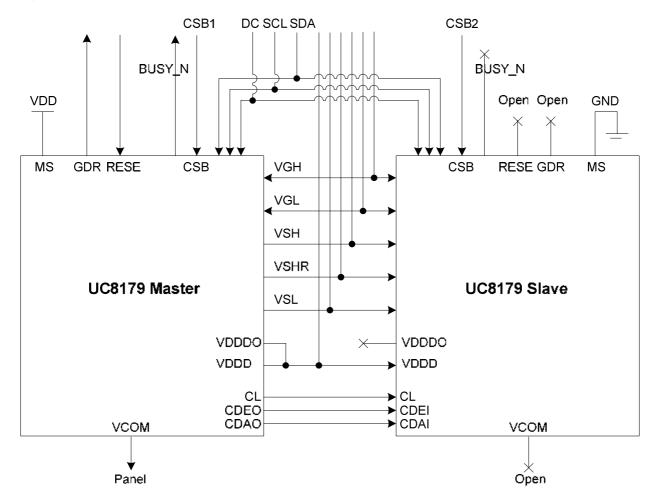

All-in-one driver IC w/ Timing Controller

BOOSTER APPLICATION CIRCUIT

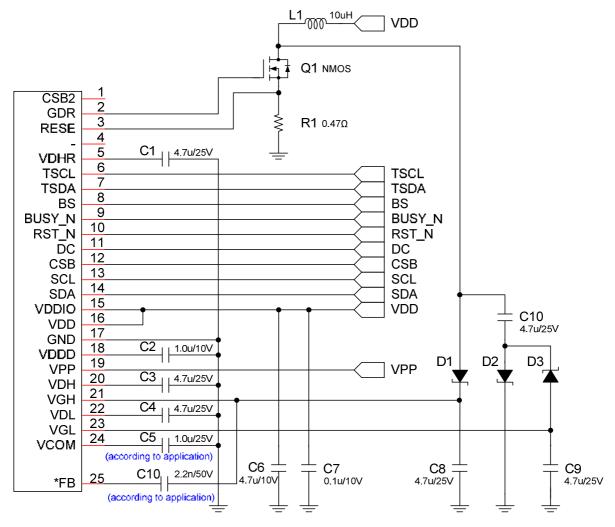

Note:

1. The capacitor value of VGH/VGL must be equal or more than the one of VDH/VDL/VDHR.

Recommended Device

1. Switch MOS NMOS: Vishay Si1308EDL $(V_{DS} > 20V, I_D > 500 \text{mA}, V_{GS}(\text{th}) < 1.5V, C_{ISS} < 200 \text{pF}, R_{DS}(\text{on}) < 400 \text{m}\Omega)$

2. Schottky Diode: OnSemi MBR0530 (VR > 20V, IF > 500mA, IR < 1mA @ VR=15V, $TA=100^{\circ}C$)

3. Inductance: Bourns SRN2010TA-1R5Y (DCR<0.5Ω, Isat>1.2A @ 25 °C)

Recommended Resistor

| Item | Pins | Resistance |
|------------|--|------------|
| Powers | VDD, VDDA, VDDIO, GND, GNDA, VDM | < 10 Ω |
| Boosters | VGL, VGH, GDR, RESE | < 10 Ω |
| Regulators | VDH, VDL, VDHR, VCOM, VDDD, VDDDO | < 10 Ω |
| Logics | MS, BS, CSB, SCL, SDA, SDA1, GDR, etc. | < 50 Ω |
| OTP | VPP | < 20 Ω |

All-in-one driver IC w/ Timing Controller

ABSOLUTE MAXIMUM RATINGS

| Signal | Item | Min | Max. | Unit |
|------------------|----------------------------------|------|-----------|------|
| Vdd, Vddio, Vdda | Logic Supply voltage | -0.3 | +6.0 | V |
| VPP | OTP programming voltage | -0.3 | +8.0 | V |
| Vı | Digital input range | -0.3 | VDDIO+0.3 | V |
| VGH-VGL | Supply range | - | +44.0 | V |
| Source | | | | |
| VDH | Analog supply voltage – positive | + | 16 | V |
| VDL | Analog supply voltage negative | -1 | 6 | V |
| VDHR | Analog supply voltage – positive | + | 16 | V |
| Gate | | | | |
| VGH | Analog supply voltage – positive | -0.3 | +22 | V |
| VGL | Analog supply voltage negative | -22 | 0.3 | V |
| Тѕтс | Storage temperature range | -55 | +125 | °C |

Warning:

If ICs are stressed beyond those listed above "absolute maximum ratings", they may be permanently destroyed. These are stress ratings only, and functional operation of the device at these or any other condition beyond those indicated under "recommended operating conditions" is not implied. Exposure to absolute maximum rated conditions for extended periods may affect device reliability.

All-in-one driver IC w/ Timing Controller

DC CHARACTERISTICS

| Symbol | Parameter | Conditions | MIN. | TYP. | MAX. | Unit | |
|---------|----------------------------|--|-----------|------|---------|------|--|
| VDDIO | IO supply voltage | | 2.3 | 3.3 | 3.6 | V | |
| VDD | Supply voltage | | 2.3 | 3.3 | 3.6 | V | |
| Vdda | DCDC driver supply voltage | | 2.3 | 3.3 | 3.6 | V | |
| VIL | LOW Level input voltage | Digital input pins | 0 | | 0.3xVdd | V | |
| ViH | HIGH Level input voltage | Digital input pins | 0.7xVddio | | VDDIO | V | |
| Voн | HIGH Level output voltage | Digital input pins, IoH=400∪A | VDDIO-0.4 | | | V | |
| Vol | LOW Level Output voltage | Digital input pins, IoL=-400∪A | 0 | | 0.4 | V | |
| lin | Input leakage current | Digital input pins except pull-up, pull-down pin | -1 | | 1 | uA | |
| Rın | Pull-up/down impedance | | | 200 | | ΚΩ | |
| Тор | Operating temperature | | -30 | | 85 | °C | |
| dVGH | VGH Supply voltage dev | | -400 | 0 | +400 | mV | |
| dVGL | VGL Supply voltage dev | | -400 | 0 | +400 | mV | |
| VGH-VGL | Voltage Range of VGH - VGL | | | | 40 | V | |
| dVDH | Supply voltage dev | | -200 | 0 | +200 | mV | |
| dVDL | Supply voltage dev | | -200 | 0 | +200 | mV | |
| dVDHR | Supply voltage dev | | -200 | 0 | +200 | mV | |
| dVCOM | Supply voltage dev | | -200 | 0 | +200 | mV | |
| Ron | Driver Output Resistance | For source driver, Top=25°C, Vout = ±15V | | 16.0 | 38.4 | KO | |
| KON | Driver Output Resistance | For gate driver, Top=25°C, Vout = ±20V | | 4.0 | 8 | - ΚΩ | |

VDD=VDDA=VDDIO=3.0V, TOP=25.0 °C

| Symbol | Parameter | Conditions | MIN. | TYP. | MAX. | Unit |
|--------|---|--------------------------|------|------|--|------|
| | Digital deep sleep current | VDDD OFF | | 0.3 | 0.5 | uA |
| IVDD | Digital stand-by current | All stopped | | 8.2 | 10.0 | uA |
| | Digital operating current | | | | 0.5 | mA |
| | IO deep sleep current | VDDD OFF | | 0.1 | 0.3 | uA |
| IVDDIO | IO stand-by current | Booster OFF | | 2.5 | 4.0 | uA |
| | IO operating current | No load | | | 0.5 10.0 0.1 0.3 4.0 0.1 0.3 20.0 | mA |
| | DCDC deep sleep current | VDDD OFF | | 0.1 | 0.3 | uA |
| | DCDC stand-by current | Booster OFF | | 15.5 | 20.0 | uA |
| | | Source output VDH/VDL, | | | 0.5 10.0 0.1 0.3 4.0 0.1 0.3 20.0 | |
| | | Duty=0.5, Period =126us | | | | |
| | | VCOM DC | | | | |
| IVDDA | | No load | | | | |
| | DCDC operating current | Source output VDH/VDL, | | | | mA |
| | | Duty=0.5, Period =126us, | | | | |
| | | VCOM DC | | | 20.0 | |
| | | External cap: 415pF, | | | | |
| | Digital operating current IO deep sleep current IO stand-by current IO operating current DCDC deep sleep current DCDC stand-by current DCDC stand-by current Booster OFF Source output VDH/\(\text{Duty=0.5}\), Period =12 VCOM DC No load DCDC operating current DCDC operating current | NMOS=340pF | | | | |

All-in-one driver IC w/ Timing Controller

AC CHARACTERISTICS

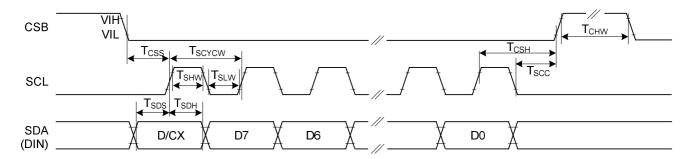


Figure: 3-wire Serial Interface Characteristics (Write mode)

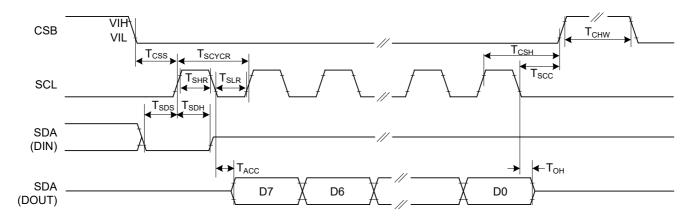


Figure: 3-wire Serial Interface Characteristics (Read mode)

| Symbol | Signal / Parameter | Conditions | Min. | Тур. | Max. | Unit |
|--------------------|--------------------|-----------------------------|------|------|------|------|
| Tcss | | Chip select setup time | 60 | | | ns |
| Тсѕн | CSB | Chip select hold time | 65 | | | ns |
| Tscc | COD | Chip select setup time | 20 | | | ns |
| Tchw | | Chip select setup time | 40 | | | ns |
| T _{SCYCW} | | Serial clock cycle (Write) | 100 | | | ns |
| T _{SHW} | | SCL "H" pulse width (Write) | 35 | | | ns |
| T _{SLW} | SCL | SCL "L" pulse width (Write) | 35 | | | ns |
| Tscycr | SCL | Serial clock cycle (Read) | 150 | | | ns |
| T _{SHR} | | SCL "H" pulse width (Read) | 60 | | | ns |
| T _{SLR} | | SCL "L" pulse width (Read) | 60 | | | ns |
| T _{SDS} | SDA | Data setup time | 30 | | | ns |
| T _{SDH} | (DIN) | Data hold time | 30 | | | ns |
| T _{ACC} | SDA | Access time | | | 50 | ns |
| Тон | (DOUT) | Output disable time | 15 | | | ns |

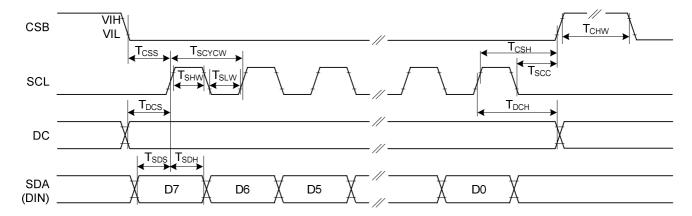


Figure: 4-wire Serial Interface Characteristics (Write mode)

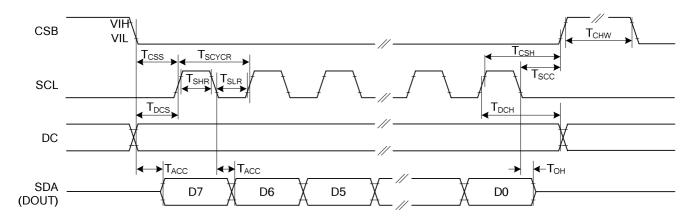


Figure: 4-wire Serial Interface Characteristics (Read mode)

| Symbol | Signal / Parameter | Conditions | Min. | Тур. | Max. | Unit |
|--------------------|--------------------|-----------------------------|------|------|------|------|
| Tcss | | Chip select setup time | 60 | | | ns |
| Тсѕн | CSB | Chip select hold time | 65 | | | ns |
| Tscc | CSB | Chip select setup time | 20 | | | ns |
| T _{CHW} | | Chip select setup time | 40 | | | ns |
| Tscycw | | Serial clock cycle (Write) | 100 | | | ns |
| Tshw | | SCL "H" pulse width (Write) | 35 | | | ns |
| T _{SLW} | SCL | SCL "L" pulse width (Write) | 35 | | | ns |
| T _{SCYCR} | SCL | Serial clock cycle (Read) | 150 | | | ns |
| T _{SHR} | | SCL "H" pulse width (Read) | 60 | | | ns |
| T _{SLR} | | SCL "L" pulse width (Read) | 60 | | | ns |
| T _{DCS} | DC | DC setup time | 30 | | | ns |
| Тосн | DC | DC hold time | 30 | | | ns |
| T _{SDS} | SDA | Data setup time | 30 | | | ns |
| T _{SDH} | (DIN) | Data hold time | 30 | | | ns |
| T _{ACC} | SDA | Access time | | | 50 | ns |
| Тон | (DOUT) | Output disable time | 15 | | | ns |

All-in-one driver IC w/ Timing Controller

PHYSICAL DIMENSIONS

Die Size: $(18512 \mu M \pm 40 \mu M) x (1142 \mu M \pm 40 \mu M)$

Die Thickness: $300 \mu M \pm 20 \mu M$

Die TTV: $(D_{MAX} - D_{MIN})$ within die $\leq 2\mu M$


Bump Height: $15 \mu M \pm 3 \mu M$

 $(H_{MAX}-H_{MIN})$ within die $\leq 2\mu M$


Bump Size: $12 \mu M \times 100 \mu M \pm 2 \mu M$


Bump Area: $1200 \mu M^2$ Bump Pitch: $13 \mu M$ Bump Space: $1 \mu M \pm 3 \mu M$ Hardness: $65 Hv \pm 15 Hv$

Shear: / 5g/Mil²
Coordinate origin: Chip center
Pad reference: Pad center

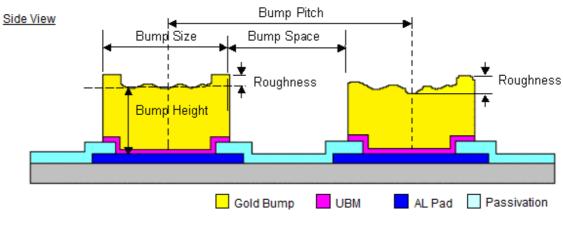

Bump Height Coplanarity within Die

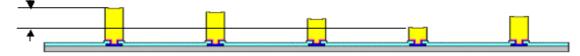


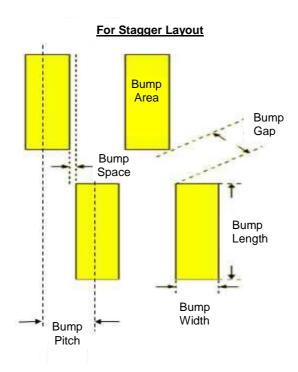

All-in-one driver IC w/ Timing Controller


ALIGNMENT MARK INFORMATION


Location:

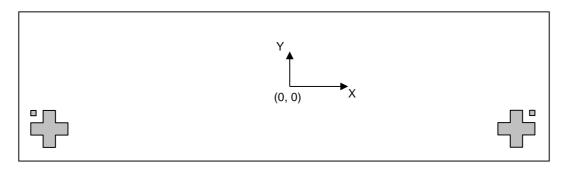

D-Left Mark D-Right Mark

Shapes and Points:

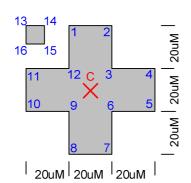

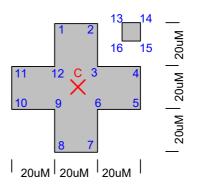

Point Coordinates:

| | D-Left | t Mark | D-Righ | t Mark |
|-------|--------|--------|--------|--------|
| Point | X | Υ | X | Υ |
| C(X) | -9183 | -498 | 9183 | -498 |
| 1 | -9193 | -468 | 9173 | -468 |
| 2 | -9173 | -468 | 9193 | -468 |
| 3 | -9173 | -488 | 9193 | -488 |
| 4 | -9153 | -488 | 9213 | -488 |
| 5 | -9153 | -508 | 9213 | -508 |
| 6 | -9173 | -508 | 9193 | -508 |
| 7 | -9173 | -528 | 9193 | -528 |
| 8 | -9193 | -528 | 9173 | -528 |
| 9 | -9193 | -508 | 9173 | -508 |
| 10 | -9213 | -508 | 9153 | -508 |
| 11 | -9213 | -488 | 9153 | -488 |
| 12 | -9193 | -488 | 9173 | -488 |
| 13 | -9213 | -468 | 9203 | -468 |
| 14 | -9203 | -468 | 9213 | -468 |
| 15 | -9203 | -478 | 9213 | -478 |
| 16 | -9213 | -478 | 9203 | -478 |

All-in-one driver IC w/ Timing Controller

PAD COORDINATES

| # | Pad | Х | Υ | W | Н |
|----|-------|----------------|--------------|----------|----------|
| 1 | DUMMY | -9062 | -515 | 26 | 70 |
| 2 | DUMMY | -9016 | -515 | 26 | 70 |
| 3 | VCOM | -8970 | -515 | 26 | 70 |
| 4 | VCOM | -8924 | -515 | 26 | 70 |
| 5 | VCOM | -8878 | -515 | 26 | 70 |
| 6 | VCOM | -8832 | -515 | 26 | 70 |
| 7 | VCOM | -8786 | -515 | 26 | 70 |
| 8 | VCOM | -8740 | -515 | 26 | 70 |
| 9 | VCOM | -8694 | -515 | 26 | 70 |
| 10 | VCOM | -8648 | -515 | 26 | 70 |
| 11 | VCOM | -8602 | -515 | 26 | 70 |
| 12 | VCOM | -8556 | -515 | 26 | 70 |
| 13 | VCOM | -8510 | -515 | 26 | 70 |
| 14 | VCOM | -8464 | -515 | 26 | 70 |
| 15 | VCOM | -8418 | -515 | 26 | 70 |
| 16 | VCOM | -8372 | -515 -515 | 26 | 70 |
| 17 | VCOM | -8326 | -515 -515 | 26 | 70 |
| 18 | VCOM | -8280 | -515 -515 | 26 | 70 |
| 19 | VCOM | | | | |
| 20 | VCOM | -8234 -8188 | -515 -515 | 26 26 | 70 70 |
| 21 | VCOM | -8142 | -515 | 26 | 70 |
| 22 | VDM | -8096 | -515 -515 | 26 | 70 |
| 23 | VGL | -8050 | -515 -515 | 26 | 70 |
| 24 | VGL | -8004 | -515 -515 | 26 | 70 |
| 25 | VGL | -7958 | -515 | 26 | 70 |
| 26 | VGL | -7912 | -515 | 26 | 70 |
| 27 | VGL | -7866 | -515 | 26 | 70 |
| 28 | VGL | -7820 | -515 | 26 | 70 |
| 29 | VGL | -7774 | -515 -515 | 26 | 70 |
| 30 | VGL | -7728 | -515 -515 | 26 | 70 |
| 31 | VGL | -7682 | -515 | 26 | 70 |
| 32 | VGL | -7636 | -515 | 26 | 70 |
| 33 | VGL | -7590 | -515 -515 | 26 | 70 |
| 34 | VGL | -7544 | -515 -515 | 26 | 70 |
| 35 | VGL | -7498 | -515 | 26 | 70 |
| 36 | VGL | -7452 | -515 | 26 | 70 |
| 37 | VDM | -7406 | -515 | 26 | 70 |
| 38 | VDL | -7360 | -515 | 26 | 70 |
| 39 | VDL | -7314 | -515 | 26 | 70 |
| 40 | VDL | -7268 | -515 | 26 | 70 |
| 41 | VDL | -7222 | -515 | 26 | 70 |
| 42 | VDL | -7176 | -515 | 26 | 70 |
| 43 | VDL | -7130 | -515 | 26 | 70 |
| 44 | VDL | -7084 | -515 | 26 | 70 |
| 45 | VDL | -7038 | -515 | 26 | 70 |
| 46 | VDL | -6992 | -515 | 26 | 70 |
| 47 | VDL | -6946 | -515 | 26 | 70 |
| 48 | VDL | -6900 | -515 | 26 | 70 |
| 49 | VDL | -6854 | -515 | 26 | 70 |
| 50 | GNDA | -6808 | -515 | 26 | 70 |
| 51 | VGH | -6762 | -515 | 26 | 70 |
| 52 | VGH | -6716 | -515 | 26 | 70 |
| 53 | VGH | -6670 | -515 | 26 | 70 |
| 54 | VGH | -6624 | -515 | 26 | 70 |
| 55 | VGH | -6578 | -515 | 26 | 70 |
| 56 | VGH | -6532 | -515 | 26 | 70 |
| 57 | VGH | -6486 | -515 | 26 | 70 |
| | | 2.00 | | | |

| # | Pad | X | Υ | W | Н |
|------------|----------------|----------------|--------------|----------|----------|
| 58 | VGH | -6440 | -515 | 26 | 70 |
| 59 | VGH | -6394 | -515 | 26 | 70 |
| 60 | VGH | -6348 | -515 | 26 | 70 |
| 61 | VGH | -6302 | -515 | 26 | 70 |
| 62 | VGH | -6256 | -515 | 26 | 70 |
| 63 | VGH | -6210 | -515 | 26 | 70 |
| 64 | VGH | -6164 | -515 | 26 | 70 |
| 65 | GNDA | -6118 | -515 | 26 | 70 |
| 66 | VDH | -6072 | -515 | 26 | 70 |
| 67 | VDH | -6026 | -515 | 26 | 70 |
| 68 | VDH | -5980 | -515 | 26 | 70 |
| 69 | VDH | -5934 | -515 | 26 | 70 |
| 70 | VDH | -5888 | -515 | 26 | 70 |
| 71 | VDH | -5842 | -515 | 26 | 70 |
| 72 | VDH | -5796 | -515 | 26 | 70 |
| 73 | VDH | -5750 | -515 | 26 | 70 |
| 74 | VDH | -5704 | -515 | 26 | 70 |
| 75 | VDH | -5658 | -515 | 26 | 70 |
| 76 | VDH | -5612 | -515 | 26 | 70 |
| 77 | VDH | -5566 | -515 | 26 | 70 |
| 78 | GNDA | -5520 | -515 | 26 | 70 |
| 79 | VPP | -5474 | -515 | 26 | 70 |
| 80 | VPP | -5428 | -515 | 26 | 70 |
| 81 | VPP | -5382 | -515 | 26 | 70 |
| 82 | VPP | -5336 | -515 | 26 | 70 |
| 83 | VPP | -5290 | -515 | 26 | 70 |
| 84 | VPP | -5244 | -515 | 26 | 70 |
| 85 | VPP | -5198 | -515 | 26 | 70 |
| 86 | VPP | -5152 | -515 | 26 | 70 |
| 87 | VPP | -5106 | -515 | 26 | 70 |
| 88 | VPP | -5060 | -515 | 26 | 70 |
| 89 | DUMMY | -5014 | -515 | 26 | 70 |
| 90 | DUMMY | -4968 | -515 | 26 | 70 |
| 91 | DUMMY | -4922 | -515 | 26 | 70 |
| 92 | DUMMY | -4876 | -515 | 26 | 70 |
| 93 | DUMMY | -4830 | -515 | 26 | 70 |
| 94 | DUMMY | -4784 | -515 | 26 | 70 |
| 95 | DUMMY | -4738 | -515 | 26 | 70 |
| 96 | DUMMY | -4692 | -515 | 26 | 70 |
| 97 | DUMMY | -4646 | -515 | 26 | 70 |
| 98 | DUMMY | -4600 | -515 | 26 | 70 |
| 99 | DUMMY | -4554 | -515 | 26 | 70 |
| 100 | DUMMY | -4508 -4462 | -515 -515 | 26 | 70 |
| 101 | DUMMY | | -515 -515 | 26 | 70 |
| 102 | DUMMY | -4416 4270 | -515 | 26 26 | 70 |
| 103 | VDDDO | -4370 | -515 | | 70 |
| 104 | VDDDO | -4324 4279 | -515 515 | 26 | 70 |
| 105 | VDDDO VDDDO | -4278 4222 | -515 515 | 26 | 70 |
| 106 107 | VDDDO | -4232 -4186 | -515 -515 | 26 26 | 70 70 |
| | VDDDO | -4140 | | 26 | 70 |
| 108 109 | VDDDO | -4140 | -515 -515 | 26 | |
| 110 | VDDDO | -4094 -4048 | | | 70 |
| 111 | VDDD | -4048 | -515 -515 | 26 26 | 70 70 |
| 112 | VDDD | -4002 | -515 -515 | 26 | 70 |
| 113 | VDDD | -3956 | -515 -515 | 26 | 70 |
| 114 | | | | | |
| 114 | VDDD | -3864 | -515 | 26 | 70 |

| # | Pad | Х | Υ | W | Н |
|------------|----------------|----------------|--------------|----------|----------|
| 115 | VDDD | -3818 | -515 | 26 | 70 |
| 116 | VDDD | -3772 | -515 | 26 | 70 |
| 117 | VDDD | -3726 | -515 | 26 | 70 |
| 118 | VDDD | -3680 | -515 | 26 | 70 |
| 119 | GNDA | -3634 | -515 | 26 | 70 |
| 120 | GNDA | -3588 | -515 | 26 | 70 |
| 121 | GNDA | -3542 | -515 | 26 | 70 |
| 122 | GNDA | -3496 | -515 | 26 | 70 |
| 123 | GNDA | -3450 | -515 | 26 | 70 |
| 124 | GNDA | -3404 | -515 | 26 | 70 |
| 125 | GNDA | -3358 | -515 | 26 | 70 |
| 126 | GNDA | -3312 | -515 | 26 | 70 |
| 127 | GNDA | -3266 | -515 | 26 | 70 |
| 128 | GNDA | -3220 | -515 | 26 | 70 |
| 129 | GND | -3174 | -515 | 26 | 70 |
| 130 | GND | -3128 | -515 | 26 | 70 |
| 131 | GND | -3082 | -515 | 26 | 70 |
| 132 | GND | -3036 | -515 | 26 | 70 |
| 133 | GND | -2990 | -515 | 26 | 70 |
| 134 | GND | -2944 | -515 | 26 | 70 |
| 135 | GND | -2898 | -515 | 26 | 70 |
| 136 | GND | -2852 | -515 | 26 | 70 |
| 137 | GND | -2806 | -515 | 26 | 70 |
| 138 | GND | -2760 | -515 | 26 | 70 |
| 139 | VDM | -2714 | -515 | 26 | 70 |
| 140 | VDM | -2668 | -515 | 26 | 70 |
| 141 | VDM | -2622 | -515 | 26 | 70 |
| 142 | VDM | -2576 | -515 | 26 | 70 |
| 143 | VDD | -2530 | -515 | 26 | 70 |
| 144 | VDD | -2484 | -515 | 26 | 70 |
| 145 | VDD | -2438 | -515 | 26 | 70 |
| 146 | VDD | -2392 | -515 | 26 | 70 |
| 147 | VDD | -2346 | -515 | 26 | 70 |
| 148 | VDD | -2300 | -515 | 26 | 70 |
| 149 | VDD | -2254 | -515 | 26 | 70 |
| 150 | VDD | -2208 | -515 | 26 | 70 |
| 151 | VDD | -2162 | -515 | 26 | 70 |
| 152 | VDD | -2116 | -515 | 26 | 70 |
| 153 | VDDIO | -2070 | -515 | 26 | 70 |
| 154 | VDDIO | -2024 | -515 | 26 | 70 |
| 155 | VDDIO | -1978 | -515 | 26 | 70 |
| 156 | VDDIO | -1932 | -515 | 26 | 70 |
| 157 | VDDIO | -1886 | -515 | 26 | 70 |
| 158 | VDDIO | -1840 1704 | -515 | 26 | 70 |
| 159 | VDDIO | -1794 1749 | -515 515 | 26 | 70 |
| 160 161 | VDDIO VDDIO | -1748 -1702 | -515 -515 | 26 | 70 |
| | VDDIO | -1702 -1656 | -515 515 | 26 | 70 |
| 162 163 | VDDIO | -1610 | -515 -515 | 26 | 70 |
| 164 | DUMMY | | -515 -515 | 26 | 70 |
| 165 | DUMMY | -1564 -1518 | -515 -515 | 26 26 | 70 70 |
| 166 | DUMMY | -1472 | -515 -515 | 26 | 70 |
| 167 | DUMMY | -1472 | -515 -515 | 26 | 70 |
| 168 | DUMMY | -1380 | -515 -515 | 26 | 70 |
| 169 | DUMMY | -1334 | -515 -515 | 26 | 70 |
| 170 | DUMMY | -1288 | -515 -515 | 26 | 70 |
| 171 | DUMMY | -1242 | -515 | 26 | 70 |
| 172 | DUMMY | -1196 | -515 | 26 | 70 |
| 173 | DUMMY | -1150 | -515 | 26 | 70 |
| 174 | DUMMY | -1104 | -515 | 26 | 70 |
| / - | DOIVIIVI I | 1104 | 010 | 20 | 7 0 |

| # | Pad | Х | Υ | W | Н |
|-----|-----------|-------|------|----|----|
| 175 | DUMMY | -1058 | -515 | 26 | 70 |
| 176 | DUMMY | -1012 | -515 | 26 | 70 |
| 177 | DUMMY | -966 | -515 | 26 | 70 |
| 178 | DUMMY | -920 | -515 | 26 | 70 |
| 179 | DUMMY | -874 | -515 | 26 | 70 |
| 180 | DUMMY | -828 | -515 | 26 | 70 |
| 181 | DUMMY | -782 | -515 | 26 | 70 |
| 182 | DUMMY | -736 | -515 | 26 | 70 |
| 183 | DUMMY | -690 | -515 | 26 | 70 |
| 184 | DUMMY | -644 | -515 | 26 | 70 |
| 185 | DUMMY | -598 | -515 | 26 | 70 |
| 186 | DUMMY | -552 | -515 | 26 | 70 |
| 187 | DUMMY | -506 | -515 | 26 | 70 |
| 188 | DUMMY | -460 | -515 | 26 | 70 |
| 189 | DUMMY | -414 | -515 | 26 | 70 |
| 190 | DUMMY | -368 | -515 | 26 | 70 |
| 191 | DUMMY | -322 | -515 | 26 | 70 |
| 192 | DUMMY | -276 | -515 | 26 | 70 |
| 193 | DUMMY | -230 | -515 | 26 | 70 |
| 194 | DUMMY | -184 | -515 | 26 | 70 |
| 195 | M2M1_SYNC | -138 | -515 | 26 | 70 |
| 196 | M2M1_SYNC | -92 | -515 | 26 | 70 |
| 197 | M1M2_SYNC | -46 | -515 | 26 | 70 |
| 198 | M1M2_SYNC | 0 | -515 | 26 | 70 |
| 199 | LSYNC | 46 | -515 | 26 | 70 |
| 200 | LSYNC | 92 | -515 | 26 | 70 |
| 201 | MM | 138 | -515 | 26 | 70 |
| 202 | MM | 184 | -515 | 26 | 70 |
| 203 | DUMMY | 230 | -515 | 26 | 70 |
| 204 | DUMMY | 276 | -515 | 26 | 70 |
| 205 | DUMMY | 322 | -515 | 26 | 70 |
| 206 | DUMMY | 368 | -515 | 26 | 70 |
| 207 | DUMMY | 414 | -515 | 26 | 70 |
| 208 | DUMMY | 460 | -515 | 26 | 70 |
| 209 | DUMMY | 506 | -515 | 26 | 70 |
| 210 | DUMMY | 552 | -515 | 26 | 70 |
| 211 | VDDA | 598 | -515 | 26 | 70 |
| 212 | VDDA | 644 | -515 | 26 | 70 |
| 213 | VDDA | 690 | -515 | 26 | 70 |
| 214 | VDDA | 736 | -515 | 26 | 70 |
| 215 | VDDA | 782 | -515 | 26 | 70 |
| 216 | VDDA | 828 | -515 | 26 | 70 |
| 217 | VDDA | 874 | -515 | 26 | 70 |
| 218 | VDDA | 920 | -515 | 26 | 70 |
| 219 | VDDA | 966 | -515 | 26 | 70 |
| 220 | VDDA | 1012 | -515 | 26 | 70 |
| 221 | VDDA | 1058 | -515 | 26 | 70 |
| 222 | VDDA | 1104 | -515 | 26 | 70 |
| 223 | VDDA | 1150 | -515 | 26 | 70 |
| 224 | SDA1 | 1196 | -515 | 26 | 70 |
| 225 | SDA1 | 1242 | -515 | 26 | 70 |
| 226 | SDA | 1288 | -515 | 26 | 70 |
| 227 | SDA | 1334 | -515 | 26 | 70 |
| 228 | SCL | 1380 | -515 | 26 | 70 |
| 229 | SCL | 1426 | -515 | 26 | 70 |
| 230 | GND | 1472 | -515 | 26 | 70 |
| 231 | CSB | 1518 | -515 | 26 | 70 |
| 232 | CSB | 1564 | -515 | 26 | 70 |
| 233 | VDDIO | 1610 | -515 | 26 | 70 |
| 234 | DUMMY | 1656 | -515 | 26 | 70 |

| # | Pad | Х | Υ | W | Н |
|-----|--------|------|--------------|----|----|
| 235 | DUMMY | 1702 | -515 | 26 | 70 |
| 236 | GND | 1748 | -515 -515 | 26 | 70 |
| 237 | DC | 1794 | -515 | 26 | 70 |
| 238 | DC | 1840 | -515 | 26 | 70 |
| 239 | VDDIO | 1886 | -515 | 26 | 70 |
| 240 | DUMMY | 1932 | -515 | 26 | 70 |
| 241 | DUMMY | 1978 | -515 | 26 | 70 |
| 242 | RST N | 2024 | -515 | 26 | 70 |
| 243 | RST_N | 2070 | -515 | 26 | 70 |
| 244 | BUSY N | 2116 | -515 | 26 | 70 |
| 245 | BUSY N | 2162 | -515 | 26 | 70 |
| 246 | GND | 2208 | -515 | 26 | 70 |
| 247 | DUMMY | 2254 | -515 | 26 | 70 |
| 248 | DUMMY | 2300 | -515 | 26 | 70 |
| 249 | DUMMY | 2346 | -515 | 26 | 70 |
| 250 | CL | 2392 | -515 | 26 | 70 |
| 251 | CL | 2438 | -515 | 26 | 70 |
| 252 | CDEO | 2484 | -515 | 26 | 70 |
| 253 | CDEO | 2530 | -515 | 26 | 70 |
| 254 | CDAO | 2576 | -515 | 26 | 70 |
| 255 | CDAO | 2622 | -515 | 26 | 70 |
| 256 | CDAI | 2668 | -515 | 26 | 70 |
| 257 | CDAI | 2714 | -515 | 26 | 70 |
| 258 | CDEI | 2760 | -515 | 26 | 70 |
| 259 | CDEI | 2806 | -515 | 26 | 70 |
| 260 | GND | 2852 | -515 | 26 | 70 |
| 261 | HSYNC | 2898 | -515 | 26 | 70 |
| 262 | HSYNC | 2944 | -515 | 26 | 70 |
| 263 | VDDIO | 2990 | -515 | 26 | 70 |
| 264 | VSYNC | 3036 | -515 | 26 | 70 |
| 265 | VSYNC | 3082 | -515 | 26 | 70 |
| 266 | GND | 3128 | -515 | 26 | 70 |
| 267 | DUMMY | 3174 | -515 | 26 | 70 |
| 268 | VDDIO | 3220 | -515 | 26 | 70 |
| 269 | BS | 3266 | -515 | 26 | 70 |
| 270 | BS | 3312 | -515 | 26 | 70 |
| 271 | GND | 3358 | -515 | 26 | 70 |
| 272 | DUMMY | 3404 | -515 | 26 | 70 |
| 273 | VDDIO | 3450 | -515 | 26 | 70 |
| 274 | CHKGI | 3496 | -515 | 26 | 70 |
| 275 | CHKGI | 3542 | -515 | 26 | 70 |
| 276 | GND | 3588 | -515 | 26 | 70 |
| 277 | MS | 3634 | -515 | 26 | 70 |
| 278 | MS | 3680 | -515 | 26 | 70 |
| 279 | VDDIO | 3726 | -515 | 26 | 70 |
| 280 | GND | 3772 | -515 | 26 | 70 |
| 281 | TSDA | 3818 | -515 | 26 | 70 |
| 282 | TSDA | 3864 | -515 | 26 | 70 |
| 283 | VDDIO | 3910 | -515 | 26 | 70 |
| 284 | TSCL | 3956 | -515 | 26 | 70 |
| 285 | TSCL | 4002 | -515 | 26 | 70 |
| 286 | GND | 4048 | -515 | 26 | 70 |
| 287 | CHKGO | 4094 | -515 | 26 | 70 |
| 288 | CHKGO | 4140 | -515 | 26 | 70 |
| 289 | DUMMY | 4186 | -515 | 26 | 70 |
| 290 | DUMMY | 4232 | -515 | 26 | 70 |
| 291 | DUMMY | 4278 | -515 | 26 | 70 |
| 292 | DUMMY | 4324 | -515 | 26 | 70 |
| 293 | DUMMY | 4370 | -515 | 26 | 70 |
| 294 | DUMMY | 4416 | -515 | 26 | 70 |

| # | Pad | Х | Υ | W | Н |
|-----|--------|------|------|----|----|
| 295 | TEST13 | 4462 | -515 | 26 | 70 |
| 296 | TEST13 | 4508 | -515 | 26 | 70 |
| 297 | TEST12 | 4554 | -515 | 26 | 70 |
| 298 | TEST12 | 4600 | -515 | 26 | 70 |
| 299 | TEST11 | 4646 | -515 | 26 | 70 |
| 300 | TEST11 | 4692 | -515 | 26 | 70 |
| 301 | TEST10 | 4738 | -515 | 26 | 70 |
| 302 | TEST10 | 4784 | -515 | 26 | 70 |
| 303 | TEST9 | 4830 | -515 | 26 | 70 |
| 304 | TEST9 | 4876 | -515 | 26 | 70 |
| 305 | TEST8 | 4922 | -515 | 26 | 70 |
| 306 | TEST8 | 4968 | -515 | 26 | 70 |
| 307 | TEST7 | 5014 | -515 | 26 | 70 |
| 308 | TEST7 | 5060 | -515 | 26 | 70 |
| 309 | TEST6 | 5106 | -515 | 26 | 70 |
| 310 | TEST6 | 5152 | -515 | 26 | 70 |
| 311 | DUMMY | 5198 | -515 | 26 | 70 |
| 312 | DUMMY | 5244 | -515 | 26 | 70 |
| 313 | TEST5 | 5290 | -515 | 26 | 70 |
| 314 | TEST5 | 5336 | -515 | 26 | 70 |
| 315 | TEST4 | 5382 | -515 | 26 | 70 |
| 316 | TEST4 | 5428 | -515 | 26 | 70 |
| 317 | TEST3 | 5474 | -515 | 26 | 70 |
| 318 | TEST3 | 5520 | -515 | 26 | 70 |
| 319 | TEST2 | 5566 | -515 | 26 | 70 |
| 320 | TEST2 | 5612 | -515 | 26 | 70 |
| 321 | TEST1 | 5658 | -515 | 26 | 70 |
| 322 | TEST1 | 5704 | -515 | 26 | 70 |
| 323 | DUMMY | 5750 | -515 | 26 | 70 |
| 324 | DUMMY | 5796 | -515 | 26 | 70 |
| 325 | DUMMY | 5842 | -515 | 26 | 70 |
| 326 | DUMMY | 5888 | -515 | 26 | 70 |
| 327 | DUMMY | 5934 | -515 | 26 | 70 |
| 328 | DUMMY | 5980 | -515 | 26 | 70 |
| 329 | DUMMY | 6026 | -515 | 26 | 70 |
| 330 | DUMMY | 6072 | -515 | 26 | 70 |
| 331 | DUMMY | 6118 | -515 | 26 | 70 |
| 332 | DUMMY | 6164 | -515 | 26 | 70 |
| 333 | DUMMY | 6210 | -515 | 26 | 70 |
| 334 | DUMMY | 6256 | -515 | 26 | 70 |
| 335 | VDHR | 6302 | -515 | 26 | 70 |
| 336 | VDHR | 6348 | -515 | 26 | 70 |
| 337 | VDHR | 6394 | -515 | 26 | 70 |
| 338 | VDHR | 6440 | -515 | 26 | 70 |
| 339 | VDHR | 6486 | -515 | 26 | 70 |
| 340 | VDHR | 6532 | -515 | 26 | 70 |
| 341 | VDHR | 6578 | -515 | 26 | 70 |
| 342 | VDHR | 6624 | -515 | 26 | 70 |
| 343 | VDHR | 6670 | -515 | 26 | 70 |
| 344 | VDHR | 6716 | -515 | 26 | 70 |
| 345 | VDHR | 6762 | -515 | 26 | 70 |
| 346 | VDHR | 6808 | -515 | 26 | 70 |
| 347 | VDHR | 6854 | -515 | 26 | 70 |
| 348 | VDHR | 6900 | -515 | 26 | 70 |
| 349 | VDHR | 6946 | -515 | 26 | 70 |
| 350 | VDHR | 6992 | -515 | 26 | 70 |
| 351 | DUMMY | 7038 | -515 | 26 | 70 |
| 352 | DUMMY | 7084 | -515 | 26 | 70 |
| 353 | DUMMY | 7130 | -515 | 26 | 70 |
| 354 | DUMMY | 7176 | -515 | 26 | 70 |

| # | Pad | Х | Υ | W | Н |
|------------|----------------|--------------------|------------|----------|-----|
| 355 | DUMMY | 7222 | -515 | 26 | 70 |
| 356 | DUMMY | 7268 | -515 | 26 | 70 |
| 357 | GNDA | 7314 | -515 | 26 | 70 |
| 358 | FB | 7360 | -515 | 26 | 70 |
| 359 | FB | 7406 | -515 | 26 | 70 |
| 360 | GNDA | 7452 | -515 | 26 | 70 |
| 361 | RESE | 7498 | -515 | 26 | 70 |
| 362 | RESE | 7544 | -515 | 26 | 70 |
| 363 | RESE | 7590 | -515 | 26 | 70 |
| 364 | RESE | 7636 | -515 | 26 | 70 |
| 365 | VDM | 7682 | -515 | 26 | 70 |
| 366 | GDR | 7728 | -515 | 26 | 70 |
| 367 | GDR | 7774 | -515 | 26 | 70 |
| 368 | GDR | 7820 | -515 | 26 | 70 |
| 369 | GDR | 7866 | -515 | 26 | 70 |
| 370 | GDR | 7912 | -515 | 26 | 70 |
| 371 | GDR | 7958 | -515 | 26 | 70 |
| 372 | GDR | 8004 | -515 | 26 | 70 |
| 373 | GDR | 8050 | -515 | 26 | 70 |
| 374 | GDR | 8096 | -515 | 26 | 70 |
| 375 | GDR | 8142 | -515 | 26 | 70 |
| 376 | GDR | 8188 | -515 | 26 | 70 |
| 377 | GDR | 8234 | -515 | 26 | 70 |
| 378 | GDR | 8280 | -515 | 26 | 70 |
| 379 | GDR | 8326 | -515 | 26 | 70 |
| 380 | VDM | 8372 | -515 | 26 | 70 |
| 381 | VCOM | 8418 | -515 | 26 | 70 |
| 382 | VCOM | 8464 | -515 | 26 | 70 |
| 383 | VCOM | 8510 | -515 | 26 | 70 |
| 384 | VCOM | 8556 | -515 | 26 | 70 |
| 385 | VCOM | 8602 | -515 | 26 | 70 |
| 386 | VCOM | 8648 | -515 | 26 | 70 |
| 387 | VCOM | 8694 | -515 | 26 | 70 |
| 388 | VCOM | 8740 | -515 | 26 | 70 |
| 389 | VCOM | 8786 | -515 | 26 | 70 |
| 390 | VCOM | 8832 | -515 | 26 | 70 |
| 391 | VCOM | 8878 | -515 | 26 | 70 |
| 392 | VCOM | 8924 | -515 | 26 | 70 |
| 393 | VCOM | 8970 | -515 | 26 | 70 |
| 394 | DUMMY | 9016 | -515 | 26 | 70 |
| 395 | DUMMY | 9062 | -515 | 26 | 70 |
| 396 | DUMMY | 9165.95 | 500 | 12 | 100 |
| 397 | DUMMY | 9152.95 | 381 | 12 | 100 |
| 398 | DUMMY | 9140.96 | 500 | 12 | 100 |
| 399 | GD<0> | 9127.96 | 381 | 12 | 100 |
| 400 | G<0> | 9115.97 | 500 | 12 | 100 |
| 401 | G<2> | 9102.97 | 381 | 12 | 100 |
| 402 | G<4> | 9090.98 | 500 | 12 | 100 |
| 403 | G<6> | 9077.98 | 381 | 12 | 100 |
| 404 | G<8> | 9065.99 | 500 | 12 | 100 |
| 405 | G<10> | 9052.99 | 381 | 12 | 100 |
| 406 407 | G<12> | 9041 | 500 | 12 12 | 100 |
| | G<14> | 9028 | 381 | | 100 |
| 408 | G<16> | 9016.01 | 500 | 12 | 100 |
| 409 | G<18> | 9003.01 | 381 | 12 12 | 100 |
| 410 411 | G<20> G<22> | 8991.02 8978.02 | 500 381 | 12 | 100 |
| 411 | G<24> | 8966.03 | 500 | 12 | 100 |
| 412 | G<24> | | 381 | 12 | 100 |
| 414 | G<28> | 8953.03 | | 12 | |
| 414 | G<20> | 8941.04 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------------|------------------|--------------------|------------|----------|-----|
| 415 | G<30> | 8928.04 | 381 | 12 | 100 |
| 416 | G<32> | 8916.05 | 500 | 12 | 100 |
| 417 | G<34> | 8903.05 | 381 | 12 | 100 |
| 418 | G<36> | 8891.06 | 500 | 12 | 100 |
| 419 | G<38> | 8878.06 | 381 | 12 | 100 |
| 420 | G<40> | 8866.07 | 500 | 12 | 100 |
| 421 | G<42> | 8853.07 | 381 | 12 | 100 |
| 422 | G<44> | 8841.08 | 500 | 12 | 100 |
| 423 | G<46> | 8828.08 | 381 | 12 | 100 |
| 424 | G<48> | 8816.09 | 500 | 12 | 100 |
| 425 | G<50> | 8803.09 | 381 | 12 | 100 |
| 426 | G<52> | 8791.1 | 500 | 12 | 100 |
| 427 | G<54> | 8778.1 | 381 | 12 | 100 |
| 428 | G<56> | 8766.11 | 500 | 12 | 100 |
| 429 | G<58> | 8753.11 | 381 | 12 | 100 |
| 430 | G<60> | 8741.12 | 500 | 12 | 100 |
| 431 | G<62> | 8728.12 | 381 | 12 | 100 |
| 432 | G<64> | 8716.13 | 500 | 12 | 100 |
| 433 | G<66> | 8703.13 | 381 | 12 | 100 |
| 434 | G<68> | 8691.14 | 500 | 12 | 100 |
| 435 | G<70> | 8678.14 | 381 | 12 | 100 |
| 436 | G<72> | 8666.15 | 500 | 12 | 100 |
| 437 | G<74> | 8653.15 | 381 | 12 | 100 |
| 438 | G<76> | 8641.16 | 500 | 12 | 100 |
| 439 | G<78> | 8628.16 | 381 | 12 | 100 |
| 440 | G<80> | 8616.17 | 500 | 12 | 100 |
| 441 | G<82> | 8603.17 | 381 | 12 | 100 |
| 442 | G<84> | 8591.18 | 500 | 12 | 100 |
| 443 | G<86> | 8578.18 | 381 | 12 | 100 |
| 444 | G<88> | 8566.19 | 500 | 12 | 100 |
| 445 | G<90> | 8553.19 | 381 | 12 | 100 |
| 446 | G<92> | 8541.2 | 500 | 12 | 100 |
| 447 | G<94> | 8528.2 | 381 | 12 | 100 |
| 448 | G<96> | 8516.21 | 500 | 12 | 100 |
| 449 | G<98> | 8503.21 | 381 | 12 | 100 |
| 450 | G<100> | 8491.22 | 500 | 12 | 100 |
| 451 | G<102> | 8478.22 | 381 | 12 | 100 |
| 452 | G<104> | 8466.23 | 500 | 12 | 100 |
| 453 | G<106> | 8453.23 | 381 | 12 | 100 |
| 454 | G<108> | 8441.24 | 500 | 12 | 100 |
| 455 | G<110> | 8428.24 | 381 | 12 | 100 |
| 456 | G<112> | 8416.25 | 500 | 12 | 100 |
| 457 | G<114> | 8403.25 | 381 | 12 | 100 |
| 458 | G<116> | 8391.26 | 500 | 12 | 100 |
| 459 | G<118> | 8378.26 | 381 | 12 | 100 |
| 460 | G<120> | 8366.27 | 500 | 12 | 100 |
| 461 | G<122> | 8353.27 | 381 | 12 | 100 |
| 462 | G<124> | 8341.28 | 500 | 12 | 100 |
| 463 | G<126> | 8328.28 | 381 | 12 | 100 |
| 464 | G<128> | 8316.29 | 500 | 12 | 100 |
| 465 | G<130> | 8303.29 | 381 | 12 | 100 |
| 466 | G<132> | 8291.3 | 500 | 12 | 100 |
| 467 | G<134> | 8278.3 | 381 | 12 | 100 |
| 468 | G<136> | 8266.31 | 500 | 12 | 100 |
| 469 470 | G<138> G<140> | 8253.31 8241.32 | 381 500 | 12 12 | 100 |
| 470 | G<140> G<142> | | 500 381 | | 100 |
| 471 | G<142> | 8228.32 | 500 | 12 12 | 100 |
| 472 | G<144> | 8216.33 8203.33 | 381 | 12 | 100 |
| 474 | G<146> | | | | |
| 4/4 | G<140> | 8191.34 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------------|------------------|-------------------|------------|----------|-----|
| 475 | G<150> | 8178.34 | 381 | 12 | 100 |
| 476 | G<152> | 8166.35 | 500 | 12 | 100 |
| 477 | G<154> | 8153.35 | 381 | 12 | 100 |
| 478 | G<156> | 8141.36 | 500 | 12 | 100 |
| 479 | G<158> | 8128.36 | 381 | 12 | 100 |
| 480 | G<160> | 8116.37 | 500 | 12 | 100 |
| 481 | G<162> | 8103.37 | 381 | 12 | 100 |
| 482 | G<164> | 8091.38 | 500 | 12 | 100 |
| 483 | G<166> | 8078.38 | 381 | 12 | 100 |
| 484 | G<168> | 8066.39 | 500 | 12 | 100 |
| 485 | G<170> | 8053.39 | 381 | 12 | 100 |
| 486 | G<172> | 8041.4 | 500 | 12 | 100 |
| 487 | G<174> | 8028.4 | 381 | 12 | 100 |
| 488 | G<176> | 8016.41 | 500 | 12 | 100 |
| 489 | G<178> | 8003.41 | 381 | 12 | 100 |
| 490 | G<180> | 7991.42 | 500 | 12 | 100 |
| 491 | G<182> | 7978.42 | 381 | 12 | 100 |
| 492 | G<184> | 7966.43 | 500 | 12 | 100 |
| 493 | G<186> | 7953.43 | 381 | 12 | 100 |
| 494 | G<188> | 7941.44 | 500 | 12 | 100 |
| 495 | G<190> | 7928.44 | 381 | 12 | 100 |
| 496 | G<192> | 7916.45 | 500 | 12 | 100 |
| 497 | G<194> | 7903.45 | 381 | 12 | 100 |
| 498 | G<196> | 7891.46 | 500 | 12 | 100 |
| 499 | G<198> | 7878.46 | 381 | 12 | 100 |
| 500 | G<200> | 7866.47 | 500 | 12 | 100 |
| 501 | G<202> | 7853.47 | 381 | 12 | 100 |
| 502 | G<204> | 7841.48 | 500 | 12 | 100 |
| 503 | G<206> | 7828.48 | 381 | 12 | 100 |
| 504 | G<208> | 7816.49 | 500 | 12 | 100 |
| 505 | G<210> G<212> | 7803.49 | 381 | 12 | 100 |
| 506 | | 7791.5 | 500 | 12 | 100 |
| 507 508 | G<214> G<216> | 7778.5 7766.51 | 381 500 | 12 12 | 100 |
| 509 | G<218> | 7753.51 | 381 | 12 | 100 |
| 510 | G<220> | 7741.52 | 500 | 12 | 100 |
| 511 | G<222> | 7728.52 | 381 | 12 | 100 |
| 512 | G<224> | 7716.53 | 500 | 12 | 100 |
| 513 | G<226> | 7703.53 | 381 | 12 | 100 |
| 514 | G<228> | 7691.54 | 500 | 12 | 100 |
| 515 | G<230> | 7678.54 | 381 | 12 | 100 |
| 516 | G<232> | 7666.55 | 500 | 12 | 100 |
| 517 | G<234> | 7653.55 | 381 | 12 | 100 |
| 518 | G<236> | 7641.56 | 500 | 12 | 100 |
| 519 | G<238> | 7628.56 | 381 | 12 | 100 |
| 520 | G<240> | 7616.57 | 500 | 12 | 100 |
| 521 | G<242> | 7603.57 | 381 | 12 | 100 |
| 522 | G<244> | 7591.58 | 500 | 12 | 100 |
| 523 | G<246> | 7578.58 | 381 | 12 | 100 |
| 524 | G<248> | 7566.59 | 500 | 12 | 100 |
| 525 | G<250> | 7553.59 | 381 | 12 | 100 |
| 526 | G<252> | 7541.6 | 500 | 12 | 100 |
| 527 | G<254> | 7528.6 | 381 | 12 | 100 |
| 528 | G<256> | 7516.61 | 500 | 12 | 100 |
| 529 | G<258> | 7503.61 | 381 | 12 | 100 |
| 530 | G<260> | 7491.62 | 500 | 12 | 100 |
| 531 | G<262> | 7478.62 | 381 | 12 | 100 |
| 532 | G<264> | 7466.63 | 500 | 12 | 100 |
| 533 | G<266> | 7453.63 | 381 | 12 | 100 |
| 534 | G<268> | 7441.64 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|-----|------------------|--------------------|-----|----------|-----|
| 535 | G<270> | 7428.64 | 381 | 12 | 100 |
| 536 | G<272> | 7416.65 | 500 | 12 | 100 |
| 537 | G<274> | 7403.65 | 381 | 12 | 100 |
| 538 | G<276> | 7391.66 | 500 | 12 | 100 |
| 539 | G<278> | 7378.66 | 381 | 12 | 100 |
| 540 | G<280> | 7366.67 | 500 | 12 | 100 |
| 541 | G<282> | 7353.67 | 381 | 12 | 100 |
| 542 | G<284> | 7341.68 | 500 | 12 | 100 |
| 543 | G<286> | 7328.68 | 381 | 12 | 100 |
| 544 | G<288> | 7316.69 | 500 | 12 | 100 |
| 545 | G<290> | 7303.69 | 381 | 12 | 100 |
| 546 | G<292> | 7291.7 | 500 | 12 | 100 |
| 547 | G<294> | 7278.7 | 381 | 12 | 100 |
| 548 | G<296> | 7266.71 | 500 | 12 | 100 |
| 549 | G<298> | 7253.71 | 381 | 12 | 100 |
| 550 | G<300> | 7241.72 | 500 | 12 | 100 |
| 551 | G<302> | 7228.72 | 381 | 12 | 100 |
| 552 | G<304> | 7216.73 | 500 | 12 | 100 |
| 553 | G<306> | 7203.73 | 381 | 12 | 100 |
| 554 | G<308> | 7191.74 | 500 | 12 | 100 |
| 555 | G<310> | 7178.74 | 381 | 12 | 100 |
| 556 | G<310> | 7176.74 | 500 | 12 | 100 |
| 557 | G<314> | 7153.75 | 381 | 12 | 100 |
| 558 | G<314> | 7141.76 | 500 | 12 | |
| 559 | G<318> | 7128.76 | 381 | 12 | 100 |
| | | | | 12 | |
| 560 | G<320> | 7116.77 | 500 | 12 | 100 |
| 561 | G<322> G<324> | 7103.77 7091.78 | 381 | 12 | 100 |
| 562 | | | 500 | 12 | 100 |
| 563 | G<326> | 7078.78 | 381 | 12 | 100 |
| 564 | G<328> | 7066.79 | 500 | | 100 |
| 565 | G<330> | 7053.79 | 381 | 12 | 100 |
| 566 | G<332> | 7041.8 | 500 | 12 12 | 100 |
| 567 | G<334> | 7028.8 | 381 | | 100 |
| 568 | G<336> | 7016.81 | 500 | 12 | 100 |
| 569 | G<338> | 7003.81 | 381 | 12 | 100 |
| 570 | G<340> | 6991.82 | 500 | 12 | 100 |
| 571 | G<342> | 6978.82 | 381 | 12 | 100 |
| 572 | G<344> | 6966.83 | 500 | 12 | 100 |
| 573 | G<346> | 6953.83 | 381 | 12 | 100 |
| 574 | G<348> | 6941.84 | 500 | 12 | 100 |
| 575 | G<350> | 6928.84 | 381 | 12 | 100 |
| 576 | G<352> | 6916.85 | 500 | 12 | 100 |
| 577 | G<354> | 6903.85 | 381 | 12 | 100 |
| 578 | G<356> | 6891.86 | 500 | 12 | 100 |
| 579 | G<358> | 6878.86 | 381 | 12 | 100 |
| 580 | G<360> | 6866.87 | 500 | 12 | 100 |
| 581 | G<362> | 6853.87 | 381 | 12 | 100 |
| 582 | G<364> | 6841.88 | 500 | 12 | 100 |
| 583 | G<366> | 6828.88 | 381 | 12 | 100 |
| 584 | G<368> | 6816.89 | 500 | 12 | 100 |
| 585 | G<370> | 6803.89 | 381 | 12 | 100 |
| 586 | G<372> | 6791.9 | 500 | 12 | 100 |
| 587 | G<374> | 6778.9 | 381 | 12 | 100 |
| 588 | G<376> | 6766.91 | 500 | 12 | 100 |
| 589 | G<378> | 6753.91 | 381 | 12 | 100 |
| 590 | G<380> | 6741.92 | 500 | 12 | 100 |
| 591 | G<382> | 6728.92 | 381 | 12 | 100 |
| 592 | G<384> | 6716.93 | 500 | 12 | 100 |
| 593 | G<386> | 6703.93 | 381 | 12 | 100 |
| 594 | G<388> | 6691.94 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------------|------------------|--------------------|------------|----------|-----|
| 595 | G<390> | 6678.94 | 381 | 12 | 100 |
| 596 | G<392> | 6666.95 | 500 | 12 | 100 |
| 597 | G<394> | 6653.95 | 381 | 12 | 100 |
| 598 | G<396> | 6641.96 | 500 | 12 | 100 |
| 599 | G<398> | 6628.96 | 381 | 12 | 100 |
| 600 | G<400> | 6616.97 | 500 | 12 | 100 |
| 601 | G<402> | 6603.97 | 381 | 12 | 100 |
| 602 | G<404> | 6591.98 | 500 | 12 | 100 |
| 603 | G<406> | 6578.98 | 381 | 12 | 100 |
| 604 | G<408> | 6566.99 | 500 | 12 | 100 |
| 605 | G<410> | 6553.99 | 381 | 12 | 100 |
| 606 | G<412> | 6542 | 500 | 12 | 100 |
| 607 | G<414> | 6529 | 381 | 12 | 100 |
| 608 | G<416> | 6517.01 | 500 | 12 | 100 |
| 609 | G<418> | 6504.01 | 381 | 12 | 100 |
| 610 | G<420> | 6492.02 | 500 | 12 | 100 |
| 611 | G<422> | 6479.02 | 381 | 12 | 100 |
| 612 | G<424> | 6467.03 | 500 | 12 | 100 |
| 613 | G<426> | 6454.03 | 381 | 12 | 100 |
| 614 | G<428> | 6442.04 | 500 | 12 | 100 |
| 615 | G<430> | 6429.04 | 381 | 12 | 100 |
| 616 | G<432> | 6417.05 | 500 | 12 | 100 |
| 617 | G<434> | 6404.05 | 381 | 12 | 100 |
| 618 | G<436> | 6392.06 | 500 | 12 | 100 |
| 619 | G<438> | 6379.06 | 381 | 12 | 100 |
| 620 | G<440> | 6367.07 | 500 | 12 | 100 |
| 621 | G<442> | 6354.07 | 381 | 12 | 100 |
| 622 | G<444> | 6342.08 | 500 | 12 | 100 |
| 623 | G<446> | 6329.08 | 381 | 12 | 100 |
| 624 | G<448> | 6317.09 | 500 | 12 | 100 |
| 625 | G<450> | 6304.09 | 381 | 12 | 100 |
| 626 | G<452> | 6292.1 | 500 | 12 | 100 |
| 627 | G<454> G<456> | 6279.1 | 381 | 12 12 | 100 |
| 628 629 | G<458> | 6267.11 6254.11 | 500 | 12 | 100 |
| 630 | G<460> | 6242.12 | 381 500 | 12 | 100 |
| 631 | G<462> | 6229.12 | 381 | 12 | 100 |
| 632 | G<464> | 6217.13 | 500 | 12 | 100 |
| 633 | G<466> | 6204.13 | 381 | 12 | 100 |
| 634 | G<468> | 6192.14 | 500 | 12 | 100 |
| 635 | G<470> | 6179.14 | 381 | 12 | 100 |
| 636 | G<472> | 6167.15 | 500 | 12 | 100 |
| 637 | G<474> | 6154.15 | 381 | 12 | 100 |
| 638 | G<476> | 6142.16 | 500 | 12 | 100 |
| 639 | G<478> | 6129.16 | 381 | 12 | 100 |
| 640 | G<480> | 6117.17 | 500 | 12 | 100 |
| 641 | G<482> | 6104.17 | 381 | 12 | 100 |
| 642 | G<484> | 6092.18 | 500 | 12 | 100 |
| 643 | G<486> | 6079.18 | 381 | 12 | 100 |
| 644 | G<488> | 6067.19 | 500 | 12 | 100 |
| 645 | G<490> | 6054.19 | 381 | 12 | 100 |
| 646 | G<492> | 6042.2 | 500 | 12 | 100 |
| 647 | G<494> | 6029.2 | 381 | 12 | 100 |
| 648 | G<496> | 6017.21 | 500 | 12 | 100 |
| 649 | G<498> | 6004.21 | 381 | 12 | 100 |
| 650 | G<500> | 5992.22 | 500 | 12 | 100 |
| 651 | G<502> | 5979.22 | 381 | 12 | 100 |
| 652 | G<504> | 5967.23 | 500 | 12 | 100 |
| 653 | G<506> | 5954.23 | 381 | 12 | 100 |
| 654 | G<508> | 5942.24 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------------|------------------|--------------------|------------|----------|------|
| 655 | G<510> | 5929.24 | 381 | 12 | 100 |
| 656 | G<512> | 5917.25 | 500 | 12 | 100 |
| 657 | G<514> | 5904.25 | 381 | 12 | 100 |
| 658 | G<516> | 5892.26 | 500 | 12 | 100 |
| 659 | G<518> | 5879.26 | 381 | 12 | 100 |
| 660 | G<520> | 5867.27 | 500 | 12 | 100 |
| 661 | G<522> | 5854.27 | 381 | 12 | 100 |
| 662 | G<524> | 5842.28 | 500 | 12 | 100 |
| 663 | G<526> | 5829.28 | 381 | 12 | 100 |
| 664 | G<528> | 5817.29 | 500 | 12 | 100 |
| 665 | G<530> | 5804.29 | 381 | 12 | 100 |
| 666 | G<532> | 5792.3 | 500 | 12 | 100 |
| 667 | G<534> | 5779.3 | 381 | 12 | 100 |
| 668 | G<536> | 5767.31 | 500 | 12 | 100 |
| 669 | G<538> | 5754.31 | 381 | 12 | 100 |
| 670 | G<540> | 5742.32 | 500 | 12 | 100 |
| 671 | G<542> | 5729.32 | 381 | 12 | 100 |
| 672 | G<544> | 5717.33 | 500 | 12 | 100 |
| 673 | G<546> | 5704.33 | 381 | 12 | 100 |
| 674 | G<548> | 5692.34 | 500 | 12 | 100 |
| 675 | G<550> | 5679.34 | 381 | 12 | 100 |
| 676 | G<552> | 5667.35 | 500 | 12 | 100 |
| 677 | G<554> | 5654.35 | 381 | 12 | 100 |
| 678 | G<556> | 5642.36 | 500 | 12 | 100 |
| 679 | G<558> | 5629.36 | 381 | 12 | 100 |
| 680 | G<560> G<562> | 5617.37 5604.37 | 500 381 | 12 12 | 100 |
| 681 | | | | 12 | 100 |
| 682 683 | G<564> G<566> | 5592.38 5579.38 | 500 381 | 12 | 100 |
| 684 | G<568> | 5567.39 | 500 | 12 | 100 |
| 685 | G<570> | 5554.39 | 381 | 12 | 100 |
| 686 | G<572> | 5542.4 | 500 | 12 | 100 |
| 687 | G<574> | 5529.4 | 381 | 12 | 100 |
| 688 | G<576> | 5517.41 | 500 | 12 | 100 |
| 689 | G<578> | 5504.41 | 381 | 12 | 100 |
| 690 | G<580> | 5492.42 | 500 | 12 | 100 |
| 691 | G<582> | 5479.42 | 381 | 12 | 100 |
| 692 | G<584> | 5467.43 | 500 | 12 | 100 |
| 693 | G<586> | 5454.43 | 381 | 12 | 100 |
| 694 | G<588> | 5442.44 | 500 | 12 | 100 |
| 695 | G<590> | 5429.44 | 381 | 12 | 100 |
| 696 | G<592> | 5417.45 | 500 | 12 | 100 |
| 697 | G<594> | 5404.45 | 381 | 12 | 100 |
| 698 | G<596> | 5392.46 | 500 | 12 | 100 |
| 699 | G<598> | 5379.46 | 381 | 12 | 100 |
| 700 | GD<2> | 5367.47 | 500 | 12 | 100 |
| 701 | DUMMY | 5354.47 | 381 | 12 | 100 |
| 702 | DUMMY | 5342.48 | 500 | 12 | 100 |
| 703 | DUMMY | 5329.48 | 381 | 12 | 100 |
| 704 | DUMMY | 5230.49 | 500 | 12 | 100 |
| 705 | DUMMY VBD<0> | 5217.49 5204.5 | 381 500 | 12 12 | 100 |
| 706 707 | S<0> | 5204.5 | 381 | 12 | 100 |
| 707 | S<0> | 5178.51 | 500 | 12 | 100 |
| 709 | S<2> | 5176.51 | 381 | 12 | 100 |
| 710 | S<3> | 5152.52 | 500 | 12 | 100 |
| 711 | S<4> | 5139.52 | 381 | 12 | 100 |
| 712 | S<5> | 5126.53 | 500 | 12 | 100 |
| 713 | S<6> | 5113.53 | 381 | 12 | 100 |
| 714 | S<7> | 5100.54 | 500 | 12 | 100 |
| | J 117 | 0.00.01 | | | . 50 |

| # | Pad | X | Υ | W | Н |
|------------|--------|---------|-----|----------|------|
| 715 | S<8> | 5087.54 | 381 | 12 | 100 |
| 716 | S<9> | 5074.55 | 500 | 12 | 100 |
| 717 | S<10> | 5061.55 | 381 | 12 | 100 |
| 718 | S<11> | 5048.56 | 500 | 12 | 100 |
| 719 | S<12> | 5035.56 | 381 | 12 | 100 |
| 720 | S<13> | 5022.57 | 500 | 12 | 100 |
| 721 | S<14> | 5009.57 | 381 | 12 | 100 |
| 722 | S<15> | 4996.58 | 500 | 12 | 100 |
| 723 | S<16> | 4983.58 | 381 | 12 | 100 |
| 724 | S<17> | 4970.59 | 500 | 12 | 100 |
| 725 | S<18> | 4957.59 | 381 | 12 | 100 |
| 726 | S<19> | 4944.6 | 500 | 12 | 100 |
| 727 | S<20> | 4931.6 | 381 | 12 | 100 |
| 728 | S<21> | 4918.61 | 500 | 12 | 100 |
| 729 | S<22> | 4905.61 | 381 | 12 | 100 |
| 730 | S<23> | 4892.62 | 500 | 12 | 100 |
| 731 | S<24> | 4879.62 | 381 | 12 | 100 |
| 732 | S<25> | 4866.63 | 500 | 12 | 100 |
| 733 | S<26> | 4853.63 | 381 | 12 | 100 |
| 734 | S<27> | 4840.64 | 500 | 12 | 100 |
| | | | | | |
| 735 736 | S<28> | 4827.64 | 381 | 12 12 | 100 |
| | S<29> | 4814.65 | 500 | | 100 |
| 737 | S<30> | 4801.65 | 381 | 12 | 100 |
| 738 | S<31> | 4788.66 | 500 | 12 | 100 |
| 739 | S<32> | 4775.66 | 381 | 12 | 100 |
| 740 | S<33> | 4762.67 | 500 | 12 | 100 |
| 741 | S<34> | 4749.67 | 381 | 12 | 100 |
| 742 | S<35> | 4736.68 | 500 | 12 | 100 |
| 743 | S<36> | 4723.68 | 381 | 12 | 100 |
| 744 | S<37> | 4710.69 | 500 | 12 | 100 |
| 745 | S<38> | 4697.69 | 381 | 12 | 100 |
| 746 | S<39> | 4684.7 | 500 | 12 | 100 |
| 747 | S<40> | 4671.7 | 381 | 12 | 100 |
| 748 | S<41> | 4658.71 | 500 | 12 | 100 |
| 749 | S<42> | 4645.71 | 381 | 12 | 100 |
| 750 | S<43> | 4632.72 | 500 | 12 | 100 |
| 751 | S<44> | 4619.72 | 381 | 12 | 100 |
| 752 | S<45> | 4606.73 | 500 | 12 | 100 |
| 753 | S<46> | 4593.73 | 381 | 12 | 100 |
| 754 | S<47> | 4580.74 | 500 | 12 | 100 |
| 755 | S<48> | 4567.74 | 381 | 12 | 100 |
| 756 | S<49> | 4554.75 | 500 | 12 | 100 |
| 757 | S<50> | 4541.75 | 381 | 12 | 100 |
| 758 | S<51> | 4528.76 | 500 | 12 | 100 |
| 759 | S<52> | 4515.76 | 381 | 12 | 100 |
| 760 | S<53> | 4502.77 | 500 | 12 | 100 |
| 761 | S<54> | 4489.77 | 381 | 12 | 100 |
| 762 | S<55> | 4476.78 | 500 | 12 | 100 |
| 763 | S<56> | 4463.78 | 381 | 12 | 100 |
| 764 | S<57> | 4450.79 | 500 | 12 | 100 |
| 765 | S<58> | 4437.79 | 381 | 12 | 100 |
| 766 | S<59> | 4424.8 | 500 | 12 | 100 |
| 767 | S<60> | 4411.8 | 381 | 12 | 100 |
| 768 | S<61> | 4398.81 | 500 | 12 | 100 |
| 769 | S<62> | 4385.81 | 381 | 12 | 100 |
| 770 | S<63> | 4372.82 | 500 | 12 | 100 |
| 771 | S<64> | 4359.82 | 381 | 12 | 100 |
| 772 | S<65> | 4346.83 | 500 | 12 | 100 |
| 773 | S<66> | 4333.83 | 381 | 12 | 100 |
| 774 | S<67> | 4320.84 | 500 | 12 | 100 |
| | 2 10.7 | .020.01 | | | . 50 |

| # | Pad | Х | Υ | W | Н |
|-----|--------|---------|-----|----|-----|
| 775 | S<68> | 4307.84 | 381 | 12 | 100 |
| 776 | S<69> | 4294.85 | 500 | 12 | 100 |
| 777 | S<70> | 4281.85 | 381 | 12 | 100 |
| 778 | S<71> | 4268.86 | 500 | 12 | 100 |
| 779 | S<72> | 4255.86 | 381 | 12 | 100 |
| 780 | S<73> | 4242.87 | 500 | 12 | 100 |
| 781 | S<74> | 4229.87 | 381 | 12 | 100 |
| 782 | S<75> | 4216.88 | 500 | 12 | 100 |
| 783 | S<76> | 4203.88 | 381 | 12 | 100 |
| 784 | S<77> | 4190.89 | 500 | 12 | 100 |
| 785 | S<78> | 4177.89 | 381 | 12 | 100 |
| 786 | S<79> | 4164.9 | 500 | 12 | 100 |
| 787 | S<80> | 4151.9 | 381 | 12 | 100 |
| 788 | S<81> | 4138.91 | 500 | 12 | 100 |
| 789 | S<82> | 4125.91 | 381 | 12 | 100 |
| 790 | S<83> | 4112.92 | 500 | 12 | 100 |
| 791 | S<84> | 4099.92 | 381 | 12 | 100 |
| 792 | S<85> | 4086.93 | 500 | 12 | 100 |
| 793 | S<86> | 4073.93 | 381 | 12 | 100 |
| 794 | S<87> | 4060.94 | 500 | 12 | 100 |
| 795 | S<88> | 4047.94 | 381 | 12 | 100 |
| 796 | S<89> | 4034.95 | 500 | 12 | 100 |
| 797 | S<90> | 4021.95 | 381 | 12 | 100 |
| 798 | S<91> | 4008.96 | 500 | 12 | 100 |
| 799 | S<92> | 3995.96 | 381 | 12 | 100 |
| 800 | S<93> | 3982.97 | 500 | 12 | 100 |
| 801 | S<94> | 3969.97 | 381 | 12 | 100 |
| 802 | S<95> | 3956.98 | 500 | 12 | 100 |
| 803 | S<96> | 3943.98 | 381 | 12 | 100 |
| 804 | S<97> | 3930.99 | 500 | 12 | 100 |
| 805 | S<98> | 3917.99 | 381 | 12 | 100 |
| 806 | S<99> | 3905 | 500 | 12 | 100 |
| 807 | S<100> | 3892 | 381 | 12 | 100 |
| 808 | S<101> | 3879.01 | 500 | 12 | 100 |
| 809 | S<102> | 3866.01 | 381 | 12 | 100 |
| 810 | S<103> | 3853.02 | 500 | 12 | 100 |
| 811 | S<104> | 3840.02 | 381 | 12 | 100 |
| 812 | S<105> | 3827.03 | 500 | 12 | 100 |
| 813 | S<106> | 3814.03 | 381 | 12 | 100 |
| 814 | S<107> | 3801.04 | 500 | 12 | 100 |
| 815 | S<108> | 3788.04 | 381 | 12 | 100 |
| 816 | S<109> | 3775.05 | 500 | 12 | 100 |
| 817 | S<110> | 3762.05 | 381 | 12 | 100 |
| 818 | S<111> | 3749.06 | 500 | 12 | 100 |
| 819 | S<112> | 3736.06 | 381 | 12 | 100 |
| 820 | S<113> | 3723.07 | 500 | 12 | 100 |
| 821 | S<114> | 3710.07 | 381 | 12 | 100 |
| 822 | S<115> | 3697.08 | 500 | 12 | 100 |
| 823 | S<116> | 3684.08 | 381 | 12 | 100 |
| 824 | S<117> | 3671.09 | 500 | 12 | 100 |
| 825 | S<118> | 3658.09 | 381 | 12 | 100 |
| 826 | S<119> | 3645.1 | 500 | 12 | 100 |
| 827 | S<120> | 3632.1 | 381 | 12 | 100 |
| 828 | S<121> | 3619.11 | 500 | 12 | 100 |
| 829 | S<122> | 3606.11 | 381 | 12 | 100 |
| 830 | S<123> | 3593.12 | 500 | 12 | 100 |
| 831 | S<124> | 3580.12 | 381 | 12 | 100 |
| 832 | S<125> | 3567.13 | 500 | 12 | 100 |
| 833 | S<126> | 3554.13 | 381 | 12 | 100 |
| 834 | S<127> | 3541.14 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|-----|--------|---------|-----|----|-----|
| 835 | S<128> | 3528.14 | 381 | 12 | 100 |
| 836 | S<129> | 3515.15 | 500 | 12 | 100 |
| 837 | S<130> | 3502.15 | 381 | 12 | 100 |
| 838 | S<131> | 3489.16 | 500 | 12 | 100 |
| 839 | S<132> | 3476.16 | 381 | 12 | 100 |
| 840 | S<133> | 3463.17 | 500 | 12 | 100 |
| 841 | S<134> | 3450.17 | 381 | 12 | 100 |
| 842 | S<135> | 3437.18 | 500 | 12 | 100 |
| 843 | S<136> | 3424.18 | 381 | 12 | 100 |
| 844 | S<137> | 3411.19 | 500 | 12 | 100 |
| 845 | S<138> | 3398.19 | 381 | 12 | 100 |
| 846 | S<139> | 3385.2 | 500 | 12 | 100 |
| 847 | S<140> | 3372.2 | 381 | 12 | 100 |
| 848 | S<141> | 3359.21 | 500 | 12 | 100 |
| 849 | S<142> | 3346.21 | 381 | 12 | 100 |
| 850 | S<143> | 3333.22 | 500 | 12 | 100 |
| 851 | S<144> | 3320.22 | 381 | 12 | 100 |
| 852 | S<145> | 3307.23 | 500 | 12 | 100 |
| 853 | S<146> | 3294.23 | 381 | 12 | 100 |
| 854 | S<147> | 3281.24 | 500 | 12 | 100 |
| 855 | S<148> | 3268.24 | 381 | 12 | 100 |
| 856 | S<149> | 3255.25 | 500 | 12 | 100 |
| 857 | S<150> | 3242.25 | 381 | 12 | 100 |
| 858 | S<151> | 3229.26 | 500 | 12 | 100 |
| 859 | S<152> | 3216.26 | 381 | 12 | 100 |
| 860 | S<153> | 3203.27 | 500 | 12 | 100 |
| 861 | S<154> | 3190.27 | 381 | 12 | 100 |
| 862 | S<155> | 3177.28 | 500 | 12 | 100 |
| 863 | S<156> | 3164.28 | 381 | 12 | 100 |
| 864 | S<157> | 3151.29 | 500 | 12 | 100 |
| 865 | S<158> | 3138.29 | 381 | 12 | 100 |
| 866 | S<159> | 3125.3 | 500 | 12 | 100 |
| 867 | S<160> | 3112.3 | 381 | 12 | 100 |
| 868 | S<161> | 3099.31 | 500 | 12 | 100 |
| 869 | S<162> | 3086.31 | 381 | 12 | 100 |
| 870 | S<163> | 3073.32 | 500 | 12 | 100 |
| 871 | S<164> | 3060.32 | 381 | 12 | 100 |
| 872 | S<165> | 3047.33 | 500 | 12 | 100 |
| 873 | S<166> | 3034.33 | 381 | 12 | 100 |
| 874 | S<167> | 3021.34 | 500 | 12 | 100 |
| 875 | S<168> | 3008.34 | 381 | 12 | 100 |
| 876 | S<169> | 2995.35 | 500 | 12 | 100 |
| 877 | S<170> | 2982.35 | 381 | 12 | 100 |
| 878 | S<171> | 2969.36 | 500 | 12 | 100 |
| 879 | S<172> | 2956.36 | 381 | 12 | 100 |
| 880 | S<173> | 2943.37 | 500 | 12 | 100 |
| 881 | S<174> | 2930.37 | 381 | 12 | 100 |
| 882 | S<175> | 2917.38 | 500 | 12 | 100 |
| 883 | S<176> | 2904.38 | 381 | 12 | 100 |
| 884 | S<177> | 2891.39 | 500 | 12 | 100 |
| 885 | S<178> | 2878.39 | 381 | 12 | 100 |
| 886 | S<179> | 2865.4 | 500 | 12 | 100 |
| 887 | S<180> | 2852.4 | 381 | 12 | 100 |
| 888 | S<181> | 2839.41 | 500 | 12 | 100 |
| 889 | S<182> | 2826.41 | 381 | 12 | 100 |
| 890 | S<183> | 2813.42 | 500 | 12 | 100 |
| 891 | S<184> | 2800.42 | 381 | 12 | 100 |
| 892 | S<185> | 2787.43 | 500 | 12 | 100 |
| 893 | S<186> | 2774.43 | 381 | 12 | 100 |
| 894 | S<187> | 2761.44 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------------|------------------|--------------------|------------|----------|-----|
| 895 | S<188> | 2748.44 | 381 | 12 | 100 |
| 896 | S<189> | 2735.45 | 500 | 12 | 100 |
| 897 | S<190> | 2722.45 | 381 | 12 | 100 |
| 898 | S<191> | 2709.46 | 500 | 12 | 100 |
| 899 | S<192> | 2696.46 | 381 | 12 | 100 |
| 900 | S<193> | 2683.47 | 500 | 12 | 100 |
| 901 | S<194> | 2670.47 | 381 | 12 | 100 |
| 902 | S<195> | 2657.48 | 500 | 12 | 100 |
| 903 | S<196> | 2644.48 | 381 | 12 | 100 |
| 904 | S<197> | 2631.49 | 500 | 12 | 100 |
| 905 | S<198> | 2618.49 | 381 | 12 | 100 |
| 906 | S<199> | 2605.5 | 500 | 12 | 100 |
| 907 | S<200> | 2592.5 | 381 | 12 | 100 |
| 908 | S<201> | 2579.51 | 500 | 12 | 100 |
| 909 | S<202> | 2566.51 | 381 | 12 | 100 |
| 910 | S<203> | 2553.52 | 500 | 12 | 100 |
| 911 | S<204> | 2540.52 | 381 | 12 | 100 |
| 912 | S<205> | 2527.53 | 500 | 12 | 100 |
| 913 | S<206> | 2514.53 | 381 | 12 | 100 |
| 914 | S<207> | 2501.54 | 500 | 12 | 100 |
| 915 | S<208> | 2488.54 | 381 | 12 | 100 |
| 916 | S<209> | 2475.55 | 500 | 12 | 100 |
| 917 | S<210> | 2462.55 | 381 | 12 | 100 |
| 918 | S<211> | 2449.56 | 500 | 12 | 100 |
| 919 | S<212> | 2436.56 | 381 | 12 | 100 |
| 920 | S<213> | 2423.57 | 500 | 12 | 100 |
| 921 | S<214> | 2410.57 | 381 | 12 | 100 |
| 922 | S<215> | 2397.58 | 500 | 12 | 100 |
| 923 | S<216> | 2384.58 | 381 | 12 | 100 |
| 924 | S<217> | 2371.59 | 500 | 12 | 100 |
| 925 | S<218> | 2358.59 | 381 | 12 | 100 |
| 926 | S<219> | 2345.6 | 500 | 12 | 100 |
| 927 | S<220> | 2332.6 | 381 | 12 | 100 |
| 928 | S<221> | 2319.61 | 500 | 12 | 100 |
| 929 | S<222> | 2306.61 | 381 | 12 | 100 |
| 930 | S<223> | 2293.62 | 500 | 12 | 100 |
| 931 | S<224> | 2280.62 | 381 | 12 | 100 |
| 932 | S<225> | 2267.63 | 500 | 12 | 100 |
| 933 | S<226> | 2254.63 | 381 | 12 | 100 |
| 934 | S<227> | 2241.64 | 500 | 12 | 100 |
| 935 | S<228> | 2228.64 | 381 | 12 | 100 |
| 936 | S<229> | 2215.65 | 500 | 12 | 100 |
| 937 | S<230> | 2202.65 | 381 | 12 | 100 |
| 938 | S<231> | 2189.66 | 500 | 12 | 100 |
| 939 | S<232> | 2176.66 | 381 | 12 | 100 |
| 940 | S<233> | 2163.67 | 500 | 12 | 100 |
| 941 | S<234> | 2150.67 | 381 | 12 | 100 |
| 942 | S<235> | 2137.68 | 500 | 12 | 100 |
| 943 | S<236> | 2124.68 | 381 | 12 | 100 |
| 944 | S<237> | 2111.69 | 500 | 12 | 100 |
| 945 | S<238> | 2098.69 | 381 | 12 | 100 |
| 946 | S<239> | 2085.7 | 500 | 12 | 100 |
| 947 | S<240> | 2072.7 | 381 | 12 | 100 |
| 948 | S<241> | 2059.71 | 500 | 12 | 100 |
| 949 | S<242> S<243> | 2046.71 | 381 500 | 12 12 | 100 |
| 950 | | 2033.72 | 500 381 | | |
| 951 952 | S<244> S<245> | 2020.72 2007.73 | 381 500 | 12 12 | 100 |
| 952 | S<245> | 1994.73 | 381 | 12 | 100 |
| | S<246> | | | | |
| 954 | J<241> | 1981.74 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------|--------|---------|------------|----------|-----|
| 955 | S<248> | 1968.74 | 381 | 12 | 100 |
| 956 | S<249> | 1955.75 | 500 | 12 | 100 |
| 957 | S<250> | 1942.75 | 381 | 12 | 100 |
| 958 | S<251> | 1929.76 | 500 | 12 | 100 |
| 959 | S<252> | 1916.76 | 381 | 12 | 100 |
| 960 | S<253> | 1903.77 | 500 | 12 | 100 |
| 961 | S<254> | 1890.77 | 381 | 12 | 100 |
| 962 | S<255> | 1877.78 | 500 | 12 | 100 |
| 963 | S<256> | 1864.78 | 381 | 12 | 100 |
| 964 | S<257> | 1851.79 | 500 | 12 | 100 |
| 965 | S<258> | 1838.79 | 381 | 12 | 100 |
| 966 | S<259> | 1825.8 | 500 | 12 | 100 |
| 967 | S<260> | 1812.8 | 381 | 12 | 100 |
| 968 | S<261> | 1799.81 | 500 | 12 | 100 |
| 969 | S<262> | 1786.81 | 381 | 12 | 100 |
| 970 | S<263> | 1773.82 | 500 | 12 | 100 |
| 971 | S<264> | 1760.82 | 381 | 12 | 100 |
| 972 | S<265> | 1747.83 | 500 | 12 | 100 |
| 973 | S<266> | 1734.83 | 381 | 12 | 100 |
| 974 | S<267> | 1721.84 | 500 | 12 | 100 |
| 975 | S<268> | 1708.84 | 381 | 12 | 100 |
| 976 | S<269> | 1695.85 | 500 | 12 | 100 |
| 977 | S<270> | 1682.85 | 381 | 12 | 100 |
| 978 | S<271> | 1669.86 | 500 | 12 | 100 |
| 979 | S<272> | 1656.86 | 381 | 12 | 100 |
| 980 | S<273> | 1643.87 | 500 | 12 | 100 |
| 981 | S<274> | 1630.87 | 381 | 12 | 100 |
| 982 | S<275> | 1617.88 | 500 | 12 | 100 |
| 983 | S<276> | 1604.88 | 381 | 12 | 100 |
| 984 | S<277> | 1591.89 | 500 | 12 | 100 |
| 985 | S<278> | 1578.89 | 381 | 12 | 100 |
| 986 | S<279> | 1565.9 | 500 | 12 | 100 |
| 987 | S<280> | 1552.9 | 381 | 12 | 100 |
| 988 | S<281> | 1539.91 | 500 | 12 | 100 |
| 989 | S<282> | 1526.91 | 381 | 12 | 100 |
| 990 | S<283> | 1513.92 | 500 | 12 | 100 |
| 991 | S<284> | 1500.92 | 381 | 12 | 100 |
| 992 | S<285> | 1487.93 | 500 | 12 | 100 |
| 993 | S<286> | 1474.93 | 381 | 12 | 100 |
| 994 | S<287> | 1461.94 | 500 | 12 | 100 |
| 995 | S<288> | 1448.94 | 381 | 12 | 100 |
| 996 | S<289> | 1435.95 | 500 | 12 | 100 |
| 997 | S<290> | 1422.95 | 381 | 12 | 100 |
| 998 | S<291> | 1409.96 | 500 | 12 | 100 |
| 999 | S<292> | 1396.96 | 381 | 12 | 100 |
| 1000 | S<293> | 1383.97 | 500 | 12 | 100 |
| 1001 | S<294> | 1370.97 | 381 | 12 | 100 |
| 1002 | S<295> | 1357.98 | 500 | 12 | 100 |
| 1003 | S<296> | 1344.98 | 381 | 12 | 100 |
| 1004 | S<297> | 1331.99 | 500 | 12 | 100 |
| 1005 | S<298> | 1318.99 | 381 | 12 | 100 |
| 1006 | S<299> | 1306 | 500 | 12 | 100 |
| 1007 | S<300> | 1293 | 381 | 12 | 100 |
| 1008 | S<301> | 1280.01 | 500 | 12 | 100 |
| 1009 | S<302> | 1267.01 | 381 | 12 | 100 |
| 1010 | S<303> | 1254.02 | 500 381 | 12 12 | 100 |
| | S<304> | 1241.02 | | | |
| 1012 | S<305> | 1228.03 | 500 | 12 12 | 100 |
| 1013 | S<306> | 1215.03 | 381 | | 100 |
| 1014 | S<307> | 1202.04 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------|--------|---------|-----|----|-----|
| 1015 | S<308> | 1189.04 | 381 | 12 | 100 |
| 1016 | S<309> | 1176.05 | 500 | 12 | 100 |
| 1017 | S<310> | 1163.05 | 381 | 12 | 100 |
| 1018 | S<311> | 1150.06 | 500 | 12 | 100 |
| 1019 | S<312> | 1137.06 | 381 | 12 | 100 |
| 1020 | S<313> | 1124.07 | 500 | 12 | 100 |
| 1021 | S<314> | 1111.07 | 381 | 12 | 100 |
| 1022 | S<315> | 1098.08 | 500 | 12 | 100 |
| 1023 | S<316> | 1085.08 | 381 | 12 | 100 |
| 1024 | S<317> | 1072.09 | 500 | 12 | 100 |
| 1025 | S<318> | 1059.09 | 381 | 12 | 100 |
| 1026 | S<319> | 1046.1 | 500 | 12 | 100 |
| 1027 | S<320> | 1033.1 | 381 | 12 | 100 |
| 1028 | S<321> | 1020.11 | 500 | 12 | 100 |
| 1029 | S<322> | 1007.11 | 381 | 12 | 100 |
| 1030 | S<323> | 994.12 | 500 | 12 | 100 |
| 1031 | S<324> | 981.12 | 381 | 12 | 100 |
| 1032 | S<325> | 968.13 | 500 | 12 | 100 |
| 1033 | S<326> | 955.13 | 381 | 12 | 100 |
| 1034 | S<327> | 942.14 | 500 | 12 | 100 |
| 1035 | S<328> | 929.14 | 381 | 12 | 100 |
| 1036 | S<329> | 916.15 | 500 | 12 | 100 |
| 1037 | S<330> | 903.15 | 381 | 12 | 100 |
| 1038 | S<331> | 890.16 | 500 | 12 | 100 |
| 1039 | S<332> | 877.16 | 381 | 12 | 100 |
| 1040 | S<333> | 864.17 | 500 | 12 | 100 |
| 1041 | S<334> | 851.17 | 381 | 12 | 100 |
| 1042 | S<335> | 838.18 | 500 | 12 | 100 |
| 1043 | S<336> | 825.18 | 381 | 12 | 100 |
| 1044 | S<337> | 812.19 | 500 | 12 | 100 |
| 1045 | S<338> | 799.19 | 381 | 12 | 100 |
| 1046 | S<339> | 786.2 | 500 | 12 | 100 |
| 1047 | S<340> | 773.2 | 381 | 12 | 100 |
| 1048 | S<341> | 760.21 | 500 | 12 | 100 |
| 1049 | S<342> | 747.21 | 381 | 12 | 100 |
| 1050 | S<343> | 734.22 | 500 | 12 | 100 |
| 1051 | S<344> | 721.22 | 381 | 12 | 100 |
| 1052 | S<345> | 708.23 | 500 | 12 | 100 |
| 1053 | S<346> | 695.23 | 381 | 12 | 100 |
| 1054 | S<347> | 682.24 | 500 | 12 | 100 |
| 1055 | S<348> | 669.24 | 381 | 12 | 100 |
| 1056 | S<349> | 656.25 | 500 | 12 | 100 |
| 1057 | S<350> | 643.25 | 381 | 12 | 100 |
| 1058 | S<351> | 630.26 | 500 | 12 | 100 |
| 1059 | S<352> | 617.26 | 381 | 12 | 100 |
| 1060 | S<353> | 604.27 | 500 | 12 | 100 |
| 1061 | S<354> | 591.27 | 381 | 12 | 100 |
| 1062 | S<355> | 578.28 | 500 | 12 | 100 |
| 1063 | S<356> | 565.28 | 381 | 12 | 100 |
| 1064 | S<357> | 552.29 | 500 | 12 | 100 |
| 1065 | S<358> | 539.29 | 381 | 12 | 100 |
| 1066 | S<359> | 526.3 | 500 | 12 | 100 |
| 1067 | S<360> | 513.3 | 381 | 12 | 100 |
| 1068 | S<361> | 500.31 | 500 | 12 | 100 |
| 1069 | S<362> | 487.31 | 381 | 12 | 100 |
| 1070 | S<363> | 474.32 | 500 | 12 | 100 |
| 1071 | S<364> | 461.32 | 381 | 12 | 100 |
| 1072 | S<365> | 448.33 | 500 | 12 | 100 |
| 1073 | S<366> | 435.33 | 381 | 12 | 100 |
| 1074 | S<367> | 422.34 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|--------------|------------------|----------------|------------|----------|-----|
| 1075 | S<368> | 409.34 | 381 | 12 | 100 |
| 1076 | S<369> | 396.35 | 500 | 12 | 100 |
| 1077 | S<370> | 383.35 | 381 | 12 | 100 |
| 1078 | S<371> | 370.36 | 500 | 12 | 100 |
| 1079 | S<372> | 357.36 | 381 | 12 | 100 |
| 1080 | S<373> | 344.37 | 500 | 12 | 100 |
| 1081 | S<374> | 331.37 | 381 | 12 | 100 |
| 1082 | S<375> | 318.38 | 500 | 12 | 100 |
| 1083 | S<376> | 305.38 | 381 | 12 | 100 |
| 1084 | S<377> | 292.39 | 500 | 12 | 100 |
| 1085 | S<378> | 279.39 | 381 | 12 | 100 |
| 1086 | S<379> | 266.4 | 500 | 12 | 100 |
| 1087 | S<380> | 253.4 | 381 | 12 | 100 |
| 1088 | S<381> | 240.41 | 500 | 12 | 100 |
| 1089 | S<382> | 227.41 | 381 | 12 | 100 |
| 1090 | S<383> | 214.42 | 500 | 12 | 100 |
| 1091 | S<384> | 201.42 | 381 | 12 | 100 |
| 1092 | S<385> | 188.43 | 500 | 12 | 100 |
| 1093 | S<386> | 175.43 | 381 | 12 | 100 |
| 1094 | S<387> | 162.44 | 500 | 12 | 100 |
| 1095 | S<388> | 149.44 | 381 | 12 | 100 |
| 1096 | S<389> | 136.45 | 500 | 12 | 100 |
| 1097 | S<390> | 123.45 | 381 | 12 | 100 |
| 1098 | S<391> | 110.46 | 500 | 12 | 100 |
| 1099 | S<392> | 97.46 | 381 | 12 | 100 |
| 1100 | S<393> | 84.47 | 500 | 12 | 100 |
| 1101 | S<394> | 71.47 | 381 | 12 | 100 |
| 1102 | S<395> | 58.48 | 500 | 12 | 100 |
| 1103 | S<396> | 45.48 | 381 | 12 | 100 |
| 1104 | S<397> | 32.49 | 500 | 12 | 100 |
| 1105 | S<398> | 19.49 | 381 | 12 | 100 |
| 1106 | S<399> | 6.5 | 500 | 12 | 100 |
| 1107 1108 | S<400> S<401> | -6.5 -19.49 | 381 500 | 12 12 | 100 |
| 1109 | S<401> | -19.49 | 381 | 12 | 100 |
| 1110 | S<402> | -45.48 | 500 | 12 | 100 |
| 1111 | S<404> | -58.48 | 381 | 12 | 100 |
| 1112 | S<405> | -71.47 | 500 | 12 | 100 |
| 1113 | S<406> | -84.47 | 381 | 12 | 100 |
| 1114 | S<407> | -97.46 | 500 | 12 | 100 |
| 1115 | S<408> | -110.46 | 381 | 12 | 100 |
| 1116 | S<409> | -123.45 | 500 | 12 | 100 |
| 1117 | S<410> | -136.45 | 381 | 12 | 100 |
| 1118 | S<411> | -149.44 | 500 | 12 | 100 |
| 1119 | S<412> | -162.44 | 381 | 12 | 100 |
| 1120 | S<413> | -175.43 | 500 | 12 | 100 |
| 1121 | S<414> | -188.43 | 381 | 12 | 100 |
| 1122 | S<415> | -201.42 | 500 | 12 | 100 |
| 1123 | S<416> | -214.42 | 381 | 12 | 100 |
| 1124 | S<417> | -227.41 | 500 | 12 | 100 |
| 1125 | S<418> | -240.41 | 381 | 12 | 100 |
| 1126 | S<419> | -253.4 | 500 | 12 | 100 |
| 1127 | S<420> | -266.4 | 381 | 12 | 100 |
| 1128 | S<421> | -279.39 | 500 | 12 | 100 |
| 1129 | S<422> | -292.39 | 381 | 12 | 100 |
| 1130 | S<423> | -305.38 | 500 | 12 | 100 |
| 1131 | S<424> | -318.38 | 381 | 12 | 100 |
| 1132 | S<425> | -331.37 | 500 | 12 | 100 |
| 1133 | S<426> | -344.37 | 381 | 12 | 100 |
| 1134 | S<427> | -357.36 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|--------------|------------------|----------------------|------------|----------|-----|
| 1135 | S<428> | -370.36 | 381 | 12 | 100 |
| 1136 | S<429> | -383.35 | 500 | 12 | 100 |
| 1137 | S<430> | -396.35 | 381 | 12 | 100 |
| 1138 | S<431> | -409.34 | 500 | 12 | 100 |
| 1139 | S<432> | -422.34 | 381 | 12 | 100 |
| 1140 | S<433> | -435.33 | 500 | 12 | 100 |
| 1141 | S<434> | -448.33 | 381 | 12 | 100 |
| 1142 | S<435> | -461.32 | 500 | 12 | 100 |
| 1143 | S<436> | -474.32 | 381 | 12 | 100 |
| 1144 | S<437> | -487.31 | 500 | 12 | 100 |
| 1145 | S<438> | -500.31 | 381 | 12 | 100 |
| 1146 | S<439> | -513.3 | 500 | 12 | 100 |
| 1147 | S<440> | -526.3 | 381 | 12 | 100 |
| 1148 | S<441> | -539.29 | 500 | 12 | 100 |
| 1149 | S<442> | -552.29 | 381 | 12 | 100 |
| 1150 | S<443> | -565.28 | 500 | 12 | 100 |
| 1151 | S<444> | -578.28 | 381 | 12 | 100 |
| 1152 | S<445> | -591.27 | 500 | 12 | 100 |
| 1153 | S<446> | -604.27 | 381 | 12 | 100 |
| 1154 | S<447> | -617.26 | 500 | 12 | 100 |
| 1155 | S<448> | -630.26 | 381 | 12 | 100 |
| 1156 | S<449> | -643.25 | 500 | 12 | 100 |
| 1157 | S<450> | -656.25 | 381 | 12 | 100 |
| 1158 | S<451> | -669.24 | 500 | 12 | 100 |
| 1159 | S<452> | -682.24 | 381 | 12 | 100 |
| 1160 | S<453> | -695.23 | 500 | 12 | 100 |
| 1161 | S<454> | -708.23 | 381 | 12 | 100 |
| 1162 | S<455> | -721.22 | 500 | 12 | 100 |
| 1163 | S<456> | -734.22 | 381 | 12 | 100 |
| 1164 | S<457> | -747.21 | 500 | 12 | 100 |
| 1165 | S<458> | -760.21 | 381 | 12 | 100 |
| 1166 | S<459> | -773.2 | 500 | 12 | 100 |
| 1167 | S<460> | -786.2 | 381 | 12 | 100 |
| 1168 | S<461> | -799.19 | 500 | 12 | 100 |
| 1169 | S<462> | -812.19 | 381 | 12 | 100 |
| 1170 | S<463> | -825.18 | 500 | 12 | 100 |
| 1171 | S<464> | -838.18 | 381 | 12 | 100 |
| 1172 | S<465> | -851.17 | 500 | 12 | 100 |
| 1173 | S<466> | -864.17 | 381 | 12 | 100 |
| 1174 | S<467> | -877.16 | 500 | 12 | 100 |
| 1175 | S<468> | -890.16 | 381 | 12 | 100 |
| 1176 | S<469> | -903.15 | 500 | 12 | 100 |
| 1177 | S<470> | -916.15 | 381 | 12 | 100 |
| 1178 | S<471> | -929.14 | 500 | 12 | 100 |
| 1179 | S<472> | -942.14 | 381 | 12 | 100 |
| 1180 | S<473> | -955.13 | 500 | 12 | 100 |
| 1181 | S<474> | -968.13 | 381 | 12 | 100 |
| 1182 | S<475> | -981.12 | 500 | 12 | 100 |
| 1183 | S<476> | -994.12 | 381 | 12 | 100 |
| 1184 | S<477> | -1007.11 | 500 | 12 | 100 |
| 1185 | S<478> | -1020.11 -1033.1 | 381 | 12 12 | 100 |
| 1186 | S<479> | -1033.1 | 500 | | 100 |
| 1187 1188 | S<480> | -1046.1 | 381 | 12 | 100 |
| | S<481> | -1059.09 | 500 | 12 | 100 |
| 1189 | S<482> | -1072.09 -1085.08 | 381 | 12 | 100 |
| 1190 | S<483> | -1085.08 | 500 381 | 12 12 | 100 |
| 1191 1192 | S<484> S<485> | -1098.08 -1111.07 | 381 500 | 12 | 100 |
| 1192 | S<485> | -1111.07 | 381 | 12 | 100 |
| 1193 | S<487> | -1124.07 | 500 | 12 | 100 |
| 1134 | US4012 | -1137.00 | 300 | ۱Z | 100 |

| # | Pad | Х | Υ | W | Н |
|--------------|------------------|---------------------|------------|----------|-----|
| 1195 | S<488> | -1150.06 | 381 | 12 | 100 |
| 1196 | S<489> | -1163.05 | 500 | 12 | 100 |
| 1197 | S<490> | -1176.05 | 381 | 12 | 100 |
| 1198 | S<491> | -1189.04 | 500 | 12 | 100 |
| 1199 | S<492> | -1202.04 | 381 | 12 | 100 |
| 1200 | S<493> | -1215.03 | 500 | 12 | 100 |
| 1201 | S<494> | -1228.03 | 381 | 12 | 100 |
| 1202 | S<495> | -1241.02 | 500 | 12 | 100 |
| 1203 | S<496> | -1254.02 | 381 | 12 | 100 |
| 1204 | S<497> | -1267.01 | 500 | 12 | 100 |
| 1205 | S<498> | -1280.01 | 381 | 12 | 100 |
| 1206 | S<499> | -1293 | 500 | 12 | 100 |
| 1207 | S<500> | -1306 | 381 | 12 | 100 |
| 1208 | S<501> | -1318.99 | 500 | 12 | 100 |
| 1209 | S<502> | -1331.99 | 381 | 12 | 100 |
| 1210 | S<503> | -1344.98 | 500 | 12 | 100 |
| 1211 | S<504> | -1357.98 | 381 | 12 | 100 |
| 1212 | S<505> | -1370.97 | 500 | 12 | 100 |
| 1213 | S<506> | -1383.97 | 381 | 12 | 100 |
| 1214 | S<507> | -1396.96 | 500 | 12 | 100 |
| 1215 | S<508> | -1409.96 | 381 | 12 | 100 |
| 1216 | S<509> | -1422.95 | 500 | 12 | 100 |
| 1217 | S<510> | -1435.95 | 381 | 12 | 100 |
| 1218 | S<511> | -1448.94 | 500 | 12 | 100 |
| 1219 | S<512> | -1461.94 | 381 | 12 | 100 |
| 1220 | S<513> | -1474.93 | 500 | 12 | 100 |
| 1221 | S<514> | -1487.93 | 381 | 12 | 100 |
| 1222 | S<515> | -1500.92 | 500 | 12 | 100 |
| 1223 | S<516> | -1513.92 | 381 | 12 12 | 100 |
| 1224 1225 | S<517> | -1526.91 | 500 | 12 | 100 |
| 1225 | S<518> S<519> | -1539.91 -1552.9 | 381 500 | 12 | 100 |
| 1227 | S<520> | -1565.9 | 381 | 12 | 100 |
| 1228 | S<520> | -1578.89 | 500 | 12 | 100 |
| 1229 | S<522> | -1591.89 | 381 | 12 | 100 |
| 1230 | S<523> | -1604.88 | 500 | 12 | 100 |
| 1231 | S<524> | -1617.88 | 381 | 12 | 100 |
| 1232 | S<525> | -1630.87 | 500 | 12 | 100 |
| 1233 | S<526> | -1643.87 | 381 | 12 | 100 |
| 1234 | S<527> | -1656.86 | 500 | 12 | 100 |
| 1235 | S<528> | -1669.86 | 381 | 12 | 100 |
| 1236 | S<529> | -1682.85 | 500 | 12 | 100 |
| 1237 | S<530> | -1695.85 | 381 | 12 | 100 |
| 1238 | S<531> | -1708.84 | 500 | 12 | 100 |
| 1239 | S<532> | -1721.84 | 381 | 12 | 100 |
| 1240 | S<533> | -1734.83 | 500 | 12 | 100 |
| 1241 | S<534> | -1747.83 | 381 | 12 | 100 |
| 1242 | S<535> | -1760.82 | 500 | 12 | 100 |
| 1243 | S<536> | -1773.82 | 381 | 12 | 100 |
| 1244 | S<537> | -1786.81 | 500 | 12 | 100 |
| 1245 | S<538> | -1799.81 | 381 | 12 | 100 |
| 1246 | S<539> | -1812.8 | 500 | 12 | 100 |
| 1247 | S<540> | -1825.8 | 381 | 12 | 100 |
| 1248 | S<541> | -1838.79 | 500 | 12 | 100 |
| 1249 | S<542> | -1851.79 | 381 | 12 | 100 |
| 1250 | S<543> | -1864.78 | 500 | 12 | 100 |
| 1251 | S<544> | -1877.78 | 381 | 12 | 100 |
| 1252 | S<545> | -1890.77 | 500 | 12 | 100 |
| 1253 | S<546> | -1903.77 | 381 | 12 | 100 |
| 1254 | S<547> | -1916.76 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|--------------|------------------|----------------------|------------|----------|------|
| 1255 | S<548> | -1929.76 | 381 | 12 | 100 |
| 1256 | S<549> | -1942.75 | 500 | 12 | 100 |
| 1257 | S<550> | -1955.75 | 381 | 12 | 100 |
| 1258 | S<551> | -1968.74 | 500 | 12 | 100 |
| 1259 | S<552> | -1981.74 | 381 | 12 | 100 |
| 1260 | S<553> | -1994.73 | 500 | 12 | 100 |
| 1261 | S<554> | -2007.73 | 381 | 12 | 100 |
| 1262 | S<555> | -2020.72 | 500 | 12 | 100 |
| 1263 | S<556> | -2033.72 | 381 | 12 | 100 |
| 1264 | S<557> | -2046.71 | 500 | 12 | 100 |
| 1265 | S<558> | -2059.71 | 381 | 12 | 100 |
| 1266 | S<559> | -2072.7 | 500 | 12 | 100 |
| 1267 | S<560> | -2085.7 | 381 | 12 | 100 |
| 1268 | S<561> | -2098.69 | 500 | 12 | 100 |
| 1269 | S<562> | -2111.69 | 381 | 12 | 100 |
| 1270 | S<563> | -2124.68 | 500 | 12 | 100 |
| 1271 | S<564> | -2137.68 | 381 | 12 | 100 |
| 1272 | S<565> | -2150.67 | 500 | 12 | 100 |
| 1273 | S<566> | -2163.67 | 381 | 12 | 100 |
| 1274 | S<567> | -2176.66 | 500 | 12 | 100 |
| 1275 | S<568> | -2189.66 | 381 | 12 | 100 |
| 1276 | S<569> | -2202.65 | 500 | 12 | 100 |
| 1277 | S<570> | -2215.65 | 381 | 12 | 100 |
| 1278 | S<571> | -2228.64 | 500 | 12 | 100 |
| 1279 | S<572> | -2241.64 | 381 | 12 12 | 100 |
| 1280 1281 | S<573> S<574> | -2254.63 -2267.63 | 500 381 | 12 | 100 |
| | _ | | | | |
| 1282 1283 | S<575> S<576> | -2280.62 -2293.62 | 500 381 | 12 12 | 100 |
| 1284 | S<576> | -2293.62 | 500 | 12 | 100 |
| 1285 | S<578> | -2319.61 | 381 | 12 | 100 |
| 1286 | S<579> | -2332.6 | 500 | 12 | 100 |
| 1287 | S<580> | -2345.6 | 381 | 12 | 100 |
| 1288 | S<581> | -2358.59 | 500 | 12 | 100 |
| 1289 | S<582> | -2371.59 | 381 | 12 | 100 |
| 1290 | S<583> | -2384.58 | 500 | 12 | 100 |
| 1291 | S<584> | -2397.58 | 381 | 12 | 100 |
| 1292 | S<585> | -2410.57 | 500 | 12 | 100 |
| 1293 | S<586> | -2423.57 | 381 | 12 | 100 |
| 1294 | S<587> | -2436.56 | 500 | 12 | 100 |
| 1295 | S<588> | -2449.56 | 381 | 12 | 100 |
| 1296 | S<589> | -2462.55 | 500 | 12 | 100 |
| 1297 | S<590> | -2475.55 | 381 | 12 | 100 |
| 1298 | S<591> | -2488.54 | 500 | 12 | 100 |
| 1299 | S<592> | -2501.54 | 381 | 12 | 100 |
| 1300 | S<593> | -2514.53 | 500 | 12 | 100 |
| 1301 | S<594> | -2527.53 | 381 | 12 | 100 |
| 1302 | S<595> | -2540.52 | 500 | 12 | 100 |
| 1303 | S<596> | -2553.52 | 381 | 12 | 100 |
| 1304 | S<597> | -2566.51 | 500 | 12 | 100 |
| 1305 1306 | S<598> | -2579.51 -2592.5 | 381 500 | 12 12 | 100 |
| 1306 | S<599> S<600> | -2592.5 -2605.5 | 381 | | 100 |
| 1307 | S<600> | -2605.5 -2618.49 | 500 | 12 12 | 100 |
| 1309 | S<601> | -2616.49 -2631.49 | 381 | 12 | 100 |
| 1310 | S<603> | -2644.48 | 500 | 12 | 100 |
| 1311 | S<604> | -2657.48 | 381 | 12 | 100 |
| 1312 | S<605> | -2670.47 | 500 | 12 | 100 |
| 1313 | S<606> | -2683.47 | 381 | 12 | 100 |
| 1314 | S<607> | -2696.46 | 500 | 12 | 100 |
| | 0 .5017 | _550.10 | 550 | | . 50 |

| # | Pod | Х | Υ | W | Н |
|--------------|-------------------|----------------------|------------|----------|------|
| 1315 | Pad S<608> | -2709.46 | 381 | 12 | 100 |
| 1316 | S<609> | -2722.45 | 500 | 12 | 100 |
| 1317 | S<610> | -2725.45 | 381 | 12 | 100 |
| 1318 | S<611> | -2748.44 | 500 | 12 | 100 |
| 1319 | S<612> | -2761.44 | 381 | 12 | 100 |
| 1320 | S<613> | -2774.43 | 500 | 12 | 100 |
| 1321 | S<614> | -2787.43 | 381 | 12 | 100 |
| 1322 | S<615> | -2800.42 | 500 | 12 | 100 |
| 1323 | S<616> | -2813.42 | 381 | 12 | 100 |
| 1324 | S<617> | -2826.41 | 500 | 12 | 100 |
| 1325 | S<618> | -2839.41 | 381 | 12 | 100 |
| 1326 | S<619> | -2852.4 | 500 | 12 | 100 |
| 1327 | S<620> | -2865.4 | 381 | 12 | 100 |
| 1328 | S<621> | -2878.39 | 500 | 12 | 100 |
| 1329 | S<622> | -2891.39 | 381 | 12 | 100 |
| 1330 | S<623> | -2904.38 | 500 | 12 | 100 |
| 1331 | S<624> | -2917.38 | 381 | 12 | 100 |
| 1332 | S<625> | -2930.37 | 500 | 12 | 100 |
| 1333 | S<626> | -2943.37 | 381 | 12 | 100 |
| 1334 | S<627> | -2956.36 | 500 | 12 | 100 |
| 1335 | S<628> | -2969.36 | 381 | 12 | 100 |
| 1336 | S<629> | -2982.35 | 500 | 12 | 100 |
| 1337 | S<630> | -2995.35 | 381 | 12 | 100 |
| 1338 | S<631> | -3008.34 | 500 | 12 | 100 |
| 1339 | S<632> | -3021.34 | 381 | 12 | 100 |
| 1340 | S<633> | -3034.33 | 500 | 12 | 100 |
| 1341 | S<634> | -3047.33 | 381 | 12 | 100 |
| 1342 | S<635> | -3060.32 | 500 | 12 | 100 |
| 1343 | S<636> | -3073.32 | 381 | 12 | 100 |
| 1344 | S<637> | -3086.31 | 500 | 12 | 100 |
| 1345 | S<638> | -3099.31 | 381 | 12 | 100 |
| 1346 | S<639> | -3112.3 | 500 | 12 | 100 |
| 1347 | S<640> | -3125.3 | 381 | 12 | 100 |
| 1348 | S<641> | -3138.29 | 500 | 12 | 100 |
| 1349 | S<642> | -3151.29 | 381 | 12 | 100 |
| 1350 | S<643> | -3164.28 | 500 | 12 | 100 |
| 1351 | S<644> | -3177.28 | 381 | 12 | 100 |
| 1352 | S<645> | -3190.27 | 500 | 12 | 100 |
| 1353 | S<646> | -3203.27 | 381 | 12 | 100 |
| 1354 | S<647> | -3216.26 | 500 | 12 | 100 |
| 1355 | S<648> | -3229.26 | 381 | 12 | 100 |
| 1356 | S<649> | -3242.25 | 500 | 12 | 100 |
| 1357 | S<650> | -3255.25 | 381 | 12 | 100 |
| 1358 | S<651> | -3268.24 | 500 | 12 | 100 |
| 1359 | S<652> | -3281.24 | 381 | 12 | 100 |
| 1360 | S<653> | -3294.23 | 500 | 12 | 100 |
| 1361 | S<654> | -3307.23 | 381 | 12 | 100 |
| 1362 | S<655> | -3320.22 | 500 | 12 | 100 |
| 1363 | S<656> S<657> | -3333.22 -3346.21 | 381 500 | 12 12 | 100 |
| 1364 | _ | | 381 | | 100 |
| 1365 1366 | S<658> S<659> | -3359.21 -3372.2 | 500 | 12 12 | 100 |
| 1367 | S<660> | -3385.2 | 381 | 12 | 100 |
| 1368 | S<661> | -3398.19 | 500 | 12 | 100 |
| 1369 | S<662> | -3411.19 | 381 | 12 | 100 |
| 1370 | S<663> | -3411.19 | 500 | 12 | 100 |
| 1371 | S<664> | -3424.10 | 381 | 12 | 100 |
| 1371 | S<665> | -3450.17 | 500 | 12 | 100 |
| 1373 | S<666> | -3463.17 | 381 | 12 | 100 |
| 1374 | S<667> | -3476.16 | 500 | 12 | 100 |
| .57 7 | 0 10077 | 0 010 | | | . 50 |

| # | Pad | Х | Υ | W | Н |
|--------------|------------------|---------------------|------------|----------|-----|
| 1375 | S<668> | -3489.16 | 381 | 12 | 100 |
| 1376 | S<669> | -3502.15 | 500 | 12 | 100 |
| 1377 | S<670> | -3515.15 | 381 | 12 | 100 |
| 1378 | S<671> | -3528.14 | 500 | 12 | 100 |
| 1379 | S<672> | -3541.14 | 381 | 12 | 100 |
| 1380 | S<673> | -3554.13 | 500 | 12 | 100 |
| 1381 | S<674> | -3567.13 | 381 | 12 | 100 |
| 1382 | S<675> | -3580.12 | 500 | 12 | 100 |
| 1383 | S<676> | -3593.12 | 381 | 12 | 100 |
| 1384 | S<677> | -3606.11 | 500 | 12 | 100 |
| 1385 | S<678> | -3619.11 | 381 | 12 | 100 |
| 1386 | S<679> | -3632.1 | 500 | 12 | 100 |
| 1387 | S<680> | -3645.1 | 381 | 12 | 100 |
| 1388 | S<681> | -3658.09 | 500 | 12 | 100 |
| 1389 | S<682> | -3671.09 | 381 | 12 | 100 |
| 1390 | S<683> | -3684.08 | 500 | 12 | 100 |
| 1391 | S<684> | -3697.08 | 381 | 12 | 100 |
| 1392 | S<685> | -3710.07 | 500 | 12 | 100 |
| 1393 | S<686> | -3723.07 | 381 | 12 | 100 |
| 1394 | S<687> | -3736.06 | 500 | 12 | 100 |
| 1395 | S<688> | -3749.06 | 381 | 12 | 100 |
| 1396 | S<689> | -3762.05 | 500 | 12 | 100 |
| 1397 | S<690> | -3775.05 | 381 | 12 | 100 |
| 1398 | S<691> | -3788.04 | 500 | 12 | 100 |
| 1399 | S<692> | -3801.04 | 381 | 12 | 100 |
| 1400 | S<693> | -3814.03 | 500 | 12 | 100 |
| 1401 | S<694> | -3827.03 | 381 | 12 | 100 |
| 1402 | S<695> | -3840.02 | 500 | 12 | 100 |
| 1403 | S<696> | -3853.02 | 381 | 12 12 | 100 |
| 1404 1405 | S<697> | -3866.01 | 500 381 | 12 | 100 |
| 1405 | S<698> S<699> | -3879.01 -3892 | 500 | 12 | 100 |
| 1407 | S<700> | -3905 | 381 | 12 | 100 |
| 1408 | S<701> | -3917.99 | 500 | 12 | 100 |
| 1409 | S<702> | -3930.99 | 381 | 12 | 100 |
| 1410 | S<703> | -3943.98 | 500 | 12 | 100 |
| 1411 | S<704> | -3956.98 | 381 | 12 | 100 |
| 1412 | S<705> | -3969.97 | 500 | 12 | 100 |
| 1413 | S<706> | -3982.97 | 381 | 12 | 100 |
| 1414 | S<707> | -3995.96 | 500 | 12 | 100 |
| 1415 | S<708> | -4008.96 | 381 | 12 | 100 |
| 1416 | S<709> | -4021.95 | 500 | 12 | 100 |
| 1417 | S<710> | -4034.95 | 381 | 12 | 100 |
| 1418 | S<711> | -4047.94 | 500 | 12 | 100 |
| 1419 | S<712> | -4060.94 | 381 | 12 | 100 |
| 1420 | S<713> | -4073.93 | 500 | 12 | 100 |
| 1421 | S<714> | -4086.93 | 381 | 12 | 100 |
| 1422 | S<715> | -4099.92 | 500 | 12 | 100 |
| 1423 | S<716> | -4112.92 | 381 | 12 | 100 |
| 1424 | S<717> | -4125.91 | 500 | 12 | 100 |
| 1425 | S<718> | -4138.91 | 381 | 12 | 100 |
| 1426 | S<719> | -4151.9 | 500 | 12 | 100 |
| 1427 | S<720> | -4164.9 | 381 | 12 | 100 |
| 1428 | S<721> | -4177.89 | 500 | 12 | 100 |
| 1429 | S<722> | -4190.89 | 381 | 12 | 100 |
| 1430 | S<723> | -4203.88 | 500 | 12 | 100 |
| 1431 | S<724> | -4216.88 | 381 | 12 | 100 |
| 1432 | S<725> | -4229.87 | 500 | 12 | 100 |
| 1433 | S<726> | -4242.87 4255.86 | 381 | 12 | 100 |
| 1434 | S<727> | -4255.86 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|--------------|------------------|----------------------|------------|----------|-----|
| 1435 | S<728> | -4268.86 | 381 | 12 | 100 |
| 1436 | S<729> | -4281.85 | 500 | 12 | 100 |
| 1437 | S<730> | -4294.85 | 381 | 12 | 100 |
| 1438 | S<731> | -4307.84 | 500 | 12 | 100 |
| 1439 | S<732> | -4320.84 | 381 | 12 | 100 |
| 1440 | S<733> | -4333.83 | 500 | 12 | 100 |
| 1441 | S<734> | -4346.83 | 381 | 12 | 100 |
| 1442 | S<735> | -4359.82 | 500 | 12 | 100 |
| 1443 | S<736> | -4372.82 | 381 | 12 | 100 |
| 1444 | S<737> | -4385.81 | 500 | 12 | 100 |
| 1445 | S<738> | -4398.81 | 381 | 12 | 100 |
| 1446 | S<739> | -4411.8 | 500 | 12 | 100 |
| 1447 | S<740> | -4424.8 | 381 | 12 | 100 |
| 1448 | S<741> | -4437.79 | 500 | 12 | 100 |
| 1449 | S<742> | -4450.79 | 381 | 12 | 100 |
| 1450 | S<743> | -4463.78 | 500 | 12 | 100 |
| 1451 | S<744> | -4476.78 | 381 | 12 | 100 |
| 1452 | S<745> | -4489.77 | 500 | 12 | 100 |
| 1453 | S<746> | -4502.77 | 381 | 12 | 100 |
| 1454 | S<747> | -4515.76 | 500 | 12 | 100 |
| 1455 | S<748> | -4528.76 | 381 | 12 | 100 |
| 1456 | S<749> | -4541.75 | 500 | 12 | 100 |
| 1457 | S<750> | -4554.75 | 381 | 12 | 100 |
| 1458 | S<751> | -4567.74 | 500 | 12 | 100 |
| 1459 | S<752> | -4580.74 | 381 | 12 | 100 |
| 1460 | S<753> | -4593.73 | 500 | 12 | 100 |
| 1461 | S<754> | -4606.73 | 381 | 12 | 100 |
| 1462 | S<755> | -4619.72 | 500 | 12 | 100 |
| 1463 | S<756> | -4632.72 | 381 | 12 | 100 |
| 1464 | S<757> | -4645.71 | 500 | 12 | 100 |
| 1465 | S<758> | -4658.71 | 381 | 12 | 100 |
| 1466 | S<759> | -4671.7 | 500 | 12 | 100 |
| 1467 | S<760> | -4684.7 | 381 | 12 | 100 |
| 1468 | S<761> | -4697.69 | 500 | 12 | 100 |
| 1469 | S<762> | -4710.69 | 381 | 12 | 100 |
| 1470 | S<763> | -4723.68 | 500 | 12 | 100 |
| 1471 | S<764> | -4736.68 | 381 | 12 | 100 |
| 1472 | S<765> | -4749.67 | 500 | 12 | 100 |
| 1473 1474 | S<766> | -4762.67 | 381 | 12 | 100 |
| | S<767> | -4775.66 | 500 | 12 | 100 |
| 1475 | S<768> S<769> | -4788.66 | 381 | 12 | 100 |
| 1476 | S<769> | -4801.65 -4814.65 | 500 | 12 12 | |
| 1477 1478 | S<771> | -4827.64 | 381 500 | 12 | 100 |
| 1479 | S<772> | -4840.64 | 381 | 12 | 100 |
| 1480 | S<773> | -4853.63 | 500 | 12 | 100 |
| 1481 | S<774> | -4866.63 | 381 | 12 | 100 |
| 1482 | S<775> | -4879.62 | 500 | 12 | 100 |
| 1483 | S<776> | -4892.62 | 381 | 12 | 100 |
| 1484 | S<777> | -4905.61 | 500 | 12 | 100 |
| 1485 | S<778> | -4918.61 | 381 | 12 | 100 |
| 1486 | S<779> | -4931.6 | 500 | 12 | 100 |
| 1487 | S<780> | -4944.6 | 381 | 12 | 100 |
| 1488 | S<781> | -4957.59 | 500 | 12 | 100 |
| 1489 | S<782> | -4970.59 | 381 | 12 | 100 |
| 1490 | S<783> | -4983.58 | 500 | 12 | 100 |
| 1491 | S<784> | -4996.58 | 381 | 12 | 100 |
| 1492 | S<785> | -5009.57 | 500 | 12 | 100 |
| 1493 | S<786> | -5022.57 | 381 | 12 | 100 |
| 1494 | S<787> | -5035.56 | 500 | 12 | 100 |
| | | | | | |

| # | Pad | Х | Υ | W | Н |
|------|--------|---------------------|-----|----|-----|
| 1495 | S<788> | -5048.56 | 381 | 12 | 100 |
| 1496 | S<789> | -5061.55 | 500 | 12 | 100 |
| 1497 | S<790> | -5074.55 | 381 | 12 | 100 |
| 1498 | S<791> | -5087.54 | 500 | 12 | 100 |
| 1499 | S<792> | -5100.54 | 381 | 12 | 100 |
| 1500 | S<793> | -5113.53 | 500 | 12 | 100 |
| 1501 | S<794> | -5126.53 | 381 | 12 | 100 |
| 1502 | S<795> | -5139.52 | 500 | 12 | 100 |
| 1503 | S<796> | -5152.52 | 381 | 12 | 100 |
| 1504 | S<797> | -5165.51 | 500 | 12 | 100 |
| 1505 | S<798> | -5178.51 | 381 | 12 | 100 |
| 1506 | S<799> | -5191.5 | 500 | 12 | 100 |
| 1507 | VBD<1> | -5204.5 | 381 | 12 | 100 |
| 1508 | DUMMY | -5217.49 | 500 | 12 | 100 |
| 1509 | DUMMY | -5230.49 | 381 | 12 | 100 |
| 1510 | DUMMY | -5329.48 | 500 | 12 | 100 |
| 1511 | DUMMY | -5342.48 | 381 | 12 | 100 |
| 1512 | DUMMY | -5354.47 | 500 | 12 | 100 |
| 1513 | GD<3> | -5367.47 | 381 | 12 | 100 |
| 1514 | G<599> | -5379.46 | 500 | 12 | 100 |
| 1515 | G<597> | -5392.46 | 381 | 12 | 100 |
| 1516 | G<595> | -5404.45 | 500 | 12 | 100 |
| 1517 | G<593> | -5417.45 | 381 | 12 | 100 |
| 1518 | G<591> | -5429.44 | 500 | 12 | 100 |
| 1519 | G<589> | -5442.44 | 381 | 12 | 100 |
| 1520 | G<587> | -5454.43 | 500 | 12 | 100 |
| 1521 | G<585> | -5467.43 | 381 | 12 | 100 |
| 1522 | G<583> | -5479.42 | 500 | 12 | 100 |
| 1523 | G<581> | -5492.42 | 381 | 12 | 100 |
| 1524 | G<579> | -5504.41 | 500 | 12 | 100 |
| 1525 | G<577> | -5517.41 | 381 | 12 | 100 |
| 1526 | G<575> | -5529.4 | 500 | 12 | 100 |
| 1527 | G<573> | -5542.4 | 381 | 12 | 100 |
| 1528 | G<571> | -5554.39 | 500 | 12 | 100 |
| 1529 | G<569> | -5567.39 | 381 | 12 | 100 |
| 1530 | G<567> | -5579.38 | 500 | 12 | 100 |
| 1531 | G<565> | -5592.38 | 381 | 12 | 100 |
| 1532 | G<563> | -5604.37 | 500 | 12 | 100 |
| 1533 | G<561> | -5617.37 | 381 | 12 | 100 |
| 1534 | G<559> | -5629.36 | 500 | 12 | 100 |
| 1535 | G<557> | -5642.36 | 381 | 12 | 100 |
| 1536 | G<555> | -5654.35 | 500 | 12 | 100 |
| 1537 | G<553> | -5667.35 | 381 | 12 | 100 |
| 1538 | G<551> | -5679.34 | 500 | 12 | 100 |
| 1539 | G<549> | -5692.34 | 381 | 12 | 100 |
| 1540 | G<547> | -5704.33 | 500 | 12 | 100 |
| 1541 | G<545> | -5717.33 | 381 | 12 | 100 |
| 1542 | G<543> | -5729.32 | 500 | 12 | 100 |
| 1543 | G<541> | -5742.32 | 381 | 12 | 100 |
| 1544 | G<539> | -5754.31 | 500 | 12 | 100 |
| 1545 | G<537> | -5767.31 | 381 | 12 | 100 |
| 1546 | G<535> | -5779.3 | 500 | 12 | 100 |
| 1547 | G<533> | -5792.3 | 381 | 12 | 100 |
| 1548 | G<531> | -5804.29 | 500 | 12 | 100 |
| 1549 | G<529> | -5817.29 | 381 | 12 | 100 |
| 1550 | G<527> | -5829.28 | 500 | 12 | 100 |
| 1551 | G<525> | -5842.28 | 381 | 12 | 100 |
| 1552 | G<523> | -5854.27 5867.27 | 500 | 12 | 100 |
| 1553 | G<521> | -5867.27 5970.26 | 381 | 12 | 100 |
| 1554 | G<519> | -5879.26 | 500 | 12 | 100 |

| 1555 | # | Pad | Х | Υ | W | Н |
|--|------|--------|----------|-----|----|-----|
| 1556 | | | | | | |
| 1557 | | | | | | |
| 1558 | | | | | | |
| 1559 | | | | | | |
| 1560 | | | | | | |
| 1561 | | | | | | |
| 1562 | | | | | | |
| 1563 | | | | | | |
| 1564 | | | | | | |
| 1565 | | | | | | |
| 1566 | | | | | | |
| 1567 | | | | | | |
| 1568 | | | | | | |
| 1569 | | | | | | |
| 1570 | | | | | | |
| 1571 G<485> -6092.18 381 12 100 1572 G<483> -6104.17 500 12 100 1573 G<481> -6117.17 381 12 100 1574 G<479> -6129.16 500 12 100 1575 G<477> -6142.16 381 12 100 1576 G<475> -6154.15 500 12 100 1577 G<473> -6167.15 381 12 100 1578 G<471> -6179.14 500 12 100 1579 G<469> -6192.14 381 12 100 1579 G<465> -6217.13 350 12 100 1580 G<467> -6204.13 500 12 100 1581 G<465> -6217.13 381 12 100 1582 G<465> -6251.1 381 12 100 1583 G<461> | | G<487> | | | | |
| 1572 G<483> -6104.17 500 12 100 1573 G<481> -6117.17 381 12 100 1574 G<479> -6129.16 500 12 100 1575 G<477> -6142.16 381 12 100 1576 G<473> -6167.15 381 12 100 1577 G<473> -6167.15 381 12 100 1578 G<471> -6179.14 500 12 100 1579 G<469> -6192.14 381 12 100 1580 G<467> -6204.13 500 12 100 1581 G<465> -6271.13 381 12 100 1582 G<463> -629.12 500 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> | | | | | | |
| 1573 | | | | | | |
| 1574 G<479> -6129.16 500 12 100 1575 G<477> -6142.16 381 12 100 1576 G<475> -6154.15 500 12 100 1577 G<473> -6167.15 381 12 100 1578 G<471> -6179.14 500 12 100 1579 G<469> -6192.14 381 12 100 1580 G<467> -6204.13 500 12 100 1581 G<465> -6217.13 381 12 100 1582 G<463> -6229.12 500 12 100 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<453> -6292.1 381 12 100 1588 G<451 | | | | | | |
| 1575 G<477> -6142.16 381 12 100 1576 G<475> -6154.15 500 12 100 1577 G<473> -6167.15 381 12 100 1578 G<471> -6179.14 500 12 100 1579 G<469> -6192.14 381 12 100 1580 G<467> -6204.13 500 12 100 1581 G<465> -6217.13 381 12 100 1582 G<463> -6229.12 500 12 100 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<453> -6292.1 381 12 100 1588 G<4451> -6304.09 500 12 100 1589 G<4449> | | | | | | |
| 1576 G<475> -6154.15 500 12 100 1577 G<473> -6167.15 381 12 100 1578 G<471> -6179.14 500 12 100 1579 G<469> -6192.14 381 12 100 1580 G<467> -6204.13 500 12 100 1581 G<465> -6217.13 381 12 100 1582 G<463> -6229.12 500 12 100 1582 G<463> -6229.12 500 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<441> -6304.09 500 12 100 1589 G<447> | | | | | | |
| 1577 G<473> -6167.15 381 12 100 1578 G<471> -6179.14 500 12 100 1579 G<469> -6192.14 381 12 100 1580 G<467> -6204.13 500 12 100 1581 G<465> -6217.13 381 12 100 1582 G<463> -6229.12 500 12 100 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> | | | | | | |
| 1578 G<471> -6179.14 500 12 100 1579 G<469> -6192.14 381 12 100 1580 G<467> -6204.13 500 12 100 1581 G<465> -6217.13 381 12 100 1582 G<463> -6229.12 500 12 100 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<4435 | | | | | | |
| 1579 G<469> -6192.14 381 12 100 1580 G<467> -6204.13 500 12 100 1581 G<465> -6217.13 381 12 100 1582 G<463> -6229.12 500 12 100 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<455> -6292.1 381 12 100 1588 G<441> -6304.09 500 12 100 1589 G<4449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<443> | | | | | | |
| 1580 G<467> -6204.13 500 12 100 1581 G<465> -6217.13 381 12 100 1582 G<463> -6229.12 500 12 100 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<4449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -637.07 381 12 100 1593 G<441> | | _ | | | | |
| 1581 G<465> -6217.13 381 12 100 1582 G<463> -6229.12 500 12 100 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<433> | | | | | | |
| 1582 G<463> -6229.12 500 12 100 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6342.08 381 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> | | | | | | |
| 1583 G<461> -6242.12 381 12 100 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6342.08 381 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> | | | | | | |
| 1584 G<459> -6254.11 500 12 100 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6342.08 381 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> | | G<461> | | | 12 | |
| 1585 G<457> -6267.11 381 12 100 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6329.08 381 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6342.08 381 12 100 1593 G<441> -6367.07 381 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> | | G<459> | | | | 100 |
| 1586 G<455> -6279.1 500 12 100 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6329.08 381 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> | 1585 | G<457> | | 381 | 12 | 100 |
| 1587 G<453> -6292.1 381 12 100 1588 G<451> -6304.09 500 12 100 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 381 12 100 1599 G<429> | | | | | | 100 |
| 1589 G<449> -6317.09 381 12 100 1590 G<447> -6329.08 500 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> | | G<453> | -6292.1 | 381 | 12 | 100 |
| 1590 G<447> -6329.08 500 12 100 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<417> | 1588 | G<451> | -6304.09 | 500 | 12 | 100 |
| 1591 G<445> -6342.08 381 12 100 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> | 1589 | G<449> | -6317.09 | 381 | 12 | 100 |
| 1592 G<443> -6354.07 500 12 100 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> | 1590 | G<447> | -6329.08 | 500 | 12 | 100 |
| 1593 G<441> -6367.07 381 12 100 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> | 1591 | G<445> | -6342.08 | 381 | 12 | 100 |
| 1594 G<439> -6379.06 500 12 100 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> | 1592 | G<443> | -6354.07 | 500 | 12 | 100 |
| 1595 G<437> -6392.06 381 12 100 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> | 1593 | G<441> | -6367.07 | 381 | 12 | 100 |
| 1596 G<435> -6404.05 500 12 100 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> | 1594 | G<439> | -6379.06 | 500 | 12 | 100 |
| 1597 G<433> -6417.05 381 12 100 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> | 1595 | G<437> | -6392.06 | 381 | 12 | 100 |
| 1598 G<431> -6429.04 500 12 100 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> | 1596 | G<435> | -6404.05 | 500 | 12 | 100 |
| 1599 G<429> -6442.04 381 12 100 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> | 1597 | | | 381 | | 100 |
| 1600 G<427> -6454.03 500 12 100 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> | 1598 | G<431> | -6429.04 | 500 | 12 | 100 |
| 1601 G<425> -6467.03 381 12 100 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | 1599 | | -6442.04 | 381 | 12 | 100 |
| 1602 G<423> -6479.02 500 12 100 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | 1600 | G<427> | -6454.03 | 500 | | |
| 1603 G<421> -6492.02 381 12 100 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | 1601 | | | 381 | | 100 |
| 1604 G<419> -6504.01 500 12 100 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | 1602 | | | 500 | | 100 |
| 1605 G<417> -6517.01 381 12 100 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | 1603 | G<421> | -6492.02 | 381 | 12 | 100 |
| 1606 G<415> -6529 500 12 100 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | | | | 500 | | 100 |
| 1607 G<413> -6542 381 12 100 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | | | | | | 100 |
| 1608 G<411> -6553.99 500 12 100 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | | | | | | |
| 1609 G<409> -6566.99 381 12 100 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | - | | | | | 100 |
| 1610 G<407> -6578.98 500 12 100 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | | | | | | |
| 1611 G<405> -6591.98 381 12 100 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | | G<409> | | | | 100 |
| 1612 G<403> -6603.97 500 12 100 1613 G<401> -6616.97 381 12 100 | | | -6578.98 | | | |
| 1613 G<401> -6616.97 381 12 100 | | | -6591.98 | | | |
| | | | | | | |
| 1614 G<399> -6628.96 500 12 100 | | | -6616.97 | 381 | | 100 |
| | 1614 | G<399> | -6628.96 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|--------------|------------------|----------------------|------------|----------|-----|
| 1615 | G<397> | -6641.96 | 381 | 12 | 100 |
| 1616 | G<395> | -6653.95 | 500 | 12 | 100 |
| 1617 | G<393> | -6666.95 | 381 | 12 | 100 |
| 1618 | G<391> | -6678.94 | 500 | 12 | 100 |
| 1619 | G<389> | -6691.94 | 381 | 12 | 100 |
| 1620 | G<387> | -6703.93 | 500 | 12 | 100 |
| 1621 | G<385> | -6716.93 | 381 | 12 | 100 |
| 1622 | G<383> | -6728.92 | 500 | 12 | 100 |
| 1623 | G<381> | -6741.92 | 381 | 12 | 100 |
| 1624 | G<379> | -6753.91 | 500 | 12 | 100 |
| 1625 | G<377> | -6766.91 | 381 | 12 | 100 |
| 1626 | G<375> | -6778.9 | 500 | 12 | 100 |
| 1627 | G<373> | -6791.9 | 381 | 12 | 100 |
| 1628 | G<371> | -6803.89 | 500 | 12 | 100 |
| 1629 | G<369> | -6816.89 | 381 | 12 | 100 |
| 1630 | G<367> | -6828.88 | 500 | 12 | 100 |
| 1631 | G<365> | -6841.88 | 381 | 12 | 100 |
| 1632 | G<363> | -6853.87 | 500 | 12 | 100 |
| 1633 | G<361> | -6866.87 | 381 | 12 | 100 |
| 1634 | G<359> | -6878.86 | 500 | 12 | 100 |
| 1635 1636 | G<357> G<355> | -6891.86 -6903.85 | 381 500 | 12 12 | 100 |
| 1637 | G<353> | -6916.85 | 381 | 12 | 100 |
| 1638 | G<351> | -6928.84 | 500 | 12 | 100 |
| 1639 | G<349> | -6941.84 | 381 | 12 | 100 |
| 1640 | G<347> | -6953.83 | 500 | 12 | 100 |
| 1641 | G<345> | -6966.83 | 381 | 12 | 100 |
| 1642 | G<343> | -6978.82 | 500 | 12 | 100 |
| 1643 | G<341> | -6991.82 | 381 | 12 | 100 |
| 1644 | G<339> | -7003.81 | 500 | 12 | 100 |
| 1645 | G<337> | -7016.81 | 381 | 12 | 100 |
| 1646 | G<335> | -7028.8 | 500 | 12 | 100 |
| 1647 | G<333> | -7041.8 | 381 | 12 | 100 |
| 1648 | G<331> | -7053.79 | 500 | 12 | 100 |
| 1649 | G<329> | -7066.79 | 381 | 12 | 100 |
| 1650 | G<327> | -7078.78 | 500 | 12 | 100 |
| 1651 | G<325> | -7091.78 | 381 | 12 | 100 |
| 1652 | G<323> | -7103.77 | 500 | 12 | 100 |
| 1653 | G<321> | -7116.77 | 381 | 12 | 100 |
| 1654 | G<319> | -7128.76 | 500 | 12 | 100 |
| 1655 | G<317> G<315> | -7141.76 -7153.75 | 381 | 12 | 100 |
| 1656 1657 | G<313> | -7166.75 | 500 381 | 12 12 | 100 |
| 1658 | G<311> | -7178.74 | 500 | 12 | 100 |
| 1659 | G<309> | -7191.74 | 381 | 12 | 100 |
| 1660 | G<307> | -7203.73 | 500 | 12 | 100 |
| 1661 | G<305> | -7216.73 | 381 | 12 | 100 |
| 1662 | G<303> | -7228.72 | 500 | 12 | 100 |
| 1663 | G<301> | -7241.72 | 381 | 12 | 100 |
| 1664 | G<299> | -7253.71 | 500 | 12 | 100 |
| 1665 | G<297> | -7266.71 | 381 | 12 | 100 |
| 1666 | G<295> | -7278.7 | 500 | 12 | 100 |
| 1667 | G<293> | -7291.7 | 381 | 12 | 100 |
| 1668 | G<291> | -7303.69 | 500 | 12 | 100 |
| 1669 | G<289> | -7316.69 | 381 | 12 | 100 |
| 1670 | G<287> | -7328.68 | 500 | 12 | 100 |
| 1671 | G<285> | -7341.68 | 381 | 12 | 100 |
| 1672 | G<283> | -7353.67 | 500 | 12 | 100 |
| 1673 | G<281> | -7366.67 | 381 | 12 | 100 |
| 1674 | G<279> | -7378.66 | 500 | 12 | 100 |


| 1675 | # | Pad | Х | Υ | W | Н |
|--|------|--------|----------|-----|----|-----|
| 1676 | | _ | | | | |
| 1677 | | _ | | | | |
| 1678 | 1677 | | | 381 | 12 | |
| 1679 | | | -7428.64 | | 12 | |
| 1680 | | | | | | |
| 1681 | 1680 | | | | 12 | |
| 1683 | 1681 | | | | | 100 |
| 1683 | 1682 | _ | | | 12 | 100 |
| 1684 G<259> -7503.61 500 12 100 1685 G<257> -7516.61 381 12 100 1686 G<255> -7528.6 500 12 100 1687 G<253> -7541.6 381 12 100 1688 G<251> -7553.59 500 12 100 1689 G<249> -7566.59 381 12 100 1690 G<247> -7578.58 500 12 100 1691 G<245> -7591.58 381 12 100 1692 G<243> -7603.57 500 12 100 1693 G<241> -7616.57 381 12 100 1694 G<239> -7628.56 500 12 100 1695 G<237> -7641.56 381 12 100 1696 G<235> -7653.55 500 12 100 1697 G<233> -7666.55 381 12 100 1698 G<231> -7678.54 500 12 100 1699 G<223> -7691.54 381 12 100 1699 G<223> -7769.54 500 12 100 1700 G<227> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -77741.52 381 12 100 1704 G<215> -7776.51 500 12 100 1705 G<217> -7776.51 381 12 100 1706 G<217> -7766.51 381 12 100 1707 G<213> -7781.5 500 12 100 1708 G<211> -7783.51 500 12 100 1709 G<209> -7816.49 381 12 100 1710 G<205> -7841.48 381 12 100 1711 G<205> -7841.48 381 12 100 1712 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<195> -7883.48 500 12 100 1715 G<197> -7894.48 500 12 100 1716 G<195> -7894.48 500 12 100 1717 G<193> -7894.44 500 12 100 1719 G<185> -7903.45 500 12 100 1719 G<185> -7903.45 500 12 100 1720 G<187> -7903.45 500 12 100 1721 G<185> -7903.45 500 12 100 1722 G<185> -7903.45 500 12 100 1723 G<185> -7903.45 500 12 100 1724 G<175> -8041.4 381 12 100 1725 G<177> -8066.39 381 12 100 1726 G<185> -8091.38 381 12 100 1727 G<175> -8094.4 | 1683 | G<261> | -7491.62 | 381 | | 100 |
| 1686 G<255> -7528.6 500 12 100 1687 G<253> -7541.6 381 12 100 1688 G<249> -7566.59 381 12 100 1689 G<249> -7566.59 381 12 100 1690 G<247> -7578.58 500 12 100 1691 G<245> -7591.58 381 12 100 1692 G<243> -7603.57 500 12 100 1693 G<241> -7616.57 381 12 100 1694 G<239> -7628.56 500 12 100 1695 G<237> -7641.56 381 12 100 1696 G<235> -7653.55 500 12 100 1697 G<233> -7666.55 381 12 100 1698 G<231> -7678.54 500 12 100 1699 G<223> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7766.51 381 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<215> -7778.5 500 12 100 1708 G<215> -7778.5 500 12 100 1709 G<203> -7866.47 381 12 100 1701 G<205> -7816.49 381 12 100 1702 G<203> -7866.47 381 12 100 1703 G<201> -786.49 381 12 100 1704 G<205> -7816.49 381 12 100 1705 G<211> -786.47 500 12 100 1709 G<203> -7853.47 500 12 100 1709 G<203> -7866.47 381 12 100 1711 G<205> -7841.48 381 12 100 1712 G<303> -7853.47 500 12 100 1713 G<195> -7993.49 500 12 100 1714 G<195> -7894.44 500 12 100 1715 G<197> -7894.44 500 12 100 1716 G<185> -7993.49 500 12 100 1721 G<185> -7993.49 500 12 100 1722 G<185> -7993.49 500 12 100 1723 G<185> -7993.49 500 12 100 1724 G<175> -8064.47 381 12 100 1725 G<175> -8028.48 500 12 100 1726 G<185> -7993.49 500 12 100 1727 G<175> -8028.4 500 12 100 1728 G<175> -8028.4 50 | | G<259> | | | 12 | 100 |
| 1687 G<253> -7541.6 381 12 100 1688 G<261> -7553.59 500 12 100 1689 G<247> -7566.59 381 12 100 1690 G<247> -7578.58 500 12 100 1691 G<245> -7591.58 381 12 100 1692 G<243> -7603.57 500 12 100 1693 G<241> -7616.57 381 12 100 1694 G<239> -7628.56 500 12 100 1695 G<237> -7641.56 381 12 100 1696 G<235> -7653.55 500 12 100 1697 G<233> -7666.55 381 12 100 1698 G<231> -7678.54 500 12 100 1699 G<229> -7691.54 381 12 100 1699 G<229> -7691.54 381 12 100 1700 G<225> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<215> -7778.5 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1701 G<205> -7841.48 381 12 100 1701 G<205> -7841.48 381 12 100 1701 G<205> -7841.48 381 12 100 1701 G<305> -7853.47 500 12 100 1701 G<305> -7853.47 500 12 100 1701 G<305> -7853.47 500 12 100 1701 G<305> -7841.48 381 12 100 1702 G<303> -7853.47 500 12 100 1703 G<201> -7866.47 381 12 100 1704 G<195> -7966.43 381 12 100 1709 G<305> -7853.43 500 12 100 1709 G<305> -7853.43 500 12 100 1710 G<305> -7853.43 500 12 100 1711 G<185> -7966.43 381 12 100 1722 G<185> -7966.43 381 12 100 1723 G<185> -7966.43 381 12 100 1724 G<175> -8003.41 500 12 100 1725 G<175> -8028.4 500 12 100 1726 G<165> -8091.38 381 12 100 1727 G<173> -8041.4 381 12 100 1728 G<165> -8091.38 | 1685 | G<257> | -7516.61 | 381 | 12 | 100 |
| 1688 G<251> -7553.59 500 12 100 1689 G<249> -7566.59 381 12 100 1690 G<247> -7578.58 500 12 100 1691 G<245> -7591.58 381 12 100 1692 G<243> -7603.57 500 12 100 1693 G<241> -7616.57 381 12 100 1694 G<239> -7628.56 500 12 100 1695 G<237> -7641.56 381 12 100 1697 G<233> -7666.55 381 12 100 1698 G<231> -7678.54 500 12 100 1699 G<2229> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<227> -7765.51 381 12 100 1703 G<217> | 1686 | G<255> | -7528.6 | 500 | 12 | 100 |
| 1689 | 1687 | G<253> | -7541.6 | 381 | 12 | 100 |
| 1690 | 1688 | G<251> | -7553.59 | 500 | 12 | 100 |
| 1691 | 1689 | G<249> | -7566.59 | 381 | 12 | 100 |
| 1692 G<243> -7603.57 500 12 100 1693 G<241> -7616.57 381 12 100 1694 G<239> -7628.56 500 12 100 1695 G<237> -7641.56 381 12 100 1696 G<233> -7666.55 500 12 100 1698 G<231> -7678.54 500 12 100 1699 G<229> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<2225> -7716.53 381 12 100 1701 G<223> -7728.52 500 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7774.52 381 12 100 1704 G<213> -7778.5 500 12 100 1706 G<215> | 1690 | G<247> | -7578.58 | 500 | 12 | 100 |
| 1693 G<241> -7616.57 381 12 100 1694 G<239> -7628.56 500 12 100 1695 G<237> -7641.56 381 12 100 1696 G<235> -7653.55 500 12 100 1697 G<233> -7666.55 381 12 100 1698 G<231> -768.54 500 12 100 1699 G<229> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1701 G<2223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1703 G<221> -7741.52 381 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> | 1691 | G<245> | -7591.58 | 381 | 12 | 100 |
| 1694 G<239> -7628.56 500 12 100 1695 G<237> -7641.56 381 12 100 1696 G<235> -7653.55 500 12 100 1697 G<233> -7666.55 381 12 100 1698 G<231> -7678.54 500 12 100 1699 G<229> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<2225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<213> -7791.5 381 12 100 1706 G<213- | 1692 | | -7603.57 | 500 | 12 | 100 |
| 1695 G<237> -7641.56 381 12 100 1696 G<235> -7653.55 500 12 100 1697 G<233> -7666.55 381 12 100 1698 G<221> -7678.54 500 12 100 1699 G<229> -7691.54 381 12 100 1700 G<222> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1706 G<215> -7778.5 500 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7816.49 381 12 100 1709 G<209> | 1693 | G<241> | -7616.57 | 381 | 12 | 100 |
| 1696 G<235> -7653.55 500 12 100 1697 G<233> -7666.55 381 12 100 1698 G<231> -7678.54 500 12 100 1699 G<229> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<2225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1707 G<213> -7816.49 381 12 100 1709 G<209> | 1694 | G<239> | -7628.56 | 500 | 12 | 100 |
| 1697 G<233> -7666.55 381 12 100 1698 G<231> -7678.54 500 12 100 1699 G<229> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1707 G<213> -7791.5 381 12 100 1709 G<209> -7816.49 381 12 100 1710 G<209> | 1695 | G<237> | -7641.56 | 381 | 12 | 100 |
| 1698 G<231> -7678.54 500 12 100 1699 G<229> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1709 G<209> -7816.49 381 12 100 1711 G<203> | 1696 | | -7653.55 | | | 100 |
| 1699 G<229> -7691.54 381 12 100 1700 G<227> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<203> -7853.47 500 12 100 1713 G<201> | 1697 | G<233> | -7666.55 | 381 | 12 | |
| 1700 G<227> -7703.53 500 12 100 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<203> -7816.49 381 12 100 1709 G<209> -7816.49 381 12 100 1710 G<209> -7816.49 381 12 100 1711 G<203> -7853.47 500 12 100 1711 G<203> | | G<231> | -7678.54 | 500 | 12 | 100 |
| 1701 G<225> -7716.53 381 12 100 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<203> -7816.49 381 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> | 1699 | G<229> | -7691.54 | 381 | | |
| 1702 G<223> -7728.52 500 12 100 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1712 G<203> -7853.47 500 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197- | | | | | | |
| 1703 G<221> -7741.52 381 12 100 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1711 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> | | | | | | |
| 1704 G<219> -7753.51 500 12 100 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1711 G<205> -7841.48 381 12 100 1711 G<203> -7853.47 500 12 100 1711 G<203> -7866.47 381 12 100 1713 G<201> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> | | | | | | |
| 1705 G<217> -7766.51 381 12 100 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1711 G<203> -7853.47 500 12 100 1712 G<203> -7866.47 381 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> | | | | | | |
| 1706 G<215> -7778.5 500 12 100 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1712 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1717 G<193> -7916.45 381 12 100 1718 G<195> | | | | | | |
| 1707 G<213> -7791.5 381 12 100 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1712 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> | | | | | | |
| 1708 G<211> -7803.49 500 12 100 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1712 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> | | | | | | |
| 1709 G<209> -7816.49 381 12 100 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1712 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> | | | | | | |
| 1710 G<207> -7828.48 500 12 100 1711 G<205> -7841.48 381 12 100 1712 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> | | | | | | |
| 1711 G<205> -7841.48 381 12 100 1712 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> | | | | | | |
| 1712 G<203> -7853.47 500 12 100 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> | | | | | | |
| 1713 G<201> -7866.47 381 12 100 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> | | | | | | |
| 1714 G<199> -7878.46 500 12 100 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1727 G<173> | | | | | | |
| 1715 G<197> -7891.46 381 12 100 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> | | | | | | |
| 1716 G<195> -7903.45 500 12 100 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> | | | | | | |
| 1717 G<193> -7916.45 381 12 100 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1731 G<165> | | | | | | |
| 1718 G<191> -7928.44 500 12 100 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> | | | | | | |
| 1719 G<189> -7941.44 381 12 100 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> | | | | | | |
| 1720 G<187> -7953.43 500 12 100 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> | | | | | | |
| 1721 G<185> -7966.43 381 12 100 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | | | | | |
| 1722 G<183> -7978.42 500 12 100 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | | | | | |
| 1723 G<181> -7991.42 381 12 100 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | | | | | |
| 1724 G<179> -8003.41 500 12 100 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | | | | | |
| 1725 G<177> -8016.41 381 12 100 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | | | | | |
| 1726 G<175> -8028.4 500 12 100 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | | | | | |
| 1727 G<173> -8041.4 381 12 100 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | | | | | |
| 1728 G<171> -8053.39 500 12 100 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | G<173> | | | | 100 |
| 1729 G<169> -8066.39 381 12 100 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | G<171> | | | 12 | |
| 1730 G<167> -8078.38 500 12 100 1731 G<165> -8091.38 381 12 100 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | | | | | | 100 |
| 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | 1730 | G<167> | | 500 | 12 | 100 |
| 1732 G<163> -8103.37 500 12 100 1733 G<161> -8116.37 381 12 100 | 1731 | G<165> | -8091.38 | 381 | 12 | 100 |
| 1733 G<161> -8116.37 381 12 100 | 1732 | G<163> | | 500 | 12 | 100 |
| 1734 G<159> -8128.36 500 12 100 | 1733 | G<161> | -8116.37 | 381 | 12 | 100 |
| | 1734 | G<159> | -8128.36 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------|----------------|----------|-----|----|-----|
| 1735 | G<157> | -8141.36 | 381 | 12 | 100 |
| 1736 | G<155> | -8153.35 | 500 | 12 | 100 |
| 1737 | G<153> | -8166.35 | 381 | 12 | 100 |
| 1738 | G<151> | -8178.34 | 500 | 12 | 100 |
| 1739 | G<149> | -8191.34 | 381 | 12 | 100 |
| 1740 | G<147> | -8203.33 | 500 | 12 | 100 |
| 1741 | G<145> | -8216.33 | 381 | 12 | 100 |
| 1742 | G<143> | -8228.32 | 500 | 12 | 100 |
| 1743 | G<141> | -8241.32 | 381 | 12 | 100 |
| 1744 | G<139> | -8253.31 | 500 | 12 | 100 |
| 1745 | G<137> | -8266.31 | 381 | 12 | 100 |
| 1746 | G<135> | -8278.3 | 500 | 12 | 100 |
| 1747 | G<133> | -8291.3 | 381 | 12 | 100 |
| 1748 | G<131> | -8303.29 | 500 | 12 | 100 |
| 1749 | G<129> | -8316.29 | 381 | 12 | 100 |
| 1750 | G<127> | -8328.28 | 500 | 12 | 100 |
| 1751 | G<125> | -8341.28 | 381 | 12 | 100 |
| 1752 | G<123> | -8353.27 | 500 | 12 | 100 |
| 1753 | G<121> | -8366.27 | 381 | 12 | 100 |
| 1754 | G<119> | -8378.26 | 500 | 12 | 100 |
| 1755 | G<117> | -8391.26 | 381 | 12 | 100 |
| 1756 | G<115> | -8403.25 | 500 | 12 | 100 |
| 1757 | G<113> | -8416.25 | 381 | 12 | 100 |
| 1758 | G<111> | -8428.24 | 500 | 12 | 100 |
| 1759 | G<109> | -8441.24 | 381 | 12 | 100 |
| 1760 | G<107> | -8453.23 | 500 | 12 | 100 |
| 1761 | G<105> | -8466.23 | 381 | 12 | 100 |
| 1762 | G<103> | -8478.22 | 500 | 12 | 100 |
| 1763 | G<101> | -8491.22 | 381 | 12 | 100 |
| 1764 | G<99> | -8503.21 | 500 | 12 | 100 |
| 1765 | G<97> | -8516.21 | 381 | 12 | 100 |
| 1766 | G<95> | -8528.2 | 500 | 12 | 100 |
| 1767 | G<93> | -8541.2 | 381 | 12 | 100 |
| 1768 | G<91> | -8553.19 | 500 | 12 | 100 |
| 1769 | G<89> | -8566.19 | 381 | 12 | 100 |
| 1770 | G<87> | -8578.18 | 500 | 12 | 100 |
| 1771 | G<85> | -8591.18 | 381 | 12 | 100 |
| 1772 | G<83> | -8603.17 | 500 | 12 | 100 |
| 1773 | G<81> | -8616.17 | 381 | 12 | 100 |
| 1774 | G<79> | -8628.16 | 500 | 12 | 100 |
| 1775 | G<77> | -8641.16 | 381 | 12 | 100 |
| 1776 | G<75> | -8653.15 | 500 | 12 | 100 |
| 1777 | G<73> | -8666.15 | 381 | 12 | 100 |
| 1778 | G<71> | -8678.14 | 500 | 12 | 100 |
| 1779 | G<69> | -8691.14 | 381 | 12 | 100 |
| 1780 | G<67> | -8703.13 | 500 | 12 | 100 |
| 1781 | G<65> | -8716.13 | 381 | 12 | 100 |
| 1782 | G<63> | -8728.12 | 500 | 12 | 100 |
| 1783 | G<61> | -8741.12 | 381 | 12 | 100 |
| 1784 | G<59> | -8753.11 | 500 | 12 | 100 |
| 1785 | G<57> | -8766.11 | 381 | 12 | 100 |
| 1786 | G<55> | -8778.1 | 500 | 12 | 100 |
| 1787 | G<53> | -8791.1 | 381 | 12 | 100 |
| 1788 | G<51> | -8803.09 | 500 | 12 | 100 |
| 1789 | G<49> | -8816.09 | 381 | 12 | 100 |
| 1790 | G<47> | -8828.08 | 500 | 12 | 100 |
| 1791 | G<45> | -8841.08 | 381 | 12 | 100 |
| 1792 | G<43> G<41> | -8853.07 | 500 | 12 | 100 |
| 1793 | | -8866.07 | 381 | 12 | 100 |
| 1794 | G<39> | -8878.06 | 500 | 12 | 100 |

| # | Pad | Х | Υ | W | Н |
|------|-------|----------|-----|----|-----|
| 1795 | G<37> | -8891.06 | 381 | 12 | 100 |
| 1796 | G<35> | -8903.05 | 500 | 12 | 100 |
| 1797 | G<33> | -8916.05 | 381 | 12 | 100 |
| 1798 | G<31> | -8928.04 | 500 | 12 | 100 |
| 1799 | G<29> | -8941.04 | 381 | 12 | 100 |
| 1800 | G<27> | -8953.03 | 500 | 12 | 100 |
| 1801 | G<25> | -8966.03 | 381 | 12 | 100 |
| 1802 | G<23> | -8978.02 | 500 | 12 | 100 |
| 1803 | G<21> | -8991.02 | 381 | 12 | 100 |
| 1804 | G<19> | -9003.01 | 500 | 12 | 100 |
| 1805 | G<17> | -9016.01 | 381 | 12 | 100 |
| 1806 | G<15> | -9028 | 500 | 12 | 100 |
| 1807 | G<13> | -9041 | 381 | 12 | 100 |
| 1808 | G<11> | -9052.99 | 500 | 12 | 100 |
| 1809 | G<9> | -9065.99 | 381 | 12 | 100 |
| 1810 | G<7> | -9077.98 | 500 | 12 | 100 |
| 1811 | G<5> | -9090.98 | 381 | 12 | 100 |
| 1812 | G<3> | -9102.97 | 500 | 12 | 100 |
| 1813 | G<1> | -9115.97 | 381 | 12 | 100 |
| 1814 | GD<1> | -9127.96 | 500 | 12 | 100 |
| 1815 | DUMMY | -9140.96 | 381 | 12 | 100 |
| 1816 | DUMMY | -9152.95 | 500 | 12 | 100 |
| 1817 | DUMMY | -9165.95 | 381 | 12 | 100 |

All-in-one driver IC w/ Timing Controller


Output Pad Location

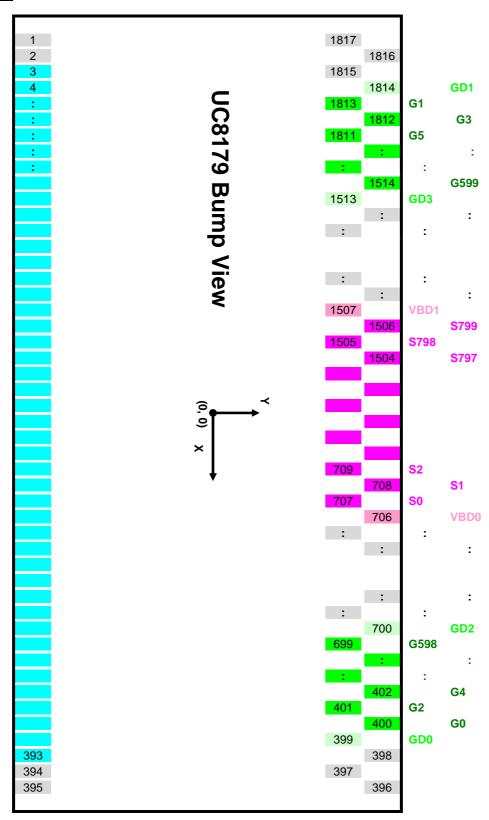

All-in-one driver IC w/ Timing Controller

TRAY INFORMATION

3 Inch Tray

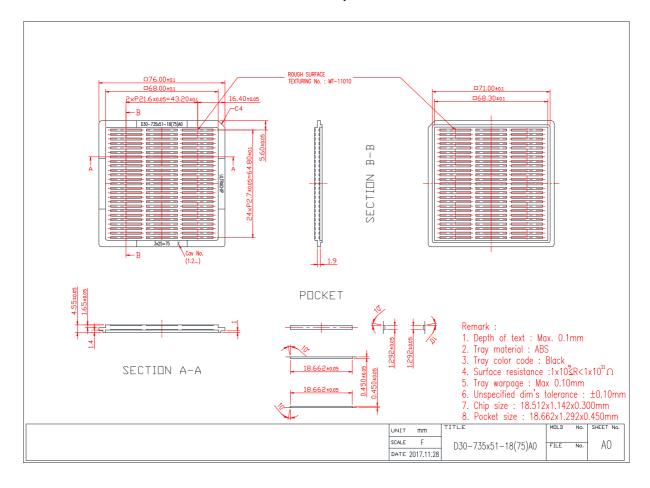

All-in-one driver IC w/ Timing Controller

REVISION HISTORY

| Revision | Contents | Date |
|----------|---------------|---------------|
| 0.6 | First release | Nov. 25, 2019 |